Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Braun SI9661VI

Braun TexStyle 9 SI9661VI Steam Iron User Manual

Model: SI9661VI

Introduction

The Braun TexStyle 9 SI9661VI is a high-performance steam iron designed to make your ironing tasks easier and more efficient. Equipped with advanced features like FreeGlide 3D technology, iCare temperature control, and the ActiClean descaling system, this iron provides excellent results while protecting your garments.
Please read this manual carefully before using the appliance and keep it for future reference. It contains important information regarding safety, operation, and maintenance.

Important Safety Information

- Always ensure the voltage indicated on the rating plate corresponds to your mains voltage.
- Do not immerse the iron, power cord, or plug in water or other liquids.
- Keep the iron and its cord out of reach of children when it is switched on or cooling down.
- Never leave the iron unattended when it is connected to the mains supply.
- Unplug the iron from the power outlet before filling or emptying the water tank, and after each use.
- Do not operate the iron if it has been dropped, if there are visible signs of damage, or if it is leaking.
- Only use the iron for its intended household purpose.
- The soleplate can become extremely hot. Avoid direct contact with hot surfaces.

Product Overview

Familiarize yourself with the components of your Braun TexStyle 9 SI9661VI steam iron.



Figure 1: Braun TexStyle 9 SI9661VI Steam Iron, top-down view, showcasing its purple and black design with control dials and the FreeGlide 3D soleplate.



Figure 2: Underside view of the Braun TexStyle 9 iron, highlighting the FreeGlide 3D soleplate with its unique curved design and steam vents, along with the precision tip.



Figure 3: Side view of the Braun TexStyle 9 iron, showing the blue ActiClean limescale collector at the rear of the soleplate, designed for easy maintenance.

Key Components:

- **FreeGlide 3D Soleplate:** Uniquely curved soleplate for 360° glide over buttons and pockets.
- **Water Tank:** Transparent tank with 330 ml capacity for steam generation.
- **iCare Technology:** Smart temperature setting for all fabrics, ensuring safe ironing.
- **ActiClean System:** Integrated limescale collector for easy and effective descaling.
- **Precision Tip:** Allows for easy ironing around buttons and collars.
- **Steam Shot Button:** For powerful bursts of steam.
- **Spray Nozzle:** For moistening stubborn creases.

Setup

1. **Unpacking:** Carefully remove the iron from its packaging. Retain the packaging for future storage or transport.
2. **First Use Preparation:** Before first use, remove any protective film or stickers from the soleplate. It is recommended to iron an old piece of fabric for a few minutes to remove any manufacturing residues.
3. **Filling the Water Tank:** Ensure the iron is unplugged. Open the water tank inlet cover. Fill the water tank with tap water up to the 'MAX' mark. Close the inlet cover securely.
4. **Connecting to Power:** Plug the iron into a suitable grounded wall socket.

Operating Instructions

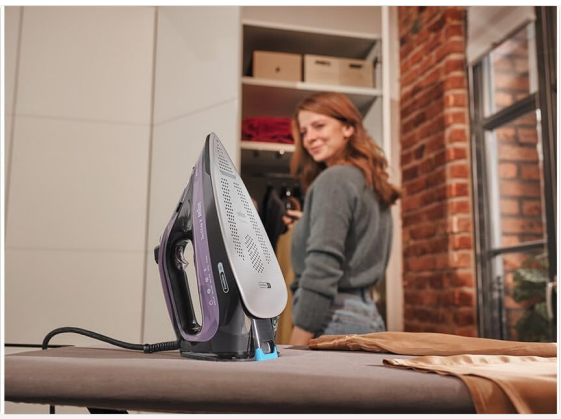


Figure 4: The Braun TexStyle 9 iron resting on an ironing board, ready for use, with a person in the background preparing clothes.



Figure 5: A hand guiding the Braun TexStyle 9 iron over a red shirt on an ironing board, demonstrating its use.

1. Ironing with iCare Technology:

1. The iCare technology automatically sets the optimal temperature for all ironable fabrics. Simply turn the temperature dial to the 'iCare' setting.
2. Wait for the indicator light to turn off, signaling that the iron has reached the correct temperature.
3. Begin ironing. The iron will adjust its heat output to safely and effectively iron various fabric types without manual temperature changes.

2. Steam Functions:

- **Continuous Steam:** For continuous steam, ensure the water tank is filled and the iron is at the correct temperature. Steam will be emitted automatically as you iron.
- **Steam Shot:** For stubborn creases, press the steam shot button. A powerful burst of steam will be released. Wait a few seconds between shots to allow the iron to reheat.
- **Vertical Steaming:** The iron can be used for vertical steaming of hanging garments or curtains. Hold the iron vertically, about 10-20 cm away from the fabric, and press the steam shot button.

3. Spray Function:

- To moisten dry or stubborn creases, press the spray button. Water will be sprayed from the nozzle at the front of the iron.

4. Auto-Off Function:

- For safety and energy saving, the iron automatically switches off after 10 minutes of inactivity in a vertical position, or after 30 seconds if left horizontally on its soleplate or side.

- To restart the iron, simply pick it up or move it.

Maintenance

1. Descaling (ActiClean System):

The unique ActiClean system makes descaling easy and extends the life of your iron. The iron will alert you when descaling is needed.

1. Ensure the iron is unplugged and completely cool.
2. Locate the blue ActiClean limescale collector at the rear of the soleplate (refer to Figure 3).
3. Pull out the collector.
4. Rinse the collector under running water to remove any accumulated limescale.
5. Reinsert the clean collector firmly back into the iron until it clicks into place.

2. Cleaning the Soleplate:

- To clean the soleplate, ensure the iron is unplugged and cool.
- Wipe the soleplate with a damp cloth and a non-abrasive liquid cleaner.
- Do not use abrasive pads, scouring powders, or harsh chemicals as these can damage the soleplate.

3. Storage:

- After use, empty any remaining water from the tank.
- Allow the iron to cool down completely.
- Store the iron in an upright position on its heel rest to protect the soleplate.

Troubleshooting

Problem	Possible Cause	Solution
Iron does not heat up.	Not plugged in; Auto-Off activated; Power outage.	Check power connection; Move the iron to reactivate; Check household fuse.
No steam or insufficient steam.	Water tank empty; Temperature too low; Limescale build-up.	Fill water tank; Set to iCare or higher temperature; Perform ActiClean descaling.
Water drips from soleplate.	Temperature too low for steam; Overfilled water tank.	Allow iron to heat up fully; Do not overfill water tank.
White flakes coming from soleplate.	Limescale particles.	Perform ActiClean descaling. Use distilled water if tap water is very hard.

Specifications



Figure 6: An image displaying key technical specifications of the Braun TexStyle 9 iron, including 3100W power, 250 g/min steam shot, 60 g/min continuous steam, and 2.5m cord length.



Figure 7: An image illustrating the main features of the Braun TexStyle 9 iron: ElxalPlus soleplate, FreeGlide 3D Technology, precision tip, and anti-drip system.



Figure 8: An image showing the Braun TexStyle 9 iron with its water tank capacity of 330ml, a length of 32 cm, and a weight of 1.7 kg.

Feature	Value
Model Number	SI9661VI
Power	3100 Watts
Voltage	230 Volts
Water Tank Capacity	330 ml
Steam Shot	260 g/min (as per product title, image states 250 g/min)
Continuous Steam	60 g/min
Cord Length	2.5 meters
Weight	2 Kilograms (1.7 kg as per image)
Dimensions (L x W x H)	32 x 14 x 0.1 cm (Product dimensions from spec, image states 32cm length)
Soleplate Type	EloxalPlus with FreeGlide 3D Technology
Special Features	iCare Technology, ActiClean System, Anti-Drip Function, Auto-Off

Warranty and Support

Braun products are designed for reliability and durability. This product comes with a 5-year warranty, which includes an additional 3-year extension beyond the standard legal warranty. This offer is valid until June 30, 2025. For full terms and conditions, please refer to Braunhousehold.com.
For technical support, spare parts, or service inquiries, please contact your local Braun service center or visit the official Braun household website for further assistance.

© 2024 Braun. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CJYGMD4F

More documents and user manuals: **https://manuals.plus/**