Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Joyroom PB2

Joyroom Wireless Earbuds User Manual

Model: PB2

Your guide to setting up, operating, and maintaining your Joyroom Wireless Earbuds.

Product Overview

The Joyroom PB2 Wireless Earbuds offer a premium audio experience with advanced features designed for convenience and durability. They feature Bluetooth 5.3 for stable connectivity, IPX4 water resistance for active lifestyles, and a comfortable semi-in-ear design.



Image: Joyroom PB2 Wireless Earbuds, white, resting in their open charging case.

Setup

Initial Charging

Before first use, fully charge the earbuds and the charging case. Connect the provided USB-C cable to the charging port on the case and a power source. The indicator light on the case will show charging status.



Image: A diagram illustrating the ultra-fast charging capability of the earbuds' case, with a USB-C cable plugged in.

A quick 10-minute charge provides up to one hour of listening time. The 300mAh charging case extends total playtime to an impressive 28 hours.

Pairing with Your Device

1. Ensure the earbuds are in the charging case and the case has power.
2. Open the charging case. The earbuds will automatically enter pairing mode.
3. On your device (smartphone, tablet, etc.), go to Bluetooth settings.
4. Select "Joyroom JPods PB2" from the list of available devices.
5. Once connected, a confirmation sound will play, and the earbuds will be ready for use.



Image: A smartphone displaying its Bluetooth settings, showing a successful connection to 'Joyroom Jpods PB2', with the earbuds and charging case nearby.

The Bluetooth 5.3 version ensures stable transmission and low latency for seamless audio and video synchronization.

Operating Instructions

Touch Controls

The Joyroom PB2 earbuds feature intuitive slanted touch controls to prevent accidental touches during use.



Image: A close-up diagram highlighting the slanted touch control area on the stem of the earbud, indicating its anti-mistouch design.

Action	Control
Play/Pause	Single tap on either earbud
Next Track	Double tap on right earbud
Previous Track	Double tap on left earbud
Answer/End Call	Single tap on either earbud
Reject Call	Press and hold on either earbud
Activate Voice Assistant	Triple tap on either earbud

Audio Quality and Latency

Equipped with a large 13mm speaker, these earbuds deliver high-fidelity audio quality, providing clear and immersive sound with excellent highs and powerful bass.



Image: An abstract illustration of a 13mm dynamic driver, emphasizing high-fidelity audio quality.

The low latency feature ensures perfect audio-video synchronization, enhancing gaming and video streaming experiences.



Image: A person comfortably seated, playing a mobile game while wearing the earbuds, illustrating the low latency feature where picture and sound are in sync.

Maintenance

Cleaning and Storage

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Avoid using abrasive materials or harsh chemicals.
- Store the earbuds in their charging case when not in use to protect them and keep them charged.

Water Resistance (IPX4)

The Joyroom PB2 earbuds are IPX4 water-resistant, meaning they are protected against splashing water from any

direction. This makes them suitable for workouts and outdoor activities, as they can withstand rain and sweat.



Image: The earbuds shown with water droplets on them, illustrating their IPX4 waterproof rating and ability to withstand rain and sweat.

Note: IPX4 rating does not mean they are fully waterproof or suitable for submersion in water. Avoid exposing them to strong jets of water or prolonged immersion.

Troubleshooting

- **Earbuds not pairing:** Ensure both earbuds are in the case, close the lid, wait a few seconds, then open it again to re-enter pairing mode. Check your device's Bluetooth settings and try reconnecting.
- **Only one earbud working:** Place both earbuds back into the charging case, close the lid, and then open it again. This often resets the connection.
- **No sound:** Check the volume level on your connected device. Ensure the earbuds are properly paired and selected

as the audio output.

- **Charging issues:** Ensure the charging cable is securely connected to both the case and the power source. Try a different cable or power adapter if necessary.
- **Uncomfortable fit:** The earbuds are designed with a comfortable semi-in-ear style, weighing only 3 grams each, ensuring comfortable and long-lasting wear. Adjust their position slightly in your ear for optimal comfort.



Image: A woman wearing the earbuds, with a serene expression, highlighting the long-lasting comfort provided by their ergonomic half in-ear design.

Specifications

Feature	Detail

Feature	Detail
Brand Name	Joyroom
Model Name	JR (PB2)
Connectivity Technology	Wireless (Bluetooth 5.3)
Ear Placement	In-Ear
Headphones Form Factor	In-Ear
Headphone Jack	No Jack
Color	White
Water Resistance Rating	IPX4
Total Playtime	Up to 28 hours (with charging case)
Earbud Weight	3 grams (each)
Speaker Size	13mm
Included Components	Cable, User Manual
Age Range Description	Adult
Package Dimensions	16.4 x 9.8 x 3.2 cm
Package Weight	90 grams
Manufacturer	Schenzen nito power
ASIN	B0CKLQZSFP
First Available Date	November 28, 2023

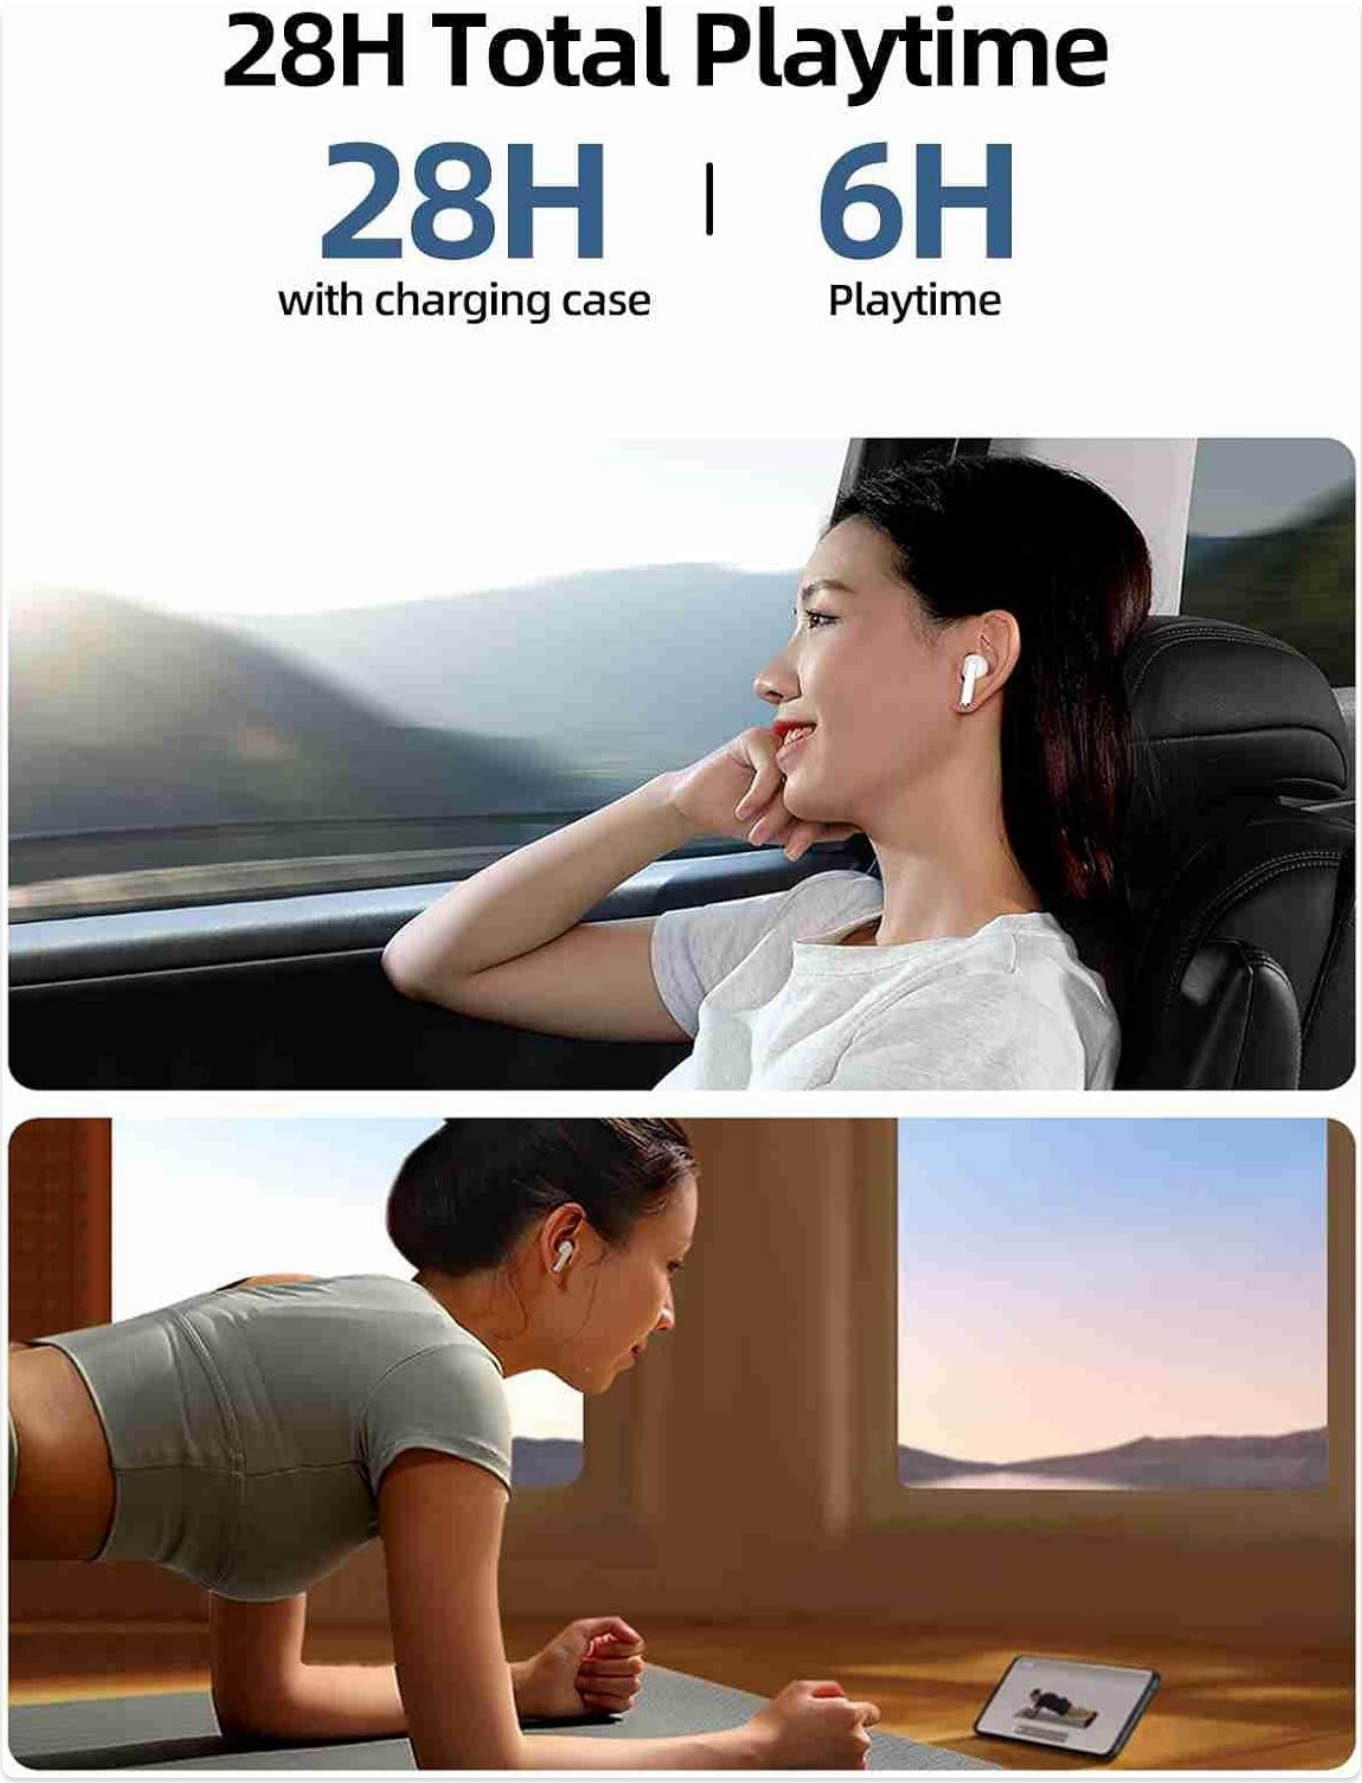


Image: A visual representation of the battery life, indicating 28 hours of total playtime with the charging case and 6 hours of playtime for the earbuds alone.

Warranty and Support

For warranty information and customer support, please refer to the documentation included in your product packaging or visit the official Joyroom website. Keep your purchase receipt for warranty claims.

© 2023 Joyroom. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CKLQZSFP

More documents and user manuals: **https://manuals.plus/**