Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Joyroom JR-PF011

Joyroom JR-PF011 2.5D Knight Extreme Series Tempered Film User Manual

Model: JR-PF011

1. Introduction

This user manual provides detailed instructions for the installation, use, and maintenance of your Joyroom JR-PF011 2.5D Knight Extreme Series Tempered Film. This high-quality screen protector is designed to offer superior protection for your iPhone 11 screen against impacts, scratches, and fingerprints, while maintaining optical clarity.

2. Package Contents

Please verify that all items are present in the package:

- 1 x Joyroom JR-PF011 2.5D Knight Extreme Series Tempered Film for iPhone 11, Clear
- (Additional cleaning accessories, if included, e.g., alcohol wipe, microfiber cloth, dust removal sticker)

Note: Specific cleaning accessories may vary by package.

3. Features

- **Extreme Impact Protection:** Designed to absorb and disperse impact energy, protecting your screen from damage during falls.
- **Scratch and Fingerprint Resistance:** Highly resistant to daily scratches and smudges, keeping your screen clear.
- **2.5D Curved Edge Design:** Features a black frame that blends seamlessly with your device, offering both protection and a sleek aesthetic.
- **High Transparency:** Maintains the original clarity and touch sensitivity of your iPhone 11 display.
- **11H Hardness:** Provides robust defense against sharp objects.

4. Installation Guide

Follow these steps carefully for optimal installation. A clean, dust-free environment is recommended.

1. ### 4.1 Prepare Your Workspace

Ensure your hands are clean and the installation area is well-lit and free of dust. Turn off your iPhone 11.

2. **4.2 Clean the Screen**

   Using the provided alcohol wipe, thoroughly clean the iPhone 11 screen to remove all dirt, oil, and fingerprints. Follow with the microfiber cloth to dry and polish the screen until it is spotless.



Image: A clean iPhone screen, showing its pristine surface before protector application.

   Use the dust removal sticker to dab any remaining dust particles from the screen. Ensure no dust specks are visible.

3. **4.3 Align the Screen Protector**

   Carefully peel off the protective film from the adhesive side of the Joyroom tempered film. Hold the screen protector by its edges, avoiding touching the adhesive surface.

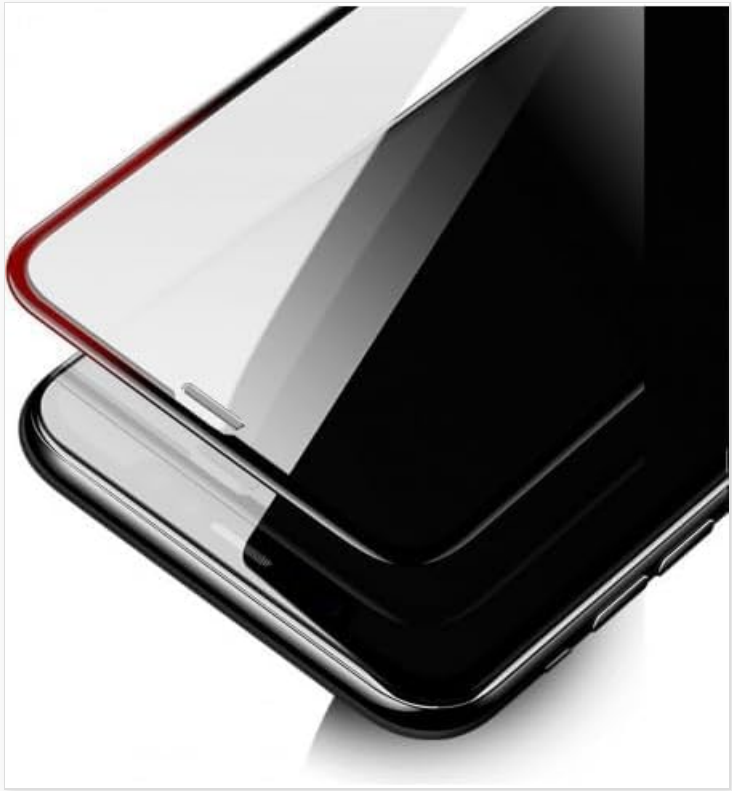

Image: The screen protector being carefully positioned over the iPhone screen, ensuring proper alignment with the speaker, camera, and edges.

Align the screen protector with the top edge of your iPhone 11, ensuring the cutouts for the speaker and camera are perfectly matched. Slowly lower the protector onto the screen.

4. ### 4.4 Apply and Remove Bubbles

   Once the protector touches the screen, it will begin to adhere automatically. If air bubbles appear, gently push them towards the edges of the screen using a soft cloth or a squeegee (if provided).



Image: The Joyroom tempered film fully applied to an iPhone, showcasing its precise fit and integrated black frame.

Small bubbles should disappear within 24-48 hours. For stubborn bubbles, gently lift the nearest corner of the protector and re-apply, pushing the bubble out.

5. Operating and Daily Care

Once installed, the Joyroom JR-PF011 tempered film requires minimal special operation. Its primary function is passive protection.

- **Touch Sensitivity:** The protector is designed to maintain the original touch sensitivity of your iPhone screen.
- **Cleaning:** To clean the surface of the screen protector, use a soft, lint-free cloth, preferably microfiber. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics. Avoid harsh chemicals or abrasive materials.
- **Compatibility:** Ensure your phone case is compatible with screen protectors to prevent lifting or damage to the edges.

6. Maintenance

The Joyroom JR-PF011 tempered film is designed for durability and low maintenance. Regular cleaning as described in Section 5 will suffice.

- Avoid placing your phone with sharp objects (keys, coins) in the same pocket or bag to prevent unnecessary stress on the protector.
- If the screen protector becomes cracked or severely scratched, it has absorbed an impact that would have otherwise damaged your phone screen. It is recommended to replace it immediately to maintain optimal protection.

7. Troubleshooting

Problem	Possible Cause	Solution
Bubbles after installation	Dust particles or improper application.	Gently push bubbles towards the edge with a soft cloth. For stubborn bubbles, carefully lift the nearest corner and re-apply. Small bubbles may disappear within 24-48 hours.
Protector not adhering properly at edges	Dust under the edge, or case interference.	Carefully lift the edge, clean any dust, and re-apply. Ensure your phone case does not push against the protector's edges.
Reduced touch sensitivity	Rare, but could be due to improper installation or a faulty protector.	Ensure the protector is fully adhered without air gaps. If the issue persists, contact customer support.

8. Specifications

Attribute	Detail
Model Number	JR-PF011
Material	Tempered Glass
Hardness	11H
Compatible Devices	iPhone 11
Special Features	Scratch Resistant, Impact Protection, Black Frame
Color	Clear
Screen Surface	Glossy
Product Dimensions	21 x 13 x 1.27 cm
Item Weight	160 g

9. Warranty and Support

Your Joyroom JR-PF011 2.5D Knight Extreme Series Tempered Film comes with a**12 Months Warranty** from the date of purchase. This warranty covers manufacturing defects. It does not cover damage caused by misuse, accidents, or normal

wear and tear.

For warranty claims, technical support, or any inquiries, please contact Joyroom customer service through their official website or the retailer where you purchased the product. Please have your proof of purchase and product model number ready.

For more information, visit the official Joyroom website: www.joyroom.com (Example link, actual link may vary).

© 2025 Joyroom. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CLM8DB8G

More documents and user manuals: **https://manuals.plus/**