**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



**Braun 7171cc**

# Braun Series 7 7171cc Electric Shaver User Manual

Model: 7171cc

## Introduction

This manual provides essential information for the safe and effective use of your Braun Series 7 7171cc electric shaver. Please read all instructions carefully before first use and retain for future reference.

### Safety Information

Always unplug the shaver and allow it to cool before cleaning. Do not use the shaver while it is charging or near water if it is not specifically designed for wet use while charging. Keep the blades clean and dry to prevent bacterial growth. Exercise caution when using the shaver to avoid cuts, especially on sensitive skin areas. This appliance is suitable for cleaning under running tap water.

## What's in the Box

Your Braun Series 7 7171cc package includes the following components:

- 1x Braun Series 7 Electric Shaver
- 1x SmartCare Center
- 1x Cleaning Brush
- 1x Precision Trimmer Attachment
- 1x Travel Pouch
- 1x Power Cord




Image: The complete contents of the Braun Series 7 7171cc package, showing the shaver, SmartCare Center, precision trimmer, and travel pouch.

## Setup

### Initial Charging

1. Connect the power cord to the shaver or the SmartCare Center.
2. Plug the power cord into an electrical outlet.
3. Allow the shaver to charge fully before its first use. A full charge typically takes about one hour and provides approximately 50 minutes of shaving time. A 5-minute quick charge can provide enough power for one shave.

### Attaching/Detaching Shaver Head and Trimmer

The shaver head and attachments are designed to be clicked on and off. To remove the shaver head for cleaning or to

attach the precision trimmer, gently but firmly pull the head away from the shaver body. To attach, align the attachment with the shaver body and push until it clicks into place.

## Operating the Shaver

### Shaving Modes

The Braun Series 7 7171cc offers three distinct shaving modes to suit your preference and skin sensitivity:

- **Turbo Mode:** Provides an extra fast shave, ideal for quick grooming.
- **Gentle Mode:** Offers a softer shave, suitable for sensitive skin.
- **Standard Mode:** Delivers a balanced shave for everyday use.

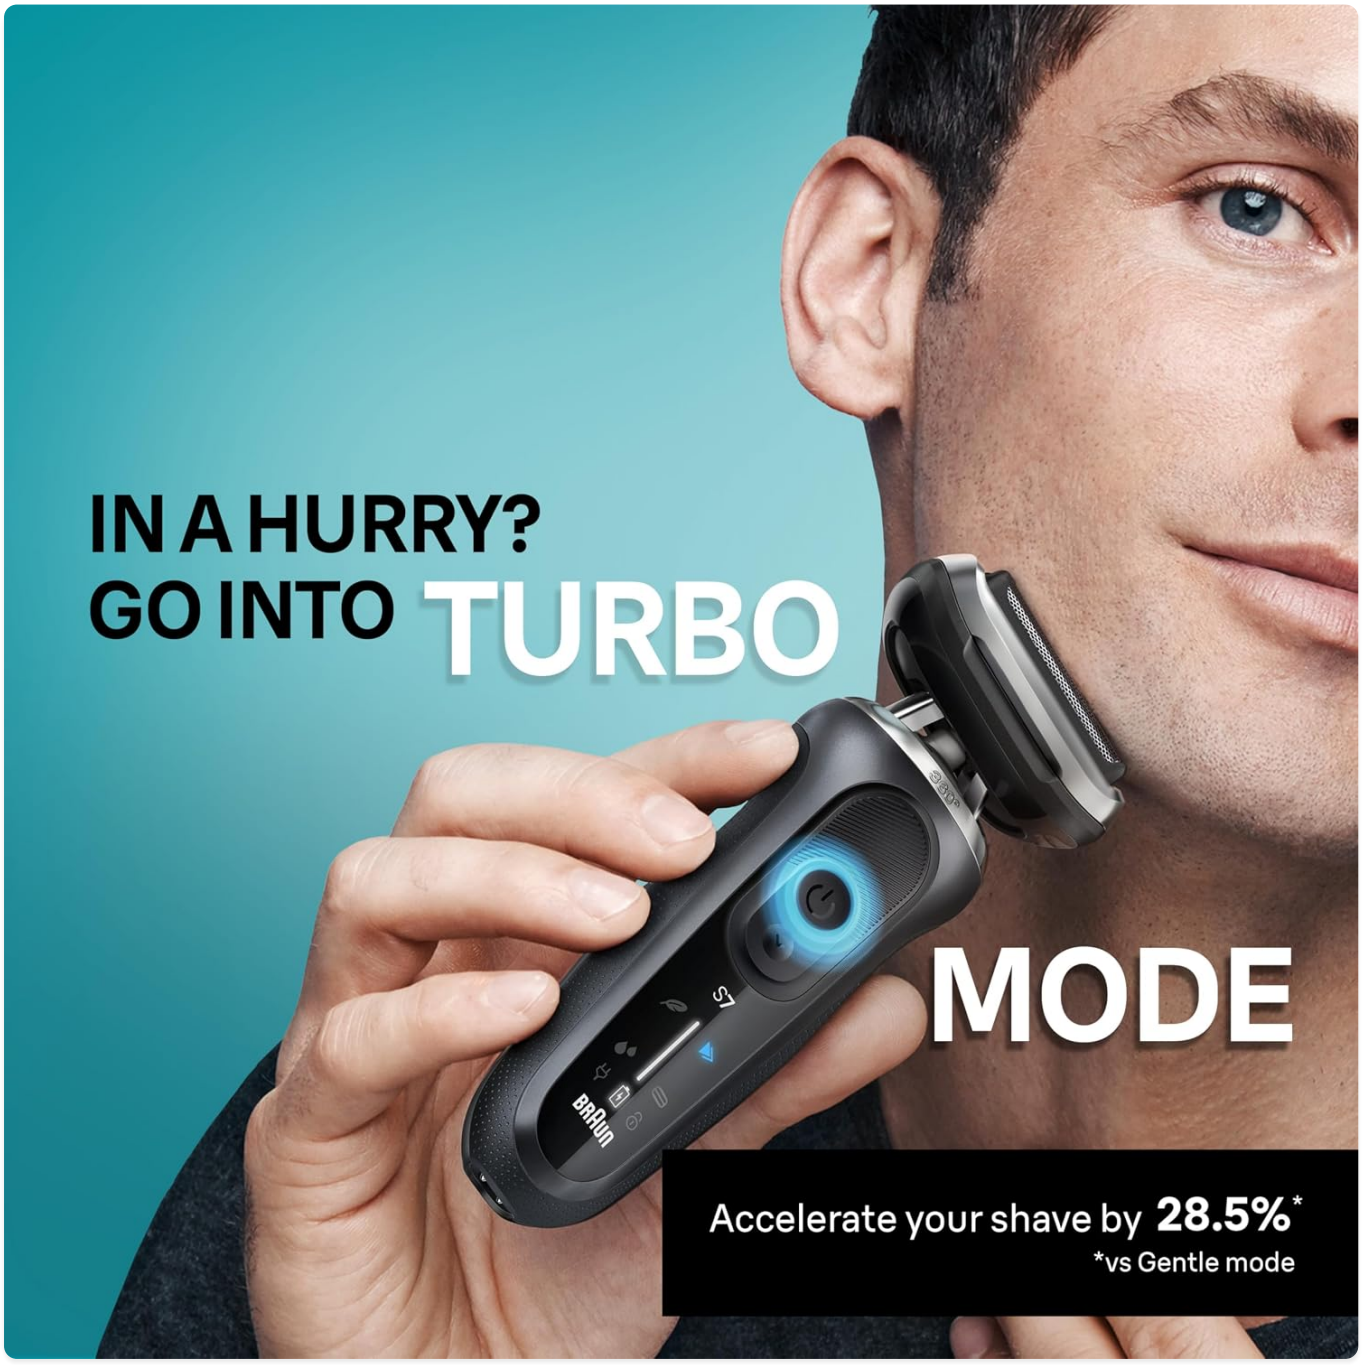


Image: A user demonstrating the Turbo mode on the Braun Series 7 7171cc shaver for an accelerated shave.




Image: A visual summary of the shaver's features, including the three shave modes, flexible blades, 100% waterproof design, and 60-minute battery runtime.

## Wet & Dry Shaving

The Braun Series 7 7171cc is 100% waterproof, allowing for both wet and dry shaving. You can use it with shaving foam or gel for a refreshing experience, or dry for convenience.

## 360° Flex Head and AutoSense Technology

The shaver features a floating 360° Flex Head that adapts to your facial contours, ensuring a close shave even in difficult areas. AutoSense technology automatically adjusts the shaver's power to your beard density, providing an efficient and comfortable shave.




Image: A detailed view of the 360° Flex Head of the Braun Series 7 7171cc, highlighting its flexible blades.




Image: A user demonstrating the Braun Series 7 7171cc in action, showcasing how AutoSense technology adapts to beard density for an optimal shave.

## Using the Precision Trimmer

The included precision trimmer attachment can be used for detailing sideburns, moustaches, or creating precise beard lines. Simply remove the shaver head and attach the precision trimmer. This shaver is compatible with various EasyClick attachments for versatile grooming.




Image: A user utilizing the precision trimmer attachment on the Braun Series 7 7171cc for detailed grooming.

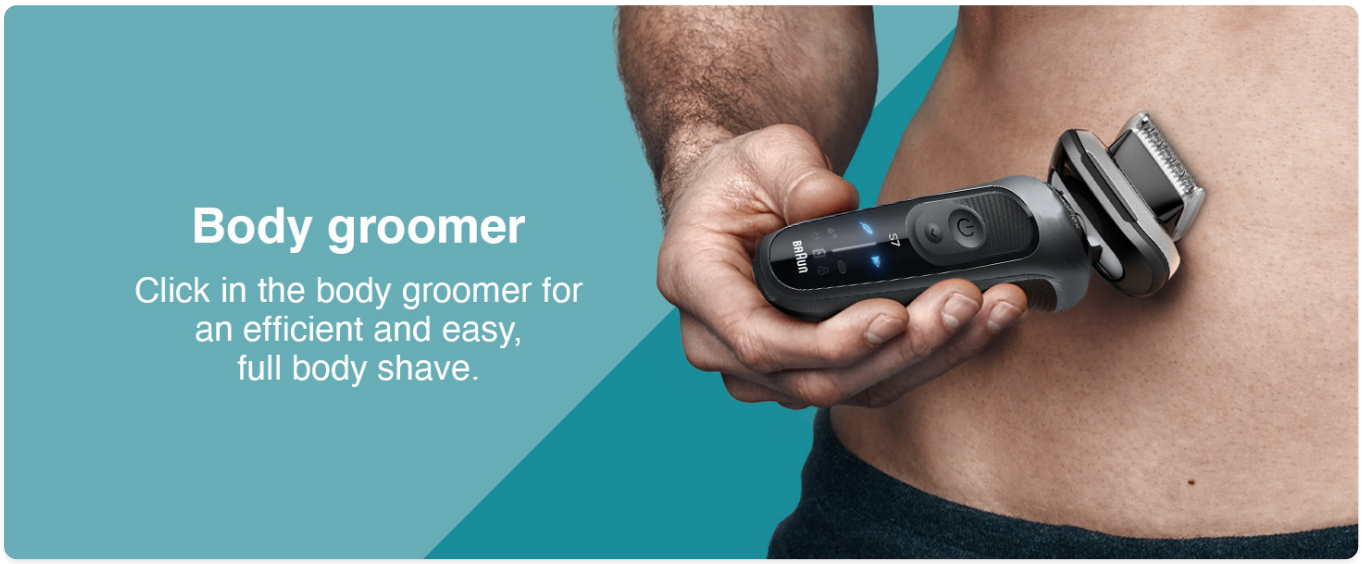


Image: A user demonstrating the beard trimmer attachment for styling and trimming facial hair.

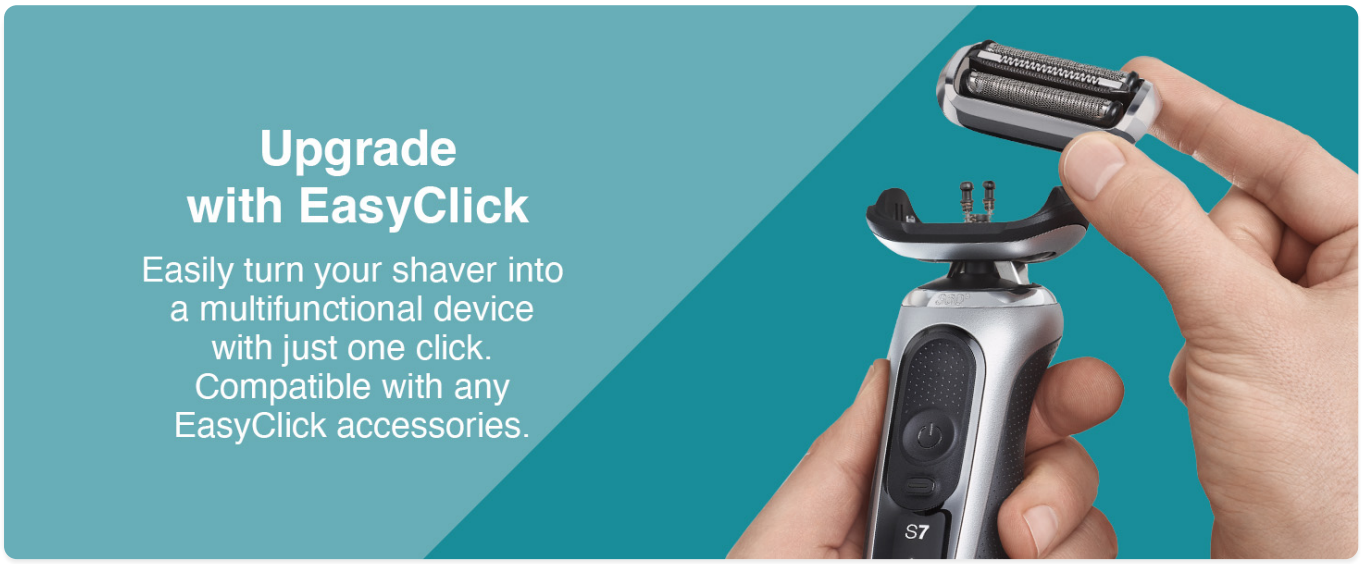


Image: A user demonstrating the body groomer attachment for full body shaving.

### Locking the Shaver

To prevent accidental activation, the shaver can be locked by holding down the power button for 3 seconds. Unlock it by holding the power button for another 3 seconds.

## Maintenance

### Cleaning with SmartCare Center

The 4-in-1 SmartCare Center hygienically cleans, charges, lubricates, and dries your shaver, optimizing blade performance and extending its lifetime. Place the shaver into the SmartCare Center. When the button on the vertical arm is pressed, it initiates a cleaning and charging cycle. The cleaning cycle takes less than 3 minutes and uses alcohol-based cleaning cartridges. The SmartCare Center indicates when the cleaning solution needs changing.




Image: The Braun 4-in-1 SmartCare Center in operation, illustrating its cleaning and charging functions.

## Manual Cleaning

For manual cleaning, remove the shaver head and rinse it under running water. Use the included cleaning brush to remove any stubborn hair particles. Ensure the shaver head is dry before reattaching.

## Replacing Shaver Head

For optimal shaving performance, it is recommended to replace the shaver head (cassette) every 18 months. The shaver's display will show a head-shaped icon to indicate when replacement is due.




Image: A close-up of the shaver head, which should be replaced periodically.



Image: Packaging for the Braun Series 7 74S replacement shaver head.

## Troubleshooting

### Shaver Not Turning On

- Ensure the shaver is charged. The display shows a vertical line indicating the charge level; a shorter line means lower charge.
- Check if the shaver is locked. Hold the power button for 3 seconds to unlock it.

### Difficulty Removing Shaver Head

The shaver head is designed to be firmly attached. To remove it, apply gentle but firm pressure to pull it straight off. There are no release buttons; a fingernail might be needed to create a small gap for leverage.

### Poor Shaving Performance

- Ensure the shaver head is clean and free of hair debris.
- Consider replacing the shaver head if it has been in use for over 18 months.
- Ensure the shaver is fully charged for optimal power.

## Specifications

| | |
|---|---|
| **Product Dimensions** | 6.18 x 6.18 x 9.92 inches |
| **Item Weight** | 2.36 Pounds |
| **Model Number** | 72-G7200cc |
| **Batteries** | 1 Lithium Ion battery (included) |
| **UPC** | 069055139318 |
| **Brand** | Braun |
| **Recommended Uses** | Beard shaving |
| **Special Features** | Rechargeable, Waterproof |
| **Power Source** | Battery Powered |

## Warranty and Support

### Quality Guarantee

The Braun Series 7 7171cc electric shaver is designed and manufactured in Germany, ensuring high quality and durability.

### Customer Support

For further assistance, product registration, or warranty claims, please visit the official Braun website or contact Braun customer service directly. Refer to the packaging or the official Braun website for specific contact details and warranty terms applicable to your region.

© 2025 Braun. All rights reserved.

## Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

**Open the live page**

**https://manuals.plus/asin/B0CM3Z48N3**

More documents and user manuals: **https://manuals.plus/**