Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Braun XT5000

Braun Body & Face Groomer PRO X XT5000

Instruction Manual

Introduction

The Braun Body & Face Groomer PRO X XT5000 is a versatile grooming device designed for comprehensive hair removal and styling across the entire body, including the face. Engineered with skin safety and comfort in mind, this body shaver minimizes cuts and irritation, providing a smooth and comfortable grooming experience.

It features an advanced 4D blade system with four cutting zones, a dual trimmer blade, and a center shaver for efficient and precise results. The device is waterproof, allowing for convenient use in the shower, and offers approximately 45 minutes of cordless operation on a full charge. With its 360° rubberized grip and five specialized combs, the XT5000 enables effortless styling from head to toe.

Product Overview

The Braun Body & Face Groomer PRO X XT5000 is equipped with innovative features to ensure effective and gentle grooming.

- **Advanced 4D Blade:** Features four specialized cutting zones designed to capture and cut hair efficiently.
- **Dual Trimmer Blade:** Lifts and cuts hair with every stroke for consistent results.
- **Center Shaver:** Provides a comfortable and close shave.
- **5 Combs:** Includes five different comb attachments for varying hair lengths and body areas, suitable for both beard and body grooming.
- **Waterproof Design:** Allows for safe and easy cleaning under running water, and convenient use in the shower.
- **360° Rubberized Grip:** Ensures secure handling even when wet.





Image: Detailed view of the Braun XT5000's 4D blade system and various comb attachments. The image highlights the four cutting zones and the design for comfortable shaving.

Setup

Charging the Device

Before first use, fully charge your Braun Body & Face Groomer PRO X XT5000. Connect the charging cable to the device and plug it into a power outlet. The charging indicator light will show the charging status. A full charge provides approximately 45 minutes of cordless operation.

Attaching Combs

To attach a comb, align the comb with the blade head and gently push until it clicks into place. To remove, pull the comb away from the blade head. Ensure the device is turned off before attaching or removing any accessories.

Operating Instructions

General Grooming

The XT5000 can be used for grooming hair on various parts of the body, including the face, underarms, chest, legs, arms, abdomen, thighs, and delicate zones. It is designed for both trimming hair to a natural length and achieving a close shave.



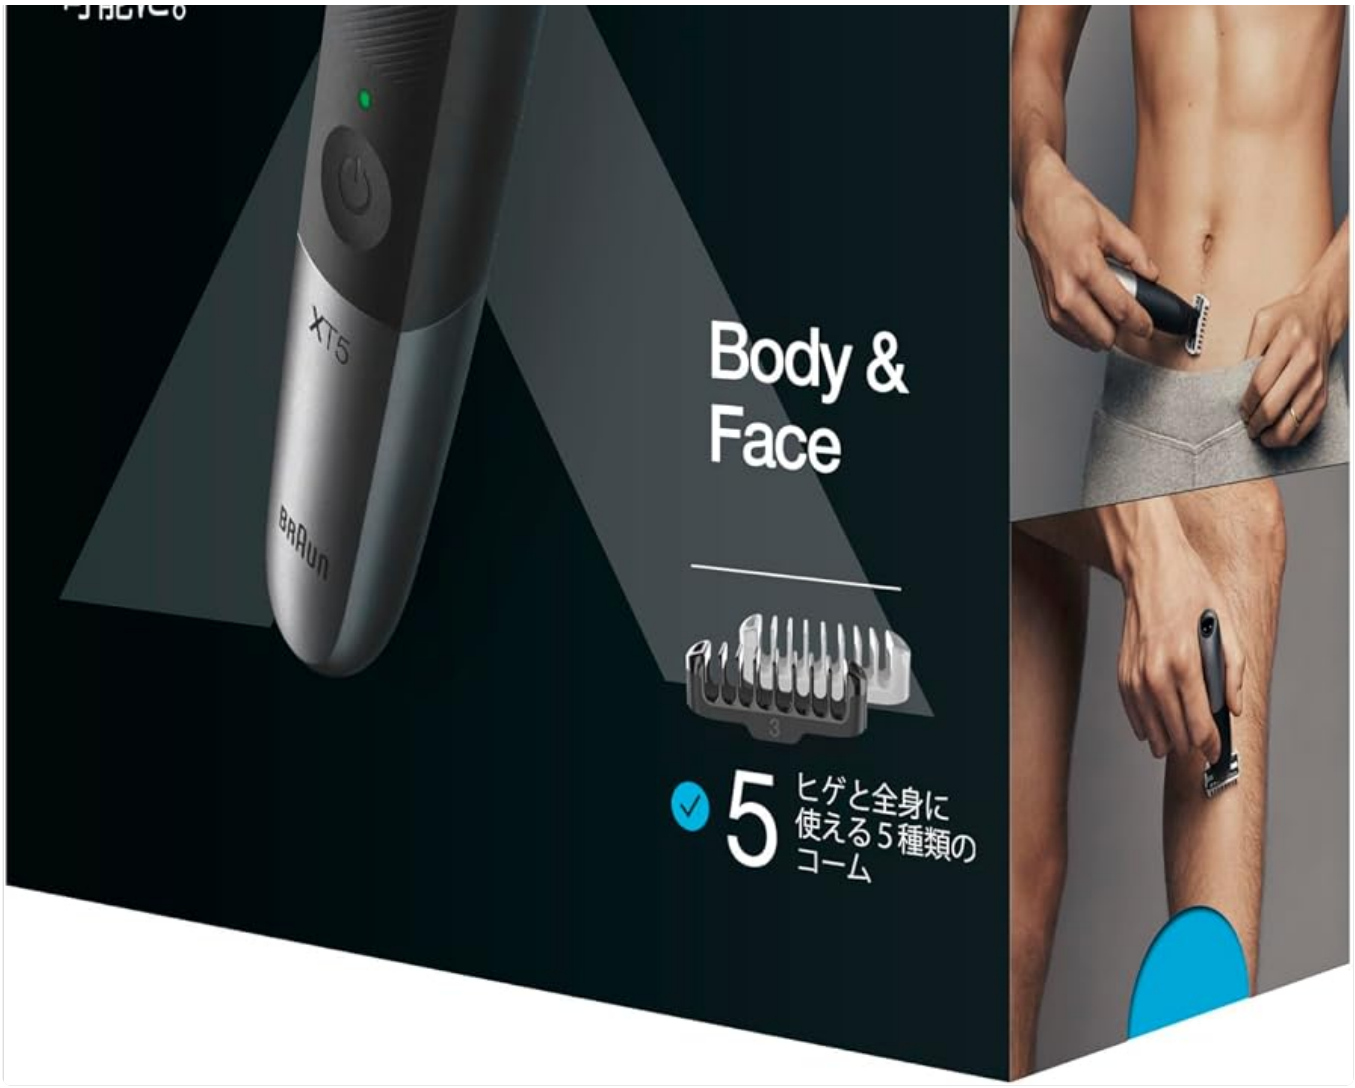

Image: The Braun XT5000 being used for grooming on different areas of the body, demonstrating its versatility for full body and face care.

Wet and Dry Use

The device is fully waterproof, allowing for comfortable and convenient use in both dry conditions and in the shower with foam or gel. Always ensure the charging port is dry before connecting the charger.

Trimming and Shaving Technique

1. **For Trimming:** Select the appropriate comb attachment for your desired hair length. Move the device against the direction of hair growth. The unique blade design lifts hair with each stroke for an even cut.
2. **For Shaving:** For a close shave, remove any comb attachments. Hold the device at a slight angle to your skin and move it gently against the direction of hair growth. The center shaver is designed for comfortable skin contact.

Always ensure your skin is clean before grooming. For sensitive areas, proceed with caution and stretch the skin taut to minimize irritation.

Maintenance

Cleaning the Device

After each use, turn off the device and remove any comb attachments. Rinse the blade head and the device under running water. For a more thorough cleaning, you can use the included cleaning brush to remove any trapped hairs. Allow the device to air dry completely before storing or recharging.

Blade Care

To maintain optimal performance, regularly check the blade for any signs of wear or damage. While the full metal blade is designed for durability, replacement blades are available if needed. Do not use abrasive cleaners or harsh chemicals on the device.

Troubleshooting

If you encounter any issues with your Braun Body & Face Groomer PRO X XT5000, please refer to the following common solutions:

- **Device not turning on:** Ensure the device is fully charged. If the battery is low, connect it to the charger.
- **Reduced performance or pulling hair:** The blade might be dull or clogged with hair. Clean the blade thoroughly or consider replacing it if it's worn out.
- **Charging issues:** Check if the charging cable is securely connected to both the device and the power outlet. Ensure the charging port is dry.

If the problem persists, please contact Braun customer support for further assistance.

Specifications

Feature	Specification
Manufacturer	Procter & Gamble Japan LLC
Model Number	XT5000
Package Dimensions	20.7 x 12.5 x 5.7 cm
Color	Black
Wattage	5W
Other Features	Waterproof
Number of Blades/Cutting Zones	5 (including 4D blade cutting zones)
Battery Type	Nickel-metal hydride
Package Weight	0.33 kg
Battery Use	Yes
Battery Included	Yes

Battery Life	Approx. 45 minutes
Blade Material	Metal
Head Type	Reciprocating

Warranty and Support

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions. For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Braun customer service.

You can find contact information for Braun customer support on the official Braun website or through the retailer where you purchased the product.

For more information, visit the official Braun website:www.braun.com/jp

© 2023 Braun. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CQ3Y22F6

More documents and user manuals: **https://manuals.plus/**