Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

eufy T29E80W1

eufy X10 Pro Omni Replacement Washable Filter Instruction Manual

MODEL: T29E80W1

1. Introduction

This manual provides detailed instructions for the installation, maintenance, and care of your eufy Accessory-2 Replacement Washable Filter, designed specifically for the eufy X10 Pro Omni robot vacuum. Regular replacement and cleaning of the filter are essential for maintaining optimal performance and air quality.

2. Product Overview

The eufy Accessory-2 Replacement Washable Filter is a high-performance filtration component that captures microscopic particles, including dust, pollen, mold, and bacteria as small as 0.3µm. It is designed for easy, tool-free installation and is reusable after proper cleaning.

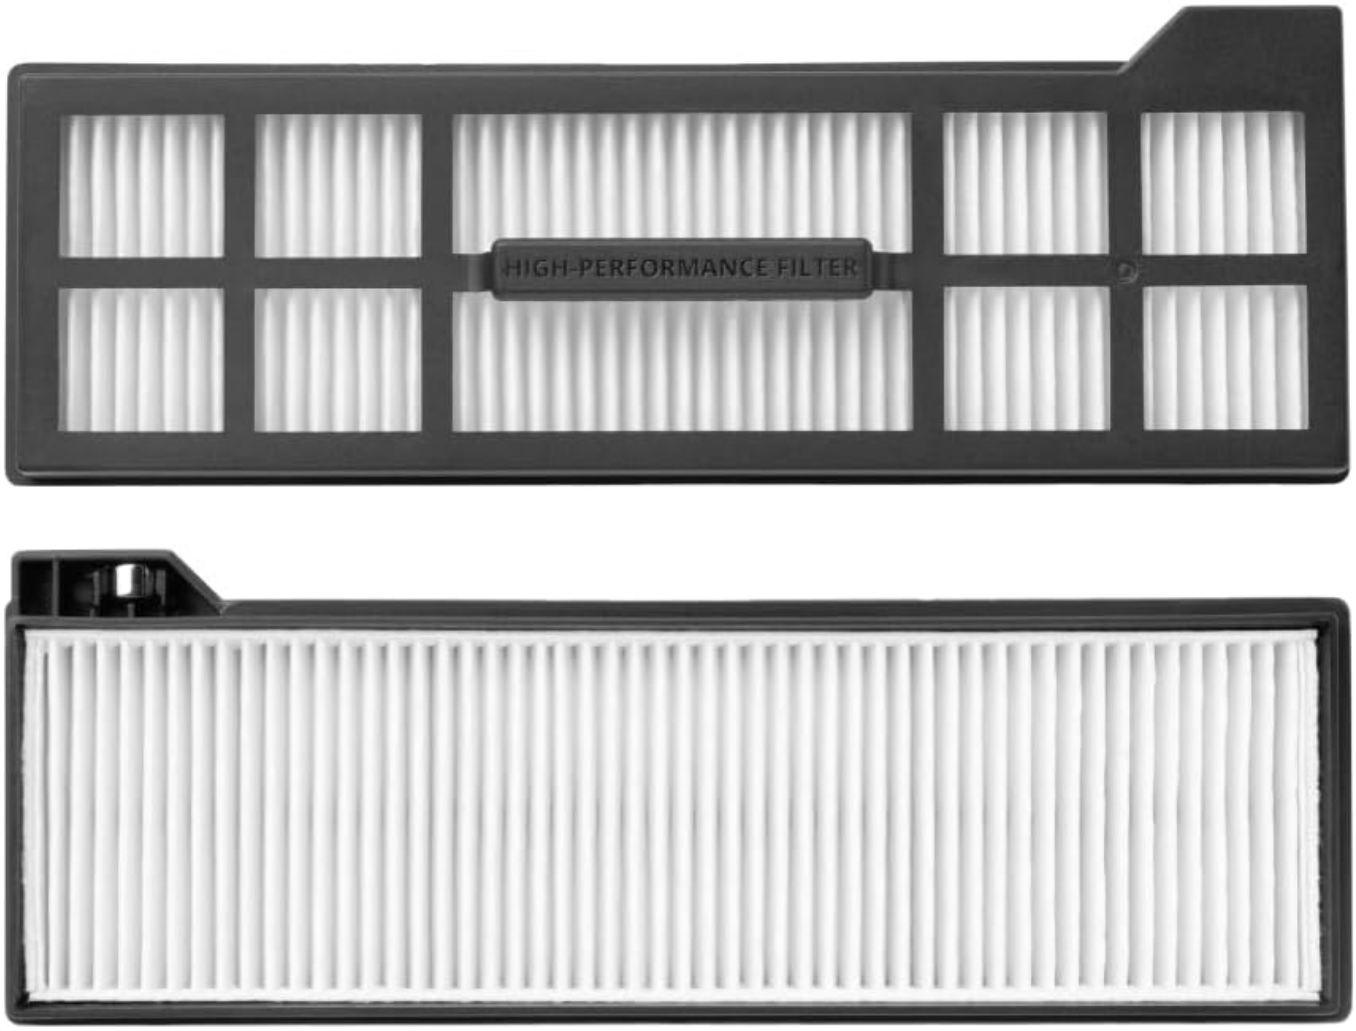


Image: Two eufy X10 Pro Omni replacement filters, showing their design and filtration surface.

Compatibility

This filter is compatible with the eufy X10 Pro Omni robot vacuum cleaner.

Compatible with eufy X10 Pro Omni



- X10 Pro Omni



Image: Visual confirmation of compatibility with the eufy X10 Pro Omni.

3. Installation

Replacing the filter is a simple, tool-free process. Follow these steps:

1. Ensure the eufy X10 Pro Omni robot vacuum is powered off. Hold the power button on the robot until it shuts down.
2. Open the top cover of the robot vacuum to access the dustbin compartment.
3. Remove the dustbin from the robot.
4. Locate the filter compartment on the dustbin. Open the latch to access the filter.
5. Remove the old filter.
6. Insert the new eufy Accessory-2 Replacement Washable Filter into the compartment, ensuring the angled part and handle are oriented correctly (handle facing upwards).
7. Close the filter compartment latch securely.
8. Reinsert the dustbin into the robot vacuum until it clicks into place.
9. Close the top cover of the robot vacuum.

4. Maintenance and Care

Proper maintenance of your filter and other components ensures the longevity and efficiency of your eufy X10 Pro Omni.

Filter Cleaning and Replacement

- **Regular Rinsing:** The filter can be rinsed with water to remove accumulated dust and debris. Gently tap the filter to dislodge dirt before rinsing.
- **Drying:** After rinsing, allow the filter to air dry completely for at least 24 hours before reinserting it into the dustbin. Do not use the filter while it is wet.
- **Replacement Frequency:** It is recommended to replace the filter every 3-6 months, depending on your usage frequency and household environment (e.g., presence of pets).

Easily Washed

Regular rinsing to remove dust is essential for maintaining the filter's effectiveness and extending its usability.



Image: A filter being rinsed under water, demonstrating its washable nature.

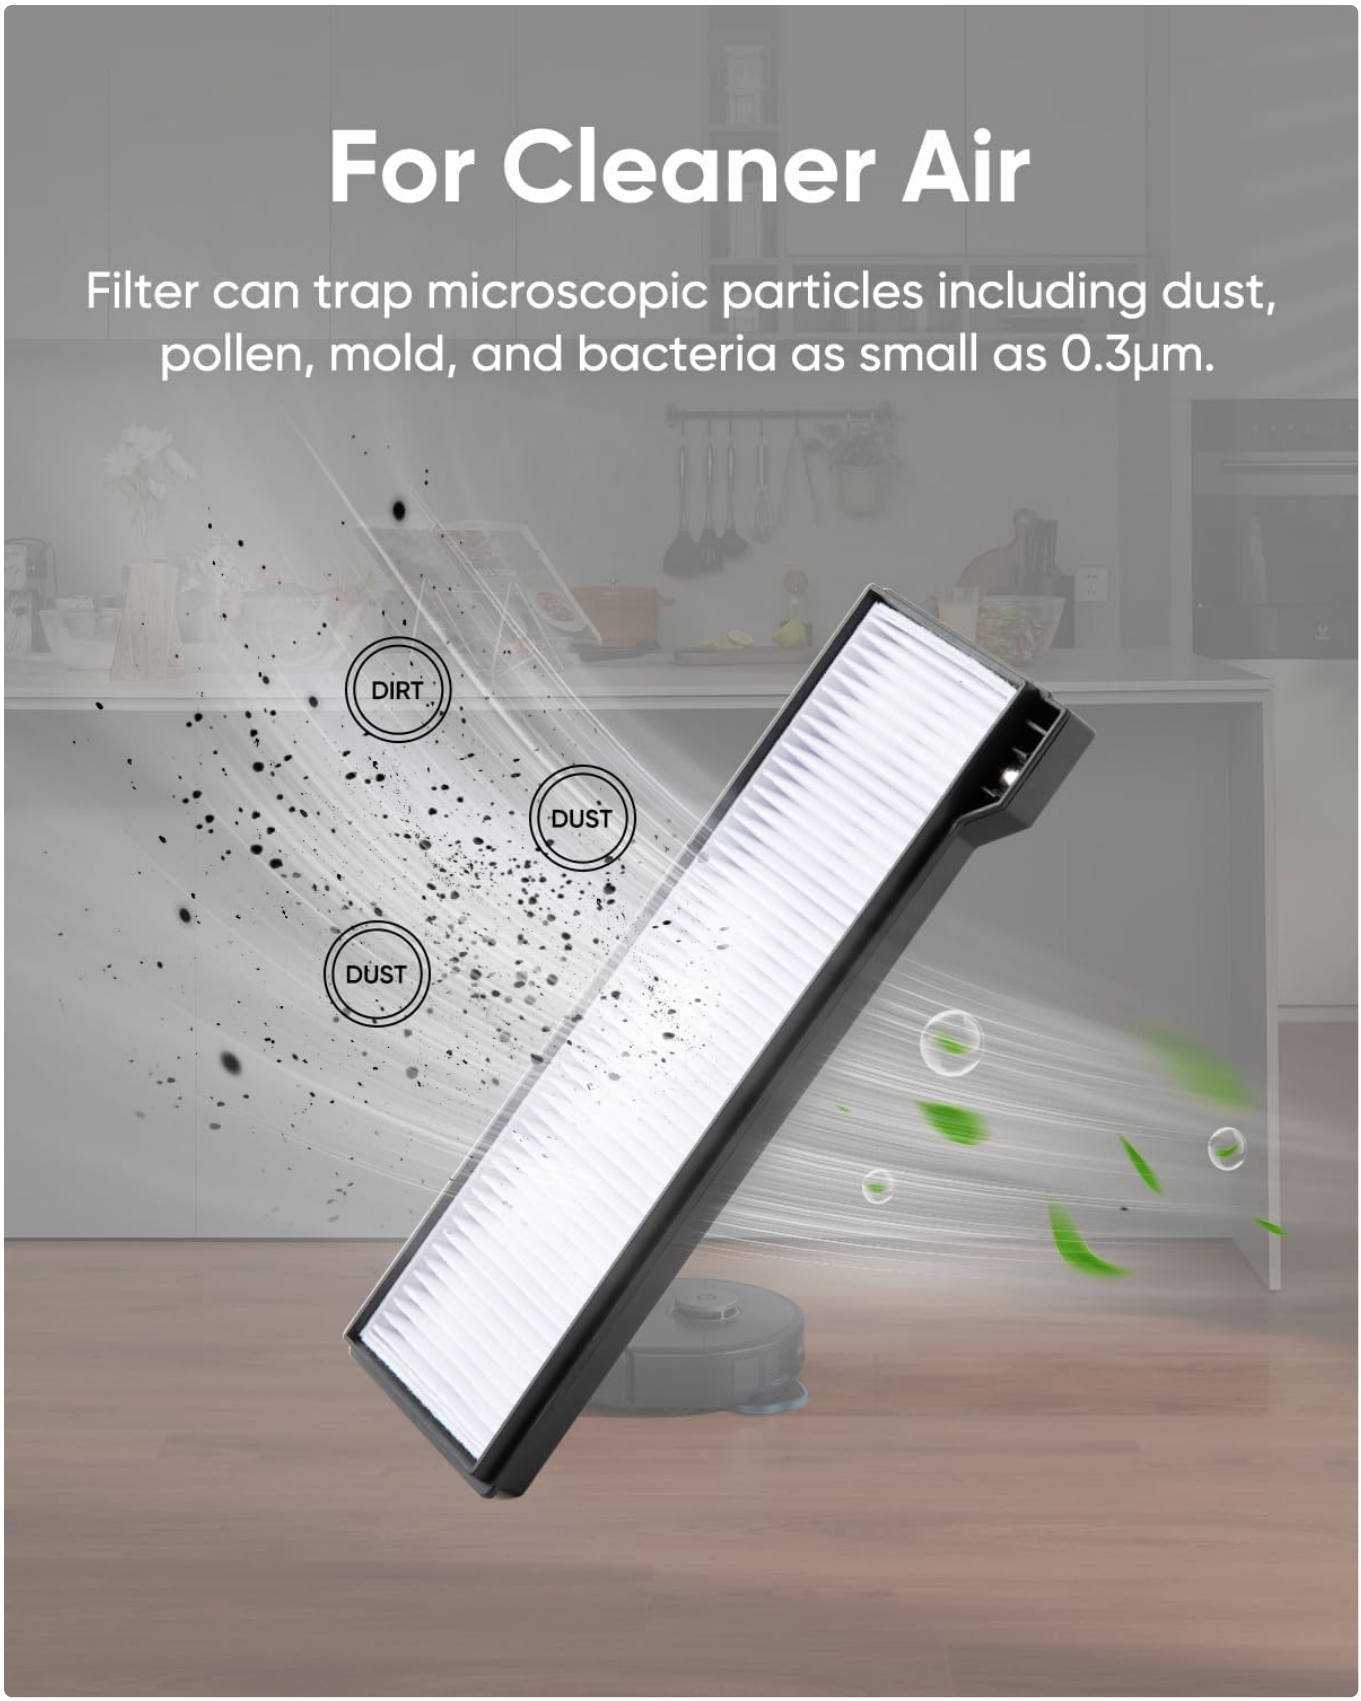


Image: Illustration of the filter's high-performance capability in trapping microscopic particles.

Other Component Maintenance (for X10 Pro Omni)

- **Base Cleaning:** Regularly clean the base of the charging station, especially the area where the robot docks and cleans its mop pads. Remove the removable tray and wash it with soap and water.
- **Front Bumper and Sensors:** Wipe the front bumper and all sensors (including fall-off sensors on the underside) with a clean, dry cloth to ensure clear navigation and obstacle detection. Ensure the bumper moves freely.
- **Side Brushes:** Inspect side brushes for wear or entanglement. Replace them when they become deformed or worn.

(Replacement is tool-free, typically a Phillips head screw).

- **Main Brush Roller:** Remove the main brush roller and clean any hair or debris wrapped around it. Inspect for damage. Replace if necessary. Clean the brush guard as well.
- **Caster Wheel:** Check the caster wheel for hair or debris entanglement and clean as needed.
- **Mop Pads:** Mop pads can be removed (Velcro attachment) and washed in a washing machine. Replace them when they show significant wear or reduced cleaning performance.
- **Dirty Water Tank:** Empty and clean the dirty water tank regularly to prevent odors and bacterial growth. Use soap and scrub the interior.
- **Dust Bag:** Replace the dust bag in the Omni Station promptly when full.

5. Troubleshooting and FAQs

Common questions and solutions related to the eufy X10 Pro Omni and its accessories.

Q: How can I optimize AI recognition and obstacle avoidance?
A: The X10 Pro Omni features advanced AI that recognizes over 100 object types. To ensure optimal cleaning performance and prevent the robot from getting stuck or entangled, follow these steps:

- **Tidy Up Before Cleaning:** Pick up small items and clear loose objects from the floor before starting a cleaning cycle. This helps prevent interruptions and ensures thorough cleaning.
- **Organize Cables and Wires:** Secure or elevate loose cables or wires to aid the robot's navigation and prevent damage.
- **Remove Low-Profile Obstacles:** Straighten or temporarily remove flat items on the floor, such as rugs with tassels or floor mats with fringes. eufy continuously enhances the X10 Pro Omni's recognition capabilities through increased computing power, advanced deep learning model architectures, and continuous AI training. Keeping the firmware updated will ensure the best obstacle-avoidance experience.

Q: How do I enhance X10 Pro Omni's mopping performance?
A: For larger homes that haven't been deep cleaned recently, the first time you use X10 Pro Omni may result in visible mopping streaks as it dislodges thick dust from under furniture. This is normal and will be reduced by repeated use. To optimize cleaning effectiveness:

- Use the vacuum-only mode before mopping to clear away dust and hair.
- Run X10 Pro Omni multiple times to achieve a cleaner home.
- Increase the water level setting in the eufy Clean app for more effective mopping.
- Replace the mop cloths every 3 months to maintain optimal results.

Q: How can I reduce hair entanglement in the main brush?
A: To maximize the X10 Pro Omni's performance and minimize hair buildup, follow these steps:

- **Adjust Suction Power and Dust Collection Frequency:** Use Turbo/Max suction mode and increase the dust collection frequency (daily or every other cleaning cycle) to capture hair before it tangles.
- **Clean the Main Brush Weekly (or After Heavy Use):**Remove the main brush and clear hair from both ends to prevent tangling. Use the included cleaning tool or scissors to cut and remove tightly wound hair.
- **Clean the Filter Regularly:** Clean the filter every two weeks (weekly for homes with pets or long-haired residents). A clogged filter reduces suction power, forcing the brush to work harder and accumulate more hair. Tap the filter to remove dust. If it gets damp, let it dry for 24 hours before reinserting.

- **To maintain optimal airflow, replace the filter every 3–6 months and keep the dustbag under 80 percent full.**

Q: How do I prevent X10 Pro Omni from getting stuck under furniture?
A: To prevent X10 Pro Omni getting stuck, ensure that there's a minimum clearance of 12 cm under furniture. If the furniture is lower than this, set up a No-Go Zone in the app so that X10 Pro Omni avoids it. Also, keep the robot's firmware and app updated to the latest version for the best navigation results.

6. Specifications

Feature	Detail
Brand Name	eufy
Model Info	T29E8
Item Weight	1.12 ounces
Product Dimensions	5.67 x 2.01 x 0.63 inches
Item Model Number	T29E8
Part Number	T29E80W1
Compatible Device	Robot Vacuum models X10 Pro Omni
Material Type	Foam
Reusability	Reusable
Number of Pieces	1

7. Warranty and Support

Q: What coverage and support options are available for the X10 Pro Omni?
A: X10 Pro Omni comes with:

- **12-Month Comprehensive Protection Plan:** Full coverage for manufacturing defects under stated terms.
- **Lifetime Technical Support:** Assistance via email, chat, or phone.

Q: What should I do if I encounter issues with my device?
A: Contact the official eufy after-sales service promptly. To assist you efficiently, provide:

- Order Number or Proof of Purchase to confirm service coverage.
- The device serial number is at the bottom of your X10 Pro Omni.
- Description of the issue, including any error messages and steps taken.
- Photos or Screenshots (if applicable) to help diagnose the problem.

Q: What self-help resources are available?

A: eufy provides 24/7 support tools, including:

- Video Tutorials: Step-by-step setup and feature guides.
- Knowledge Base: FAQs, troubleshooting articles, and user manuals.
- Quick Start Guide: Included in the packaging.

© 2024 eufy. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CQ7L8B6F

More documents and user manuals: **https://manuals.plus/**