Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Sweetcrispy SW21GY

Sweetcrispy Recliner Chair (Model SW21GY) - Instruction Manual

Brand: Sweetcrispy | Model: SW21GY

Product Overview

The Sweetcrispy Recliner Chair is designed for comfort and relaxation, featuring an adjustable reclining mechanism and a built-in massage function. This compact chair is suitable for various indoor settings, including living rooms, bedrooms, and home theaters. It offers lumbar support and a padded seat for extended comfort.



Figure 1: Overall view of the Sweetcrispy Recliner Chair in Light Grey.

Setup and Assembly

Assembly of your Sweetcrispy Recliner Chair is designed to be quick and straightforward, typically taking less than 5 minutes. No special tools are required.

Assembly Steps:

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure you have the backrest, main frame (seat and armrests), four plastic legs, and the remote control with its power adapter.
2. **Attach Backrest:** Align the metal brackets on the backrest with the corresponding slots on the main frame. Push down firmly until the backrest clicks securely into place.
3. **Install Legs:** Turn the main frame upside down. Screw the four plastic legs into the designated threaded holes at each corner of the chair's base. Ensure they are tightened securely.
4. **Connect Power:** Locate the power cable from the chair's frame and connect it to the remote control cable. Then,

connect the power adapter to the remote control cable and plug the adapter into a standard electrical outlet.



Figure 2: Product dimensions for planning placement. Dimensions: 29.2"D x 25.2"W x 38.7"H.

Operating Instructions

Reclining Function:

The recliner chair features a manual reclining mechanism. To recline, simply lean back against the backrest and apply gentle pressure. The footrest will extend, and the backrest will adjust to your desired angle between 90 and 160 degrees. To return to the upright position, push down on the footrest with your legs and use your body weight to push the backrest forward.



Figure 3: The chair offers multiple reclining angles from 90 to 160 degrees for reading, watching TV, or napping.

Massage Function:

The chair is equipped with an 8-mode massage function with 2 vibration choices and adjustable intensity, primarily targeting the lumbar area. The default massage timer is set to 15 minutes.

1. **Power On/Off:** Press the power button on the remote control to activate or deactivate the massage function.
2. **Select Mode:** Use the 'Mode Selection' buttons on the remote to cycle through the 8 available massage modes.
3. **Adjust Intensity:** Use the '+' and '-' buttons to increase or decrease the massage intensity.
4. **Set Timer:** The default timer is 15 minutes. You can adjust it to 30 minutes using the timer button. The massage will automatically turn off after the set duration.



Figure 4: Remote control for operating the 8 massage modes, intensity, and timer settings.



Figure 5: The massage function primarily targets the lumbar area of the backrest.

Care and Maintenance

Proper care will ensure the longevity and appearance of your recliner chair.

Cleaning the Fabric:

- The fabric is skin-friendly and easily cleaned.
- For general cleaning, gently wipe the surface with a soft, damp cloth.
- For spills or stains, use a mild fabric cleaner and follow the product instructions. Test on an inconspicuous area first.
- Avoid using harsh chemicals or abrasive cleaners, as these can damage the fabric.
- Vacuum regularly using a soft brush attachment to remove dust and debris.

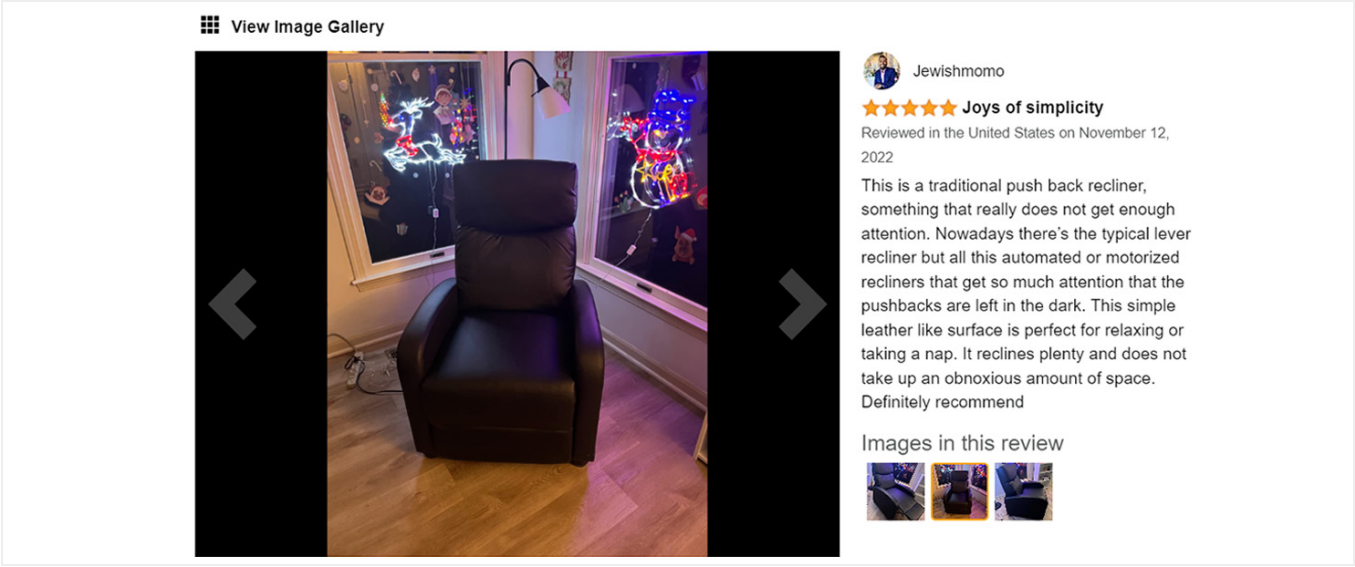


Figure 6: Gently wipe the fabric with a soft, damp cloth for routine cleaning.

General Care:

- Avoid direct sunlight exposure to prevent fading.
- Keep the chair away from heat sources to prevent material damage.
- Periodically check all connections and fasteners to ensure they are tight.

Troubleshooting

If you encounter any issues with your recliner chair, please refer to the following common solutions:

Problem	Possible Cause	Solution
Chair does not recline smoothly.	Mechanism obstruction or loose connection.	Check for any objects obstructing the reclining mechanism. Ensure all assembly connections are secure.
Massage function not working.	Power connection issue or remote control malfunction.	Verify the power adapter is securely plugged into the wall outlet and the chair. Check the connection between the remote control and the chair. Ensure the power button on the remote is pressed.
Unstable chair.	Loose legs or uneven floor.	Tighten all four plastic legs. Ensure the chair is placed on a flat, even surface.

If problems persist after attempting these solutions, please contact customer support.

Specifications

Feature	Detail
Brand	Sweetcrispy
Model Number	SW21GY
Color	Light Grey
Material	Metal frame, Fabric upholstery, Sponge fill
Product Dimensions (D x W x H)	29.2" x 25.2" x 38.7"
Item Weight	50 Pounds
Maximum Weight Recommendation	275 Pounds
Reclining Positions	Adjustable from 90-160 degrees (3 main positions)
Massage Modes	8 modes, 2 vibration choices, adjustable intensity
Massage Timer	15/30 minutes (default 15 minutes)
UPC	711696809128

Warranty and Support

For any product-related issues, questions, or warranty claims, please contact Sweetcrispy customer service. Refer to your purchase documentation for specific warranty details and contact information.
You can typically find support contact details on the manufacturer's website or through your retailer's customer service portal.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CQM1P1PW

More documents and user manuals: **https://manuals.plus/**