Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

AUGELRE B0CQMDJ9SS

User Manual for AUGELRE Gaming Neon Sign

Model: B0CQMDJ9SS | Brand: AUGELRE

Introduction

Thank you for choosing the AUGELRE Gaming Neon Sign. This dimmable LED sign is designed to add a vibrant and aesthetic touch to your room, bar, man cave, or game room. Inspired by Japanese anime characters, it offers adjustable brightness and easy installation. Please read this manual carefully before installation and use to ensure proper operation and safety.

▶ **Watch video online**
AUGELRE Gaming Neon Sign, Japanese Anime Neon Signs

Official product video demonstrating the AUGELRE Gaming Neon Sign's features and appearance.

Safety Information

To ensure safe operation and prevent damage, please observe the following precautions:

- **Indoor Use Only:** This neon sign is designed for indoor use and should not be exposed to water or high humidity.
- **Power Source:** Use only a compatible USB DC 5V power source. Do not use power adapters with higher voltage.
- **Handling:** Handle the sign with care to avoid bending or damaging the LED strips or acrylic backplate.
- **Installation:** Ensure the sign is securely mounted to prevent it from falling.
- **Cleaning:** Disconnect power before cleaning. Use a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Children:** Keep out of reach of small children to prevent accidental damage or injury.
- **Back Film:** Remember to remove the protective white film from the back of the neon sign before use.

Package Contents

Verify that all items are present in your package:

- 1 x AUGELRE Gaming Neon Sign (with integrated USB cable and dimmable switch)

- 1 x Metal Chain
- 2 x Nails (for wall mounting)

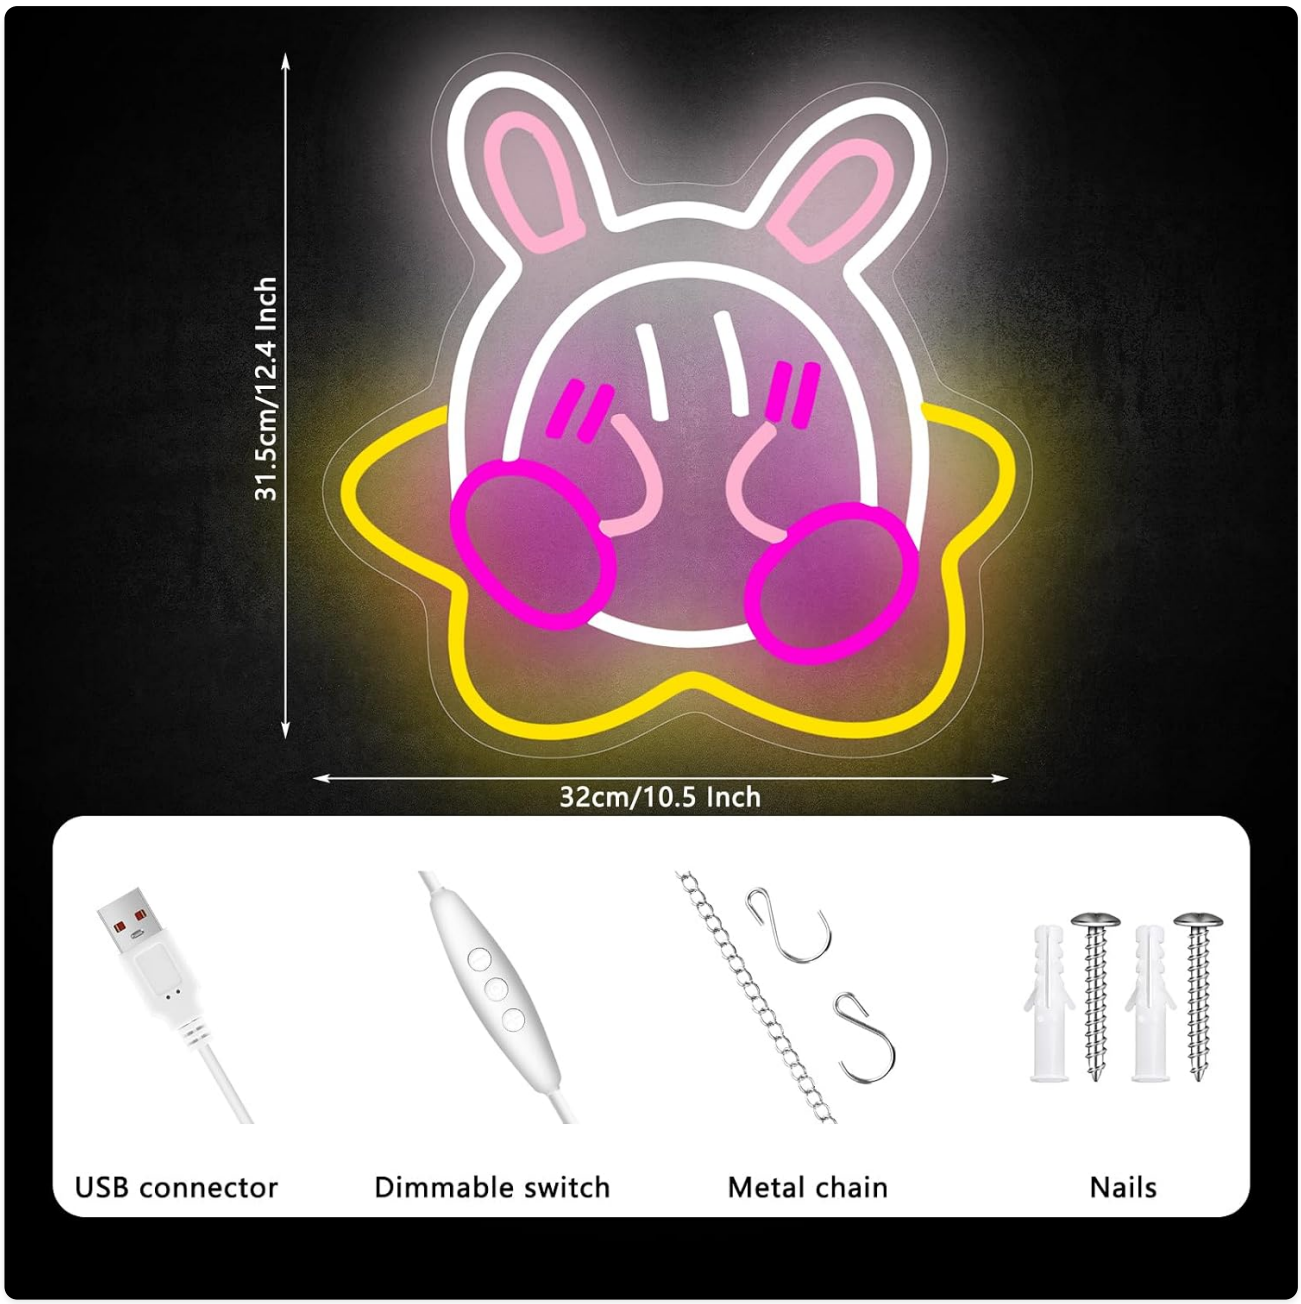

Image showing the neon sign and its included accessories: USB connector, dimmable switch, metal chain, and nails.

Setup Instructions

1. Prepare the Sign

Before mounting, locate the protective white film on the back of the acrylic plate. Gently peel off this film to reveal the clear acrylic surface. This ensures the best visual effect of your neon sign.



Visual guide for installation, highlighting the importance of removing the back protective film.

2. Mounting the Sign

The neon sign offers flexible mounting options:

1. **Wall Mounting:**
    - Identify the two pre-drilled holes on the acrylic backplate of the neon sign.
    - Mark the desired location on your wall for these holes.
    - Drill two holes at the marked spots.
    - Insert the provided nails into the drilled holes.
    - Attach the metal chain to the holes on the neon sign.
    - Hang the neon sign securely on the nails using the metal chain.
2. **Alternative Mounting:** The sign can also be placed on a flat surface or shelf, leaning against a wall for support.

3. Power Connection

Connect the USB cable from the neon sign to a compatible 5V USB power source. This can include:

- A USB wall adapter (not included)
- A power bank
- A computer or laptop USB port



Illustration of various power connection methods for the neon sign.

Operating the Neon Sign

Adjusting Brightness

The AUGELRE Gaming Neon Sign features a convenient dimmable switch integrated into the USB cable. This allows you to adjust the brightness to your preference.

1. **Power On/Off:** Press the power button on the dimmable switch to turn the sign on or off.
2. **Increase Brightness:** Press the "**+**" button to increase the brightness level. There are 6 adjustable brightness levels, ranging from 10% to 100%.
3. **Decrease Brightness:** Press the "**-**" button to decrease the brightness level.

The smart memory function ensures that the sign will revert to its last brightness setting when turned back on, without needing to readjust.



Visual representation of the 6 adjustable brightness levels.

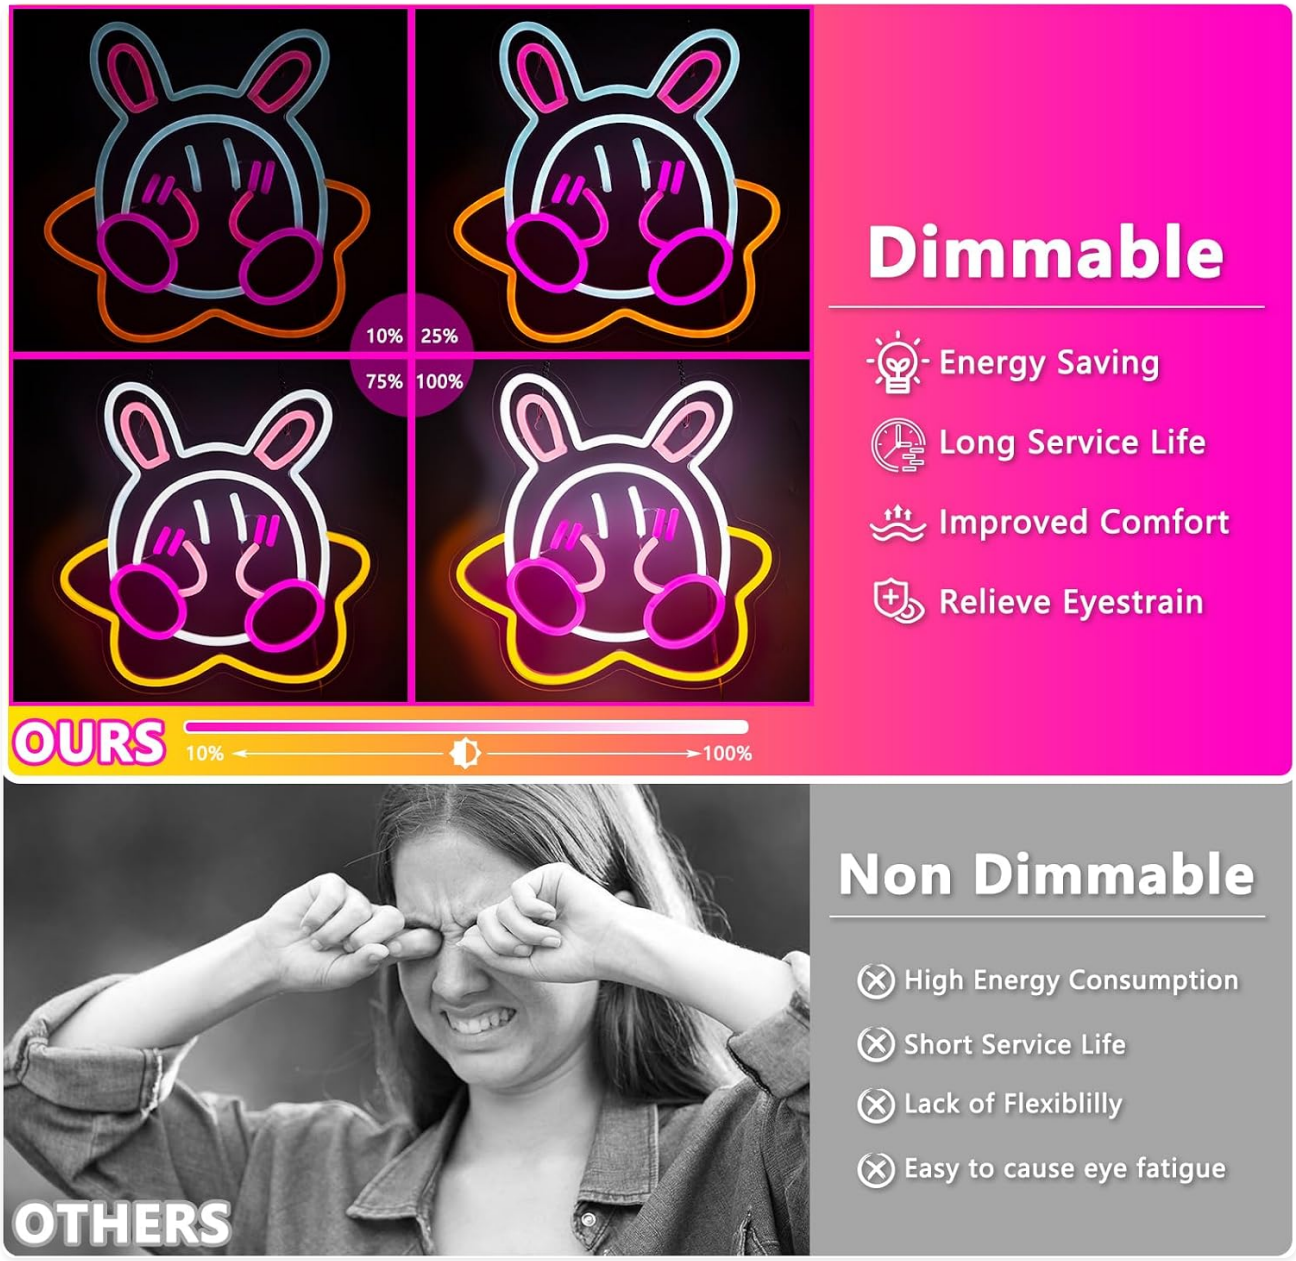

Comparison highlighting the advantages of the dimmable feature.

Maintenance

Proper care will extend the life of your neon sign:

- **Cleaning:** Always unplug the sign from the power source before cleaning. Use a soft, dry, lint-free cloth to gently wipe the acrylic surface and LED strips. Avoid using water, harsh chemicals, or abrasive materials, as these can damage the sign.
- **Storage:** If storing the sign for an extended period, ensure it is clean and dry. Store it in a cool, dry place, preferably in its original packaging or a protective cover to prevent dust accumulation and accidental damage.
- **Handling:** Avoid dropping or striking the sign, as this can cause the acrylic to crack or the LED strips to malfunction.

Troubleshooting

If you encounter any issues with your neon sign, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Sign does not light up.	No power, loose connection, faulty power source.	Ensure the USB cable is securely plugged into both the sign and the power source. Try a different USB port or power adapter. Verify the power source is active.
Brightness cannot be adjusted.	Dimmable switch malfunction.	Ensure you are pressing the correct '+' or '-' buttons. If the issue persists, contact customer support.
Sign flickers or dims unexpectedly.	Unstable power supply, loose connection.	Check all connections. Try a different power source to ensure stable voltage.
Sign makes unusual noise.	Not applicable (LED signs are typically silent).	This product is designed to be silent. If you hear noise, unplug immediately and contact customer support.

Specifications

Feature	Detail
Model Number	B0CQMDJ9SS
Brand	AUGELRE
Light Type	Neon LED
Material	Flexible Silicon LED Strip Lights, Thickened Acrylic Back Plate
Color	Pink White (as depicted)
Mounting Type	Wall Mount (with included chain and nails)
Power Input	USB DC 5V
Brightness Levels	6 (10% to 100% adjustable)
Dimensions	Approximately 12.4 inches (31.5cm) height x 10.5 inches (32cm) width (based on image 71sSXk6o6mL)
Item Weight	1.63 pounds
UPC	762716088283

Warranty and Support

For any questions, concerns, or issues regarding your AUGELRE Gaming Neon Sign, please contact the seller directly through the platform where you purchased the product. They will be able to provide assistance and resolve any problems you may encounter.

Please refer to your purchase documentation for specific warranty details, as these may vary.

© 2024 AUGELRE. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CQMDJ9SS

More documents and user manuals: **https://manuals.plus/**