Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Metz MUD7000Z

Metz Smart TV MUD7000Z 75-inch 4K UHD Google TV Instruction Manual

Model: MUD7000Z | Brand: Metz

1. Introduction

This manual provides essential information for the safe and efficient operation of your Metz MUD7000Z 75-inch 4K UHD Google TV. Please read it thoroughly before using the television and retain it for future reference.
The Metz MUD7000Z is a 75-inch Direct LED 4K UHD Smart TV featuring Google TV, HDR support, and a sleek design. It offers an immersive viewing experience with a resolution of 3840 x 2160 and a 16:9 aspect ratio. Enjoy integrated applications like Netflix, Prime Video, and Disney+, along with robust connectivity options including LAN and Wi-Fi.



Image 1.1: Front view of the Metz MUD7000Z 75-inch TV, highlighting features such as 4K UHD, HDR10, Dolby Audio, Hands-Free Voice Control, Flicker Free, Low Blue Light, and Google TV.

2. Safety Information

Always observe the following safety precautions to prevent electric shock, fire, or injury:

- Do not expose the TV to rain or moisture.

- Do not open the TV casing; refer all servicing to qualified personnel.
- Ensure proper ventilation around the TV.
- Keep the TV away from direct sunlight, heat sources, and open flames.
- Use only the power cord supplied with the TV.
- Clean the TV with a soft, dry cloth only.

3. Setup

3.1 Unboxing and Package Contents

Carefully remove the TV from its packaging. Verify that all components are present:

- Metz MUD7000Z 75-inch TV
- Remote Control
- 2 x AAA Batteries
- User Manual (this document)
- Power Cable
- AV Conversion Cable
- Quick Guide
- 4 x Screws
- 2 x Support Bases (stands)

3.2 Physical Installation

You can install your TV on a stand or mount it on a wall. Ensure the TV is placed on a stable, level surface or securely mounted to a wall according to VESA standards (wall mount not included).
Dimensions and Weight:

- Width x Depth x Height with stand: 166.8 x 36.3 x 103.4 cm
- Width x Depth x Height without stand: 166.8 x 8.4 x 96.5 cm
- Weight with stand: 27.4 kg
- Weight without stand: 26.8 kg

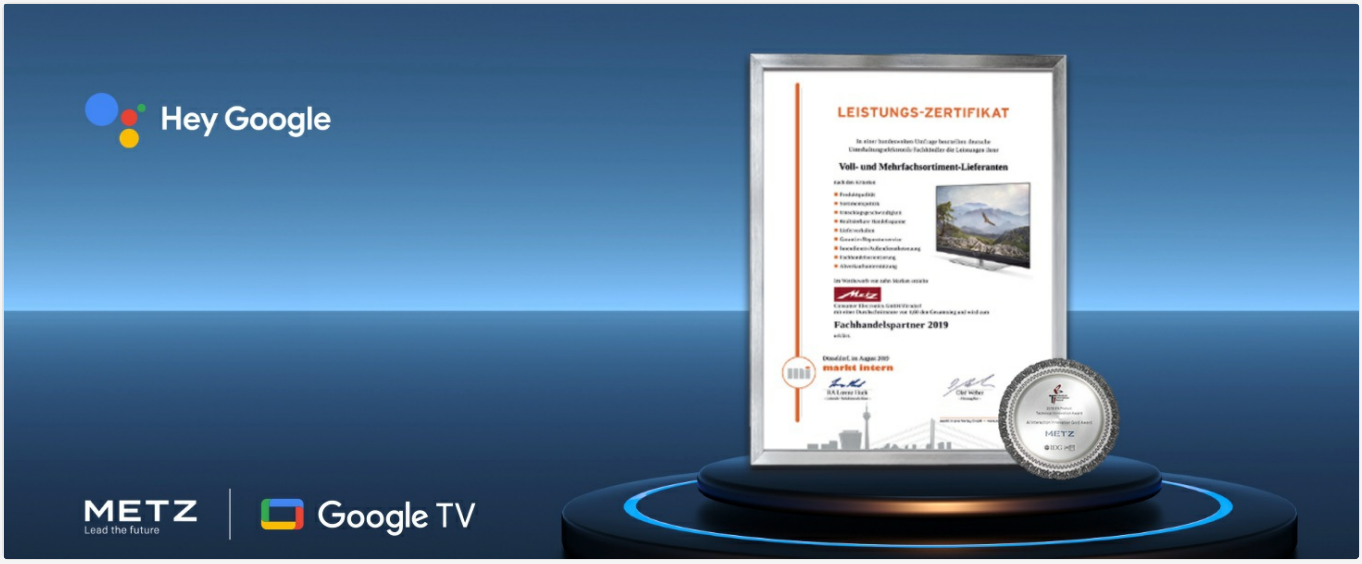


Image 3.1: Detailed dimensions of the TV with and without its stand, along with a visual representation of the input/output ports.

3.3 Connecting Peripherals

Connect your external devices to the appropriate ports on the TV. Refer to the diagram below for port locations and types:

- **HDMI (x3):** For high-definition audio and video devices like Blu-ray players, game consoles, or set-top boxes.
- **USB 2.0 (x2):** For connecting USB storage devices to play media or for software updates.
- **DVB-S/S2, DVB-C/T2/Analog:** Antenna inputs for digital satellite, cable, and terrestrial broadcasts.
- **Digital Audio Out (Optical):** For connecting to external audio systems or soundbars.
- **LAN (Ethernet):** For a wired internet connection.
- **AV IN:** For connecting older devices using the provided AV conversion cable.



Image 3.2: Visual guide to the TV's input and output ports.

3.4 Initial Power-on and Configuration

1. Connect the power cable to the TV and a wall outlet.
2. Press the power button on the TV or remote control to turn it on.
3. Follow the on-screen instructions to complete the initial setup, including language selection, network connection (Wi-Fi or LAN), and Google TV account login. This process will guide you through setting up your smart features and preferences.

4. Operating Your TV

4.1 Remote Control Functions

The included remote control allows you to navigate the TV's features. Insert the two AAA batteries into the remote control, ensuring correct polarity.



Image 4.1: Overview of the remote control and its key functions.

- **Power Button:** Turns the TV on or off.
- **Quick Access Buttons:** Dedicated buttons for popular streaming services like Netflix, YouTube, and Prime Video.
- **Voice Control:** Activate Google Assistant for hands-free control and search.
- **Navigation Pad (OK button):** For menu navigation and selection.
- **Volume +/-:** Adjusts the volume level.
- **Channel +/-:** Changes TV channels.
- **Numeric Keys:** Direct channel input.
- **Home Button:** Returns to the Google TV home screen.
- **Back Button:** Returns to the previous screen.

4.2 Google TV Interface and Smart Features

Your Metz MUD7000Z TV runs on Google TV, providing a personalized and intuitive user experience. Access a vast library of apps, movies, and shows from the Google Play Store.



Image 4.2: The Google TV home screen, demonstrating personalized content and app access.

- **Personalize Your TV:** Enjoy resources as you prefer. Watch your favorite movies, listen to your favorite music, and play your favorite games, all according to your preferences.
- **Voice Control:** Use the integrated Google Assistant for hands-free control. Say "Hey Google" to search for

content, control smart home devices, or get information.

- **Chromecast Built-in:** Cast content from your compatible mobile devices directly to your TV.

4.3 Picture Settings

The Metz MUD7000Z offers a 4K UHD resolution with HDR10 support for enhanced clarity, wider dynamic range, and intense color expression.

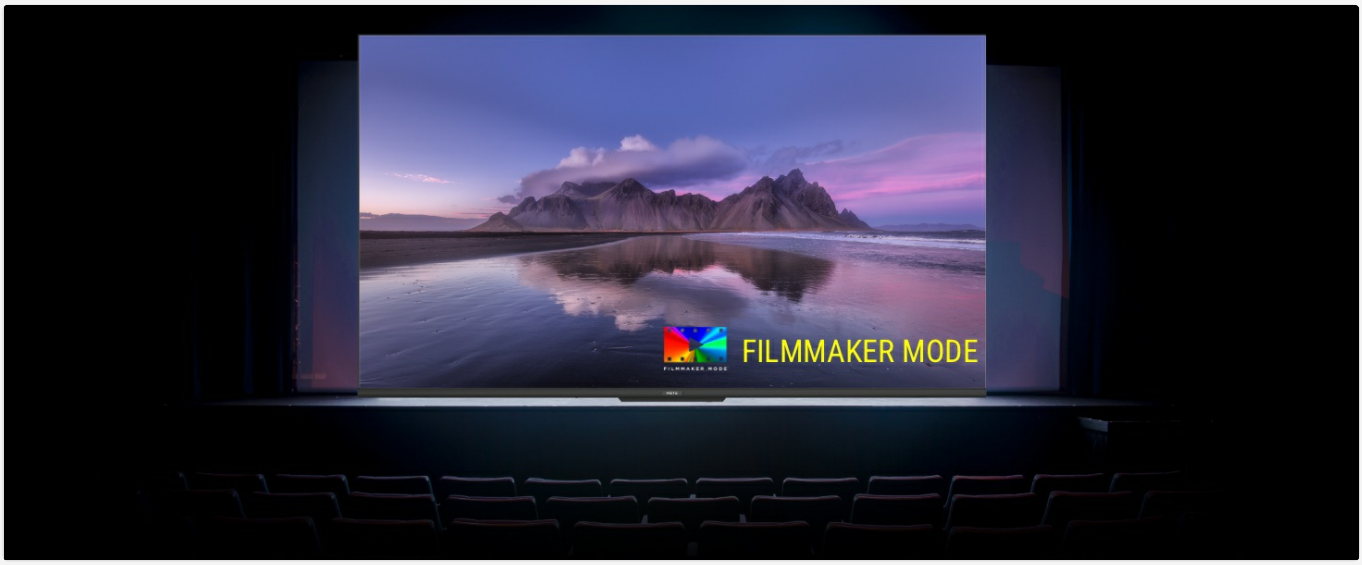


Image 4.3: See every detail with incredible clarity, showcasing the difference between 4K+HDR and 1080p.

- **HDR10 and HLG:** Supports High Dynamic Range formats for improved contrast and color accuracy.
- **Filmmaker Mode:** Preserves the original aspect ratio, colors, and frame rates of content as intended by the filmmaker.
- **Low Blue Light:** Reduces blue light emission to minimize eye strain during prolonged viewing.
- **Flicker Free:** Ensures a stable image without visible flickering, further enhancing viewing comfort.

4.4 Sound Settings

Experience immersive audio with Dolby Digital Plus and DTS Studio Sound Surround technology.

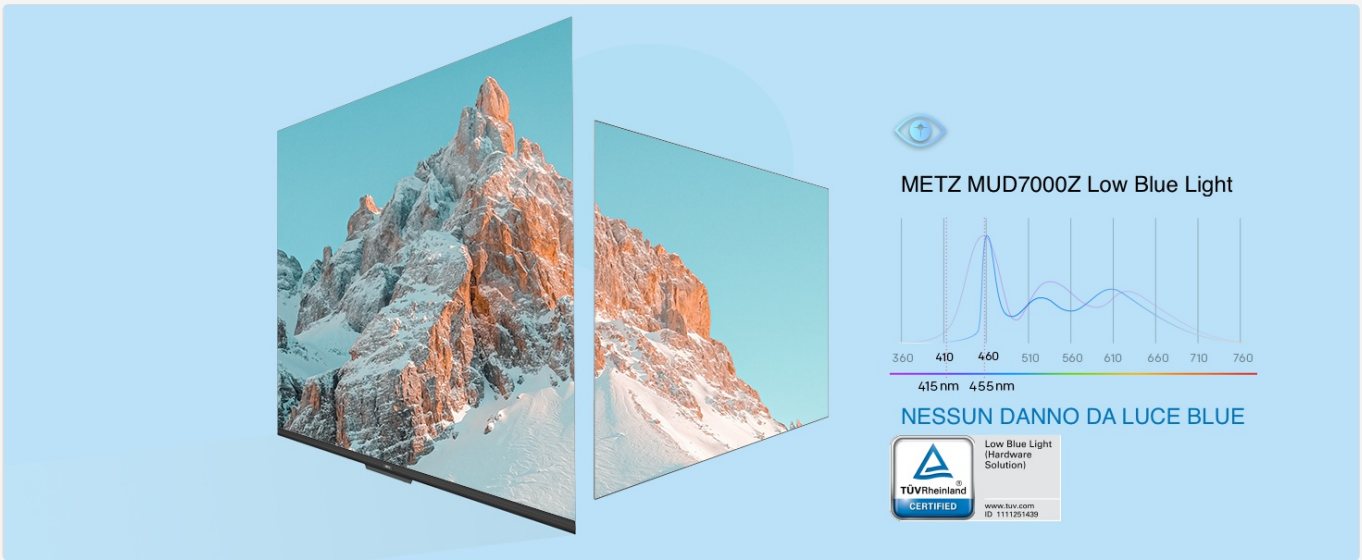


Image 4.4: Cinematic Audio for an Immersive Experience, bringing shows and films to a superior level with enveloping sound.

- The TV features two integrated speakers with a total output of 2x10W.
- Adjust sound modes (e.g., Standard, Music, Movie) in the audio settings menu to optimize for different content.

- Connect external audio systems via the Digital Audio Out (Optical) port for enhanced sound.

4.5 Channel Tuning

The TV supports DVB-C/T2/S2/Analog tuners, allowing reception of various broadcast types. The TV is compatible with UHDTV and supports HEVC (H.265) video encoding.

- Navigate to the 'Channels' or 'Broadcast' section in the settings menu.
- Select 'Auto Scan' to automatically search and store available channels.
- Ensure your antenna or cable connection is secure before scanning.

5. Maintenance

5.1 Cleaning

- Always unplug the TV before cleaning.
- Use a soft, dry, lint-free cloth to clean the screen and TV casing.
- For stubborn marks, lightly dampen the cloth with water or a specialized screen cleaner (do not spray directly onto the screen).
- Avoid using abrasive cleaners, waxes, or solvents.

5.2 Software Updates

To ensure optimal performance and access to the latest features, keep your TV's software updated. The TV can receive updates over the internet.

- Connect your TV to the internet.
- Navigate to 'Settings' > 'System' > 'About' > 'System update'.
- Select 'Network update' to check for and install available updates.

6. Troubleshooting

If you encounter issues with your TV, consult the following common solutions:

Problem	Possible Solution
No power	Ensure the power cable is securely connected and the wall outlet is functioning. Try a different outlet.
No picture/sound	Check input source selection. Verify all cable connections (HDMI, antenna). Restart connected devices.
Remote control not working	Check battery polarity and replace batteries if necessary. Ensure no obstructions between remote and TV.
No internet connection	Check Wi-Fi password. Restart your router/modem. Ensure LAN cable is connected if using wired connection.
Picture quality issues	Adjust picture settings (brightness, contrast, sharpness). Check the quality of the input signal.

If the problem persists after trying these solutions, please contact customer support.

7. Specifications

Feature	Detail
Model Number	MUD7000Z
Screen Size	75 inches (189 cm)
Display Technology	Direct LED
Resolution	4K UHD (3840 x 2160)
Aspect Ratio	16:9
Refresh Rate	60 Hz
HDR Support	HDR10, HLG
Operating System	Google TV
Audio Output	2 x 10W Integrated Speakers
Audio Technology	Dolby Digital Plus, DTS Studio Sound Surround
Connectivity	Wi-Fi, LAN, Bluetooth, 3x HDMI, 2x USB 2.0, DVB-C/T2/S2/Analog Tuner, Digital Audio Out (Optical), AV In
Special Features	Hands-Free Voice Control, Chromecast Built-in, Filmmaker Mode, Low Blue Light, Flicker Free
Power Supply	110-240V~50/60Hz
Power Consumption (SDR)	102W
Energy Efficiency Class	F
Product Dimensions (with stand)	166.8 x 36.3 x 103.4 cm
Product Dimensions (without stand)	166.8 x 8.4 x 96.5 cm
Product Weight (with stand)	27.4 kg
Product Weight (without stand)	26.8 kg
Country of Origin	Germany

8. Warranty Information

For information regarding warranty and returns, please refer to the purchase terms and conditions provided by your retailer. If you wish to return a product within 30 days of receipt because you changed your mind, consult the retailer's help page on returns. If you received a defective or damaged product, consult the retailer's help page on defective or damaged products. For specific information on purchases made through a marketplace, consult the relevant marketplace help page.

9. Customer Support

Should you require further assistance or encounter issues not covered in this manual, please contact Metz customer support or your authorized dealer. Have your TV model number (MUD7000Z) and serial number ready when contacting support.
You can find more information and support resources on the official Metz website:www.metz-ce.de/en/

© 2025 Metz. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CQYL2Z77

More documents and user manuals: **https://manuals.plus/**