Linsoul KZ EDX Pro X

Linsoul KZ EDX Pro X In-Ear Earphone User Manual

Model: KZ EDX Pro X | Brand: Linsoul

Introduction

The Linsoul KZ EDX Pro X is a single dynamic driver HiFi in-ear monitor designed for audiophiles and gaming enthusiasts. It features an ergonomic shape and a detachable cable, aiming to provide a superior audio experience with excellent sound detail resolution and powerful bass. This manual provides essential information for the proper use and maintenance of your earphones.



Image: Linsoul KZ EDX Pro X In-Ear Earphones (Clear model).

What's in the Box

Upon opening your Linsoul KZ EDX Pro X package, you should find the following components:

- KZ EDX Pro X In-Ear Earphones (Left and Right earpieces)
- Detachable 2-pin Cable with 3.5mm Jack
- User Manual (this document)
- Multiple pairs of Silicone Ear Tips (various sizes)



Image: Contents of the KZ EDX Pro X package.

Setup

1. Attaching the Cable

The KZ EDX Pro X features a detachable 2-pin cable for easy replacement and upgrade. Ensure the cable's connectors align with the earphone's sockets. The cable is typically marked with 'L' for left and 'R' for right. Gently push the pins into the sockets until they are securely seated. Do not force the connection.



Image: Proper method for attaching the detachable cable.

2. Selecting and Installing Ear Tips

Choosing the correct ear tip size is crucial for both comfort and sound quality. Experiment with the included ear tips to find the size that provides a snug fit and good seal in your ear canal. A proper seal enhances bass response and passive noise isolation. To install, gently push the ear tip onto the nozzle of the earphone until it is firmly attached.



Image: Included silicone ear tips in different sizes.

3. Connecting to Audio Source

Once the cable is attached and ear tips are installed, plug the 3.5mm jack of the earphone cable into the headphone output of your audio device (e.g., smartphone, digital audio player, computer).

Operating Instructions

1. Wearing the Earphones

The KZ EDX Pro X earphones are designed for an over-ear fit, which provides better stability and reduces microphonics (cable noise). Gently guide the earpiece into your ear canal and loop the cable over the top of your ear. Adjust for a comfortable and secure fit.



Image: Example of the KZ EDX Pro X earphones being worn.

2. Using the Microphone (With Mic version)

If your KZ EDX Pro X model includes a microphone, it will be integrated into the cable. The microphone typically features a single button for control:

- **Single Press:** Play/Pause music, Answer/End calls.
- **Double Press:** Skip to next track.
- **Triple Press:** Skip to previous track.

For calls, ensure the microphone is positioned clearly to pick up your voice.

Maintenance and Care

Proper care will extend the lifespan and maintain the performance of your KZ EDX Pro X earphones.

- **Cleaning Ear Tips:** Regularly remove ear tips and clean them with a soft cloth dampened with mild soap and water. Ensure they are completely dry before reattaching.
- **Cleaning Earpieces:** Use a dry, soft, lint-free cloth to wipe the earpieces. Avoid using harsh chemicals or

abrasive materials. Do not allow moisture to enter the earpiece nozzles.

- **Cable Care:** Avoid sharp bends or excessive pulling on the cable. When not in use, coil the cable loosely and store it in a protective case.
- **Storage:** Store your earphones in a clean, dry place away from extreme temperatures, humidity, and direct sunlight.

Troubleshooting

If you encounter issues with your KZ EDX Pro X earphones, refer to the following common solutions:

Problem	Possible Cause	Solution
No sound from one or both earphones	Loose cable connection, incorrect audio source settings, damaged cable/earphone.	Ensure cable is securely attached to both earpieces and audio source. Check audio settings on your device. Test with another audio source or cable if possible.
Distorted or poor sound quality	Improper ear tip seal, dirty ear tips/nozzles, low quality audio file, damaged driver.	Adjust ear tips for a better seal. Clean ear tips and earphone nozzles. Try a different audio file or device.
Earphones feel uncomfortable or fall out easily	Incorrect ear tip size, improper wearing technique.	Experiment with different ear tip sizes. Ensure the cable is looped over your ear for stability.
Microphone not working	Cable not fully inserted, audio source settings, incompatible device.	Ensure the 3.5mm jack is fully inserted. Check microphone input settings on your device. Some devices may require specific adapters.

Specifications

Key technical specifications for the Linsoul KZ EDX Pro X In-Ear Earphones:

Feature	Specification
Model Name	KZ EDX Pro X
Brand	Linsoul
Connectivity Technology	Wired
Headphones Jack	3.5 mm Jack
Audio Driver Type	Dynamic Driver
Impedance	23 Ohm
Sensitivity	108 dB
Frequency Range	20-40000Hz

Feature	Specification
Noise Control	Passive Noise Cancellation
Cable Feature	Detachable
Material	Plastic
Item Weight	2.11 ounces
Date First Available	December 27, 2023

Warranty and Support

Linsoul provides warranty coverage for the KZ EDX Pro X earphones. The product typically comes with a**1-Year Product Warranty**, and the detachable cable is covered by a**3-Month Warranty** from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use.

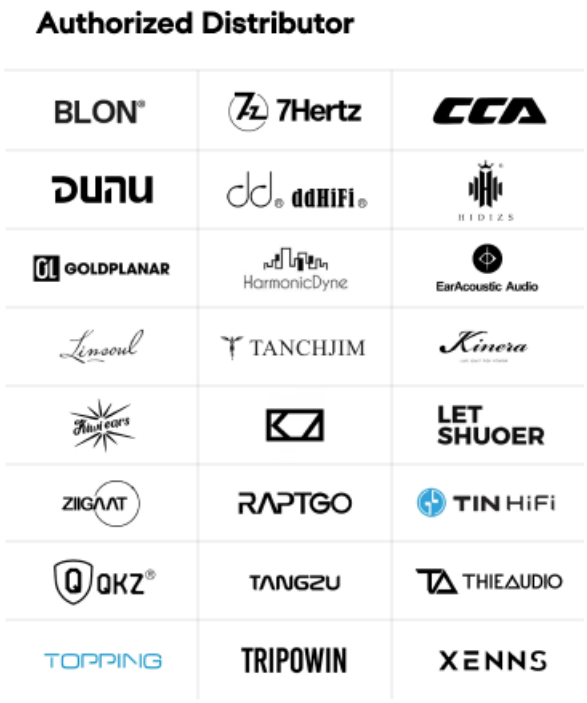

Image: Warranty details for the product.

For warranty claims, technical support, or any inquiries regarding your KZ EDX Pro X earphones, please contact Linsoul Audio customer service through their official channels or the retailer from whom you purchased the product. Please retain your proof of purchase for warranty validation.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question