Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Unold 48830

Unold Doppio 48830 Ice Cream Maker User Manual

Model: 48830

1. Introduction

Thank you for choosing the Unold Doppio 48830 Ice Cream Maker. This appliance is designed to help you create delicious homemade ice cream, sorbet, and frozen yogurt with ease. Featuring a powerful self-cooling compressor and two independent ice cream bowls, you can prepare two different flavors simultaneously. Please read this manual carefully before first use to ensure safe and optimal operation.



Figure 1: Front view of the Unold Doppio 48830 Ice Cream Maker.

2. Safety Instructions

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons.

- Read all instructions before operating the appliance.
- Do not immerse the main unit, cord, or plug in water or other liquids.
- Unplug from outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Avoid contact with moving parts.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use the appliance for anything other than its intended use.
- Supervise children when they are near the appliance.

3. Components and Features

The Unold Doppio 48830 Ice Cream Maker consists of several key components designed for efficient ice cream production.



Figure 2: Key components of the ice cream maker, including the transparent lid, mixer, removable stainless steel ice cream bowl, and the main unit with elegant, modern, robust stainless steel housing.

- **Main Unit:** Houses the self-cooling compressor and control panel.
- **Control Knobs:** Two independent rotary knobs for controlling each ice cream bowl.
- **Transparent Lids:** Allow you to observe the ice cream making process.
- **Mixing Paddles:** Stir the ingredients to create a creamy consistency.

- **Removable Stainless Steel Ice Cream Bowls:** Two 1.2-liter capacity bowls for preparing different flavors simultaneously.



Figure 3: Top view highlighting the two independently operable ice cream bowls and the three available programs for each.



Figure 4: The durable and easy-to-clean removable stainless steel ice cream bowl.

4. Setup

Before using your Unold Doppio 48830 Ice Cream Maker for the first time, please follow these steps:

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Clean:** Wash the removable stainless steel ice cream bowls, mixing paddles, and transparent lids with warm soapy water. Rinse thoroughly and dry completely. The main unit should be wiped with a damp cloth.
3. **Assemble:**
    - Place the main unit on a stable, flat, and dry surface. Ensure adequate ventilation around the appliance.
    - Insert the clean stainless steel ice cream bowls into their respective compartments in the main unit.
    - Place the mixing paddles inside the bowls, ensuring they are properly seated on the central spindle.
    - Cover each bowl with its transparent lid.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.



Figure 5: Correct placement of the removable stainless steel ice cream bowl into the main unit.

5. Operating Instructions

The Unold Doppio 48830 offers three operating programs for versatile ice cream preparation.

1. **Prepare Ingredients:** Ensure your ice cream mixture is prepared according to your recipe. For best results and faster freezing, pre-chill your ingredients in the refrigerator to 4-8°C (39-46°F).
2. **Add Ingredients:** Pour the pre-chilled ice cream mixture into the stainless steel bowls. Do not fill above the maximum fill line to allow for expansion during freezing. Each bowl has a capacity of 1.2 liters.
3. **Select Program:** Use the rotary knob for each bowl to select one of the three programs:
    - **Ice Cream Making (Mixing & Freezing):** This program activates both the mixing paddle and the compressor for simultaneous mixing and freezing. This is the standard setting for making ice cream.

- **Cooling Only (Freezing):** This program activates only the compressor to cool the contents without mixing. Useful for chilling ingredients or maintaining temperature.
- **Mixing Only:** This program activates only the mixing paddle without cooling. Ideal for stirring ingredients or keeping them mixed.

4. **Start Operation:** Once the desired program is selected, the machine will begin operation. The machine does not have a pre-set timer; it will continue to operate until manually turned off.
5. **Monitor Progress:** You can observe the ice cream consistency through the transparent lids. Ice cream is typically ready in approximately 30 minutes with pre-chilled ingredients.
6. **Stop Operation:** To stop the machine, turn the rotary knob to the "Stop" position.
7. **Serve:** Once the ice cream reaches your desired consistency, remove the bowls and serve immediately. For firmer ice cream, transfer to an airtight container and place in the freezer.



Figure 6: Creamy ice cream ready for serving directly from the bowl.

6. Maintenance and Cleaning

Proper maintenance ensures the longevity and optimal performance of your ice cream maker.

- **Before Cleaning:** Always unplug the appliance from the power outlet before cleaning.
- **Removable Parts:** The stainless steel ice cream bowls, mixing paddles, and transparent lids are dishwasher safe or can be washed by hand with warm soapy water. Rinse thoroughly and dry completely.
- **Main Unit:** Wipe the exterior of the main unit with a soft, damp cloth and mild detergent. Do not immerse the main unit in water or any other liquid. Avoid using abrasive cleaners or scouring pads, as they may damage the surface.
- **Storage:** Store the ice cream maker in a dry, clean place away from direct sunlight and extreme temperatures. Ensure all parts are completely dry before storage to prevent mold or mildew.

- **Motor Care:** The robust motor is designed for continuous operation. No special motor maintenance is required beyond keeping the unit clean and ensuring proper ventilation during use.

7. Troubleshooting

If you encounter issues with your ice cream maker, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure plug is securely in outlet; check circuit breaker; try a different outlet.
Ice cream is not freezing or is too soft.	Ingredients not pre-chilled; too much mixture; "Cooling Only" program not selected; ambient temperature too high.	Pre-chill ingredients to 4-8°C; do not exceed max fill line; ensure "Ice Cream Making" program is selected; operate in a cooler environment.
Mixing paddle is not rotating.	Paddle not properly installed; mixture too thick; "Mixing Only" or "Ice Cream Making" program not selected.	Re-install paddle correctly; ensure mixture consistency is appropriate; select correct program.
Unusual noise during operation.	Components not assembled correctly; foreign object in bowl.	Check assembly of bowls and paddles; inspect bowls for foreign objects.

If the problem persists after trying these solutions, please contact Unold customer support.

8. Specifications

Feature	Detail
Brand	Unold
Model Number	48830
Color	White
Dimensions (L x W x H)	30.7 x 40.9 x 38 cm (approx. 12.1 x 16.1 x 15 inches)
Weight	17.5 kg (approx. 38.6 lbs)
Capacity	2.4 Liters total (2 x 1.2 Liters per bowl)
Power	250 W, 220-240 V~, 50 Hz
Material	Plastic, Stainless Steel
Special Features	Dual ice cream maker with two separately usable bowls, fully automatic self-cooling compressor for continuous cold production, freezing range up to approx. -35 °C.
Included Components	Two removable stainless steel ice cream bowls, measuring cup, spatula, instruction manual with recipes.

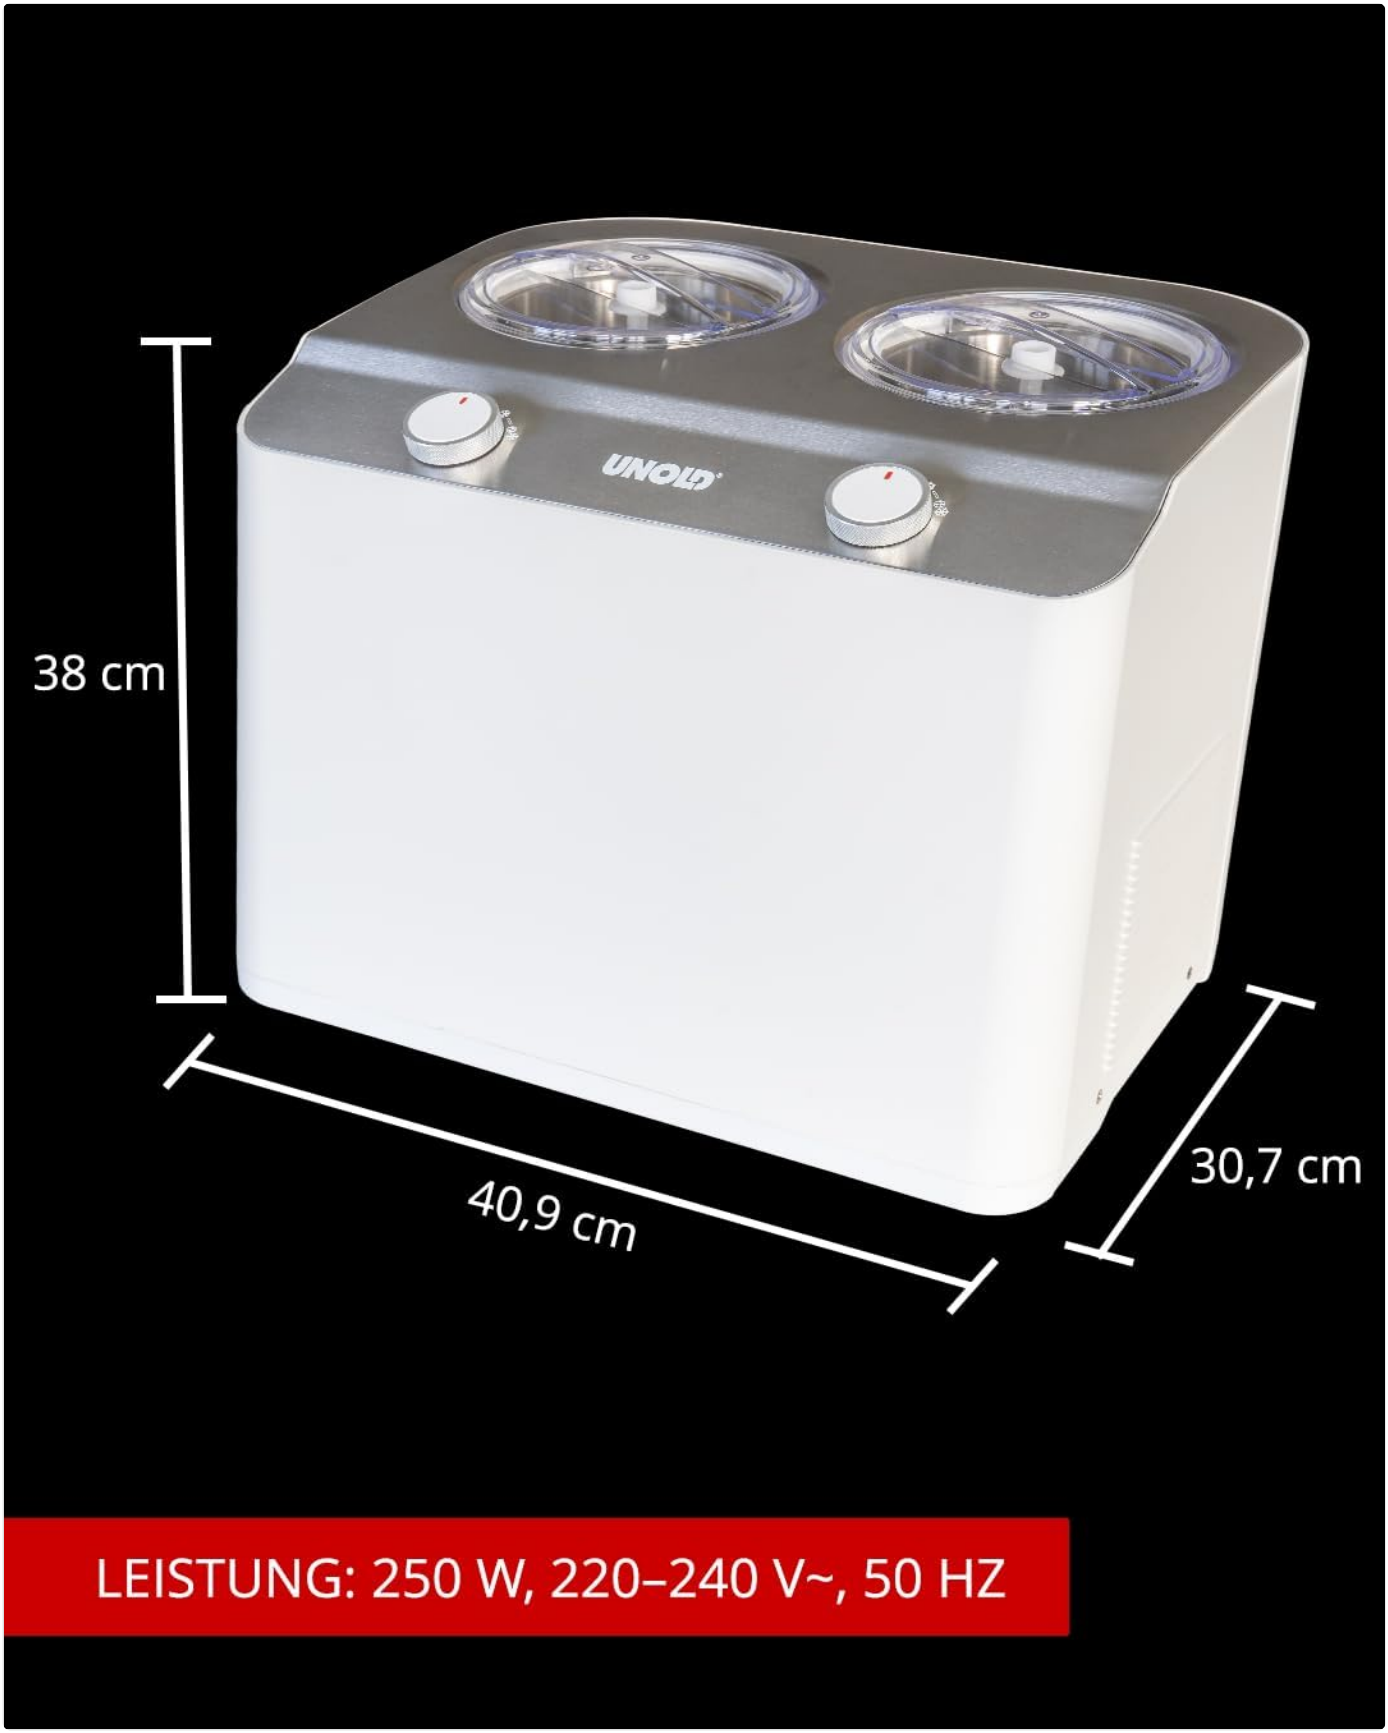

Figure 7: Product dimensions for the Unold Doppio 48830 Ice Cream Maker.

9. Warranty and Support

Unold products are manufactured with high quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Unold website.

For technical support, spare parts, or service inquiries, please contact Unold customer service. Contact details can

typically be found on the manufacturer's website or on the product packaging.

Manufacturer: Unold

Website: www.unold.de (Please check for regional websites for specific contact information.)

© 2024 Unold. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CWP1B7JG

More documents and user manuals: **https://manuals.plus/**