Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Frigidaire FRAF100B

Frigidaire 3-in-1 Air Fryer Instruction Manual

Model: FRAF100B

Introduction

Thank you for choosing the Frigidaire 3-in-1 Air Fryer. This versatile appliance is designed to enhance your cooking experience by offering Air Fry, Bake, and Reheat modes in a compact design. With its 5.3-quart capacity and user-friendly digital display, preparing delicious and healthier meals is effortless. This manual provides essential information for safe operation, setup, maintenance, and troubleshooting to ensure optimal performance of your air fryer.



Image: The Frigidaire 3-in-1 Air Fryer, a sleek black appliance with a digital display and a pull-out basket handle.

Important Safety Information

Please read all instructions carefully before using the appliance to prevent personal injury or property damage. Keep this manual for future reference.

- Always place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to allow for proper air circulation.
- Do not immerse the cord, plug, or the appliance housing in water or other liquids.
- Supervise children closely when the appliance is in use.
- Do not operate the air fryer if the cord or plug is damaged, or if the appliance malfunctions. Contact customer support for assistance.

- Avoid touching hot surfaces. Use handles or knobs. Always use oven mitts when handling hot components.
- Unplug the air fryer from the outlet when not in use and before cleaning. Allow it to cool completely before handling.
- Do not use accessories or attachments not recommended by the manufacturer, as this may cause injuries.
- Do not place food directly on the heating element. Always use the basket or appropriate accessories.
- Exercise extreme caution when removing the basket or disposing of hot grease.
- This appliance is for household use only. Do not use outdoors.

Setup

1. **Unpack:** Carefully remove the air fryer and all packaging materials.
2. **Clean:** Before first use, wash the detachable basket and pan with warm, soapy water. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a flat, stable, heat-resistant surface, ensuring adequate space (at least 6 inches) around the unit for proper ventilation.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.



Image: The Frigidaire Air Fryer with its dimensions (11 4/5" H, 12 3/5" W, 16 1/10" D) and key features highlighted: Total Capacity 5.3 qt, 3

Cooking Modes, Maximum Temperature 400°F, and PFAS-Free surfaces.

Operating Instructions

General Operation

1. Place food into the air fryer basket. Do not overfill.
2. Slide the basket firmly back into the air fryer unit until it clicks into place.
3. Press the power button ( ) to turn on the display.
4. Select your desired cooking mode (Air Fry, Bake, Reheat) or a recipe preset.
5. Adjust temperature and time using the '+' and '-' buttons.
6. Press the start/pause button (▷‖) to begin cooking.
7. The Automatic Shake Reminder will alert you when it's time to shake or flip food for even cooking.
8. Once cooking is complete, carefully remove the basket and transfer food to a serving dish.



Image: A collage showing the three cooking modes: Air Fry (sliced chicken), Bake (chocolate chip cookies), and Reheat (pizza), with the air

fryer unit in the foreground.

Cooking Modes

- **Air Fry:** For healthier meals with less oil, achieving crispy results.
- **Bake:** Ideal for baking desserts and other items, similar to a conventional oven.
- **Reheat:** To warm up leftovers, restoring crispiness and flavor.

Recipe Presets

The air fryer includes five pre-programmed recipe presets for common foods:

- Meat
- Chicken
- Fish
- Vegetables
- French Fries



Image: The Frigidaire Air Fryer on a kitchen counter, with icons representing the 5 recipe presets: Meat, Vegetables, Chicken, Fish, and Fries.

Automatic Shake Reminder

This feature provides sound and light alerts to remind you when to shake or flip your food during the cooking cycle, ensuring more uniform and crispy results.



Image: The Frigidaire Air Fryer with its basket pulled out, showing crispy French fries inside, illustrating the Automatic Shake Reminder feature.

Maintenance and Cleaning

Regular cleaning will help maintain the performance and longevity of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Detachable Basket and Pan:** The inner basket easily detaches from the EasyCollect tray. Both the basket and pan are dishwasher-safe for convenient cleaning. They feature a durable non-stick coating.
3. **Main Unit:** Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or immerse the main unit in water.

4. **Interior:** For stubborn residue inside the main unit, use a damp cloth with a mild detergent. Ensure the interior is completely dry before next use.

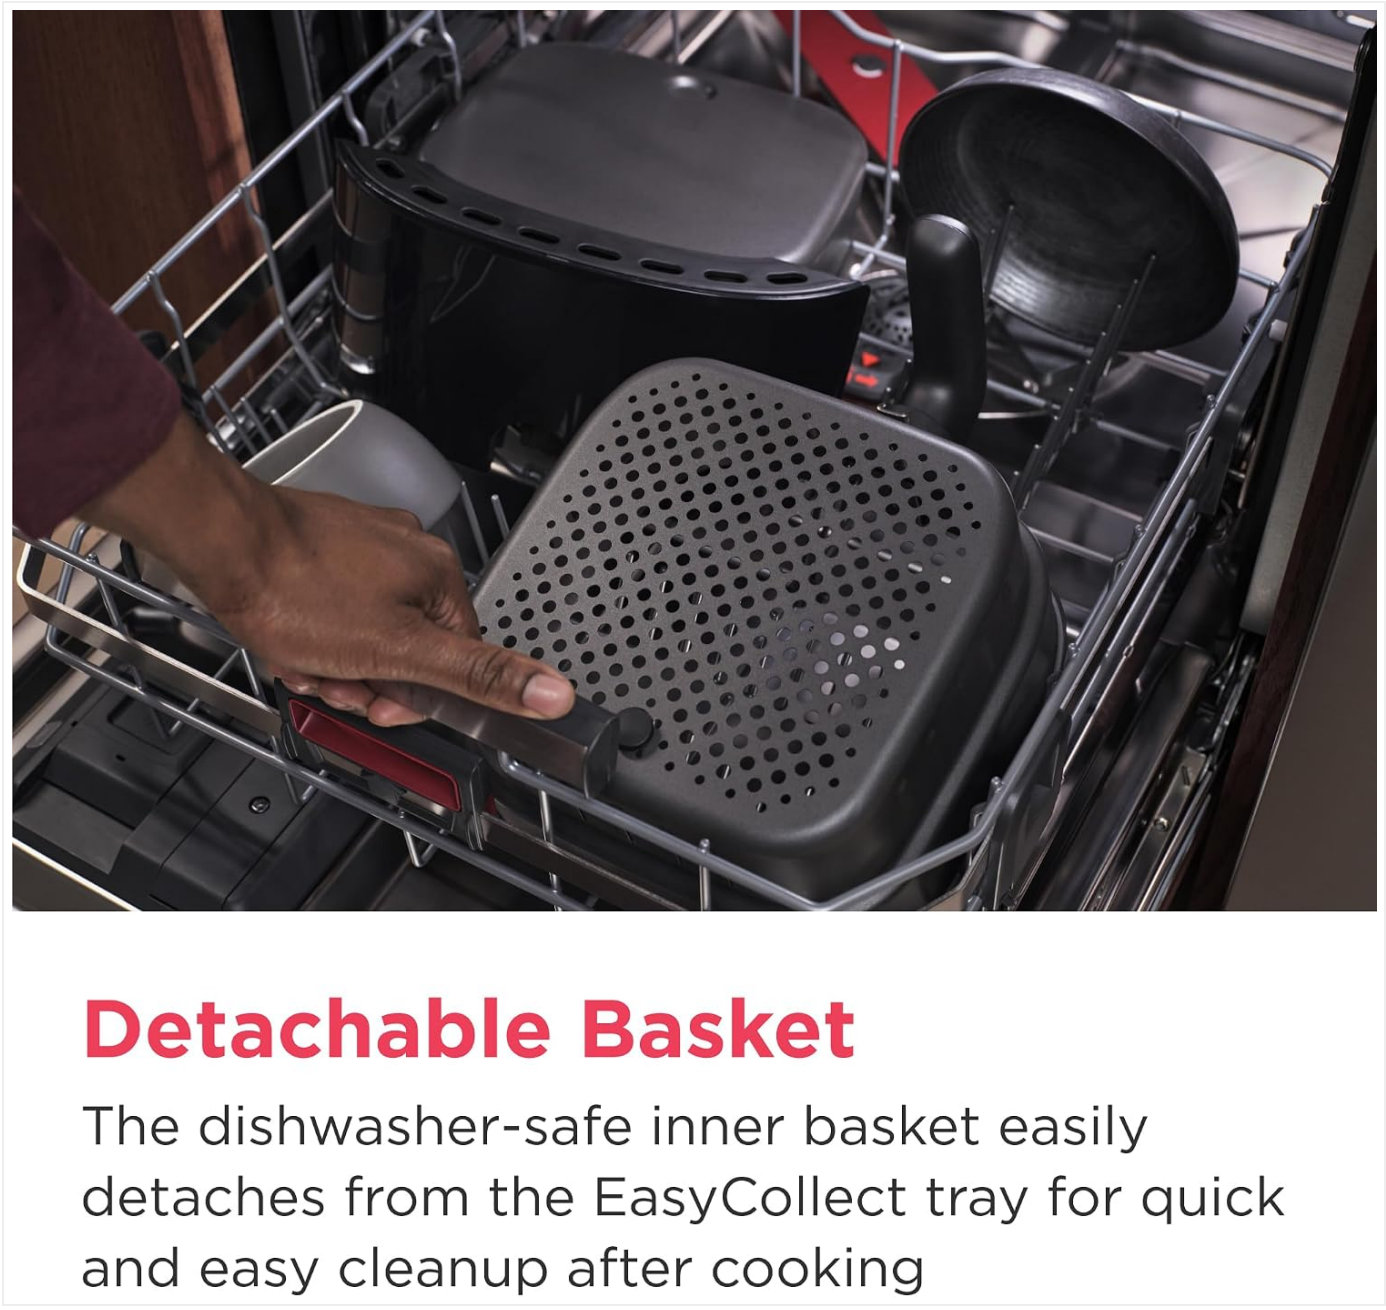


Image: A hand placing the detachable air fryer basket into a dishwasher, demonstrating its dishwasher-safe feature.

The cooking surfaces are PFAS-Free for added peace of mind during cooking and cleaning.



Image: The Frigidaire Air Fryer with a 'PFAS-Free Cooking Surfaces + Handle' seal, emphasizing its non-toxic materials.

Troubleshooting

If you encounter issues with your Frigidaire Air Fryer, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet issue; appliance malfunction.	Ensure the power cord is securely plugged into a working outlet. Check your home's circuit breaker. If the issue persists, contact customer support.
Food is not cooked evenly.	Basket is overfilled; food not shaken/flipped.	Do not overfill the basket. Cook in smaller batches if necessary. Utilize the Automatic Shake Reminder and shake/flip food halfway through cooking.

Problem	Possible Cause	Solution
Food is not crispy.	Insufficient cooking time/temperature; too much moisture.	Increase cooking time or temperature. Pat food dry before air frying. A light coating of oil can also help.
White smoke coming from the air fryer.	Grease residue from previous use; high-fat food.	Clean the basket and pan thoroughly after each use. For high-fat foods, drain excess fat during cooking.

Specifications

Feature	Detail
Model Number	FRAF100B
Capacity	5.3 Quarts
Cooking Modes	Air Fry, Bake, Reheat
Wattage	1500 Watts
Voltage	120 Volts
Max Temperature Setting	400 Degrees Fahrenheit
Control Method	Touch
Product Dimensions (D x W x H)	11.8" x 12.6" x 16.1"
Item Weight	11.8 Pounds
Material	Plastic (with PFAS-Free cooking surfaces)
Dishwasher Safe Parts	Basket and Pan

Warranty and Support

Frigidaire products are manufactured to the highest quality standards. For warranty information, product registration, or technical support, please refer to the warranty card included with your purchase or visit the official Frigidaire website. Keep your proof of purchase for warranty claims.
For additional assistance, you may contact Frigidaire customer service through their official channels.

© 2024 Frigidaire. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CWS2KDSX

More documents and user manuals: **https://manuals.plus/**