Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Reemix SG-120W-2021

Reemix Cold Press Masticating Juicer Machine

Model: SG-120W-2021

Introduction | Safety Instructions | Product Components | Setup & Assembly | Operating Instructions | Cleaning & Maintenance | Troubleshooting | Specifications | Warranty & Support

1. Introduction

Thank you for choosing the Reemix Cold Press Masticating Juicer Machine. This appliance is designed to extract juice from fruits and vegetables efficiently, preserving nutrients and minimizing oxidation. Its compact size and low-speed operation ensure a quiet and effective juicing experience. Please read this manual thoroughly before use to ensure safe and optimal performance.

2. Important Safety Instructions

- Read all instructions before operating the juicer.
- Ensure the voltage indicated on the appliance matches your local power supply before connecting.
- Do not immerse the motor unit in water or other liquids.
- Keep hands and utensils away from moving parts during operation to prevent injury.
- Always use the food pusher to guide ingredients into the chute. Never use fingers or other objects.
- Unplug the juicer from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Do not operate the appliance with a damaged cord or plug, or if the appliance malfunctions or has been damaged in any manner.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- For household use only. Do not use outdoors.

3. Product Components

Familiarize yourself with the parts of your Reemix Cold Press Masticating Juicer Machine:

- Compact Slow Juicer (Motor Unit)
- Pulp Collection Cup
- Juice Cup
- Food Pusher
- Juicing Auger
- Filter
- Feeding Chute/Lid

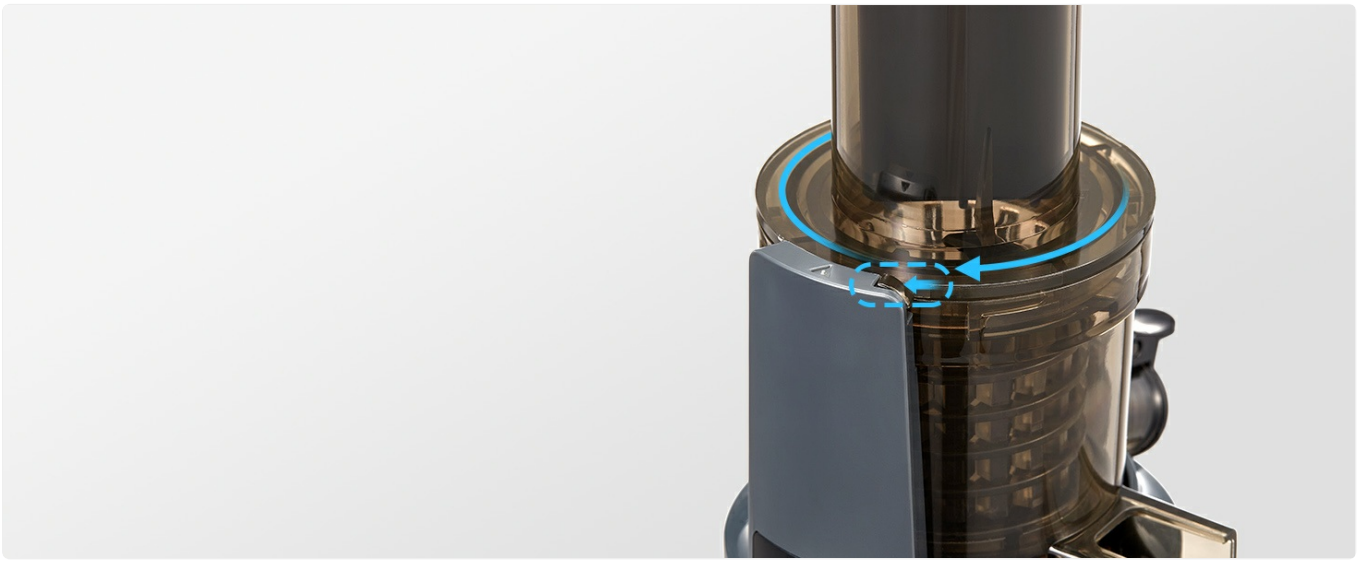

Image: All components of the Reemix Cold Press Masticating Juicer, including the main unit, pulp cup, juice cup, food pusher, and extra auger.

4. Setup and Assembly

Follow these steps to assemble your juicer before first use:

1. Place the juice container onto the motor unit.
2. Place the auger on the center pin of the bowl. Turn and press down until it locks into place.
3. Insert the filter and press down.
4. Put the lid onto the juice bowl. Turn the lid clockwise to lock it. You will hear a "click".



Image: Visual guide showing the four-step assembly process for the Reemix Juicer.

▶ **Watch video online**

How to assemble Reemix 2021 Juicer

Video: A detailed video demonstrating how to assemble the Reemix 2021 Juicer. This video shows the step-by-step process of putting together the juicer components for proper use.

5. Operating Instructions

5.1 Ingredient Preparation

- Wash all fruits and vegetables thoroughly.
- Peel fruits with thick skins (e.g., oranges, lemons, pineapples).
- Remove hard pits from fruits (e.g., peaches, cherries, mangoes).
- Cut ingredients into small pieces (approximately 1-inch) to ensure smooth operation and prevent clogging.

5.2 Juicing Process

1. Ensure the juicer is properly assembled and the juice and pulp collection cups are in place.
2. Plug the power cord into a suitable electrical outlet.
3. Turn the power switch to the "ON" position.
4. Gradually feed the prepared ingredients into the feeding chute using the food pusher. Do not force ingredients.
5. The juice will flow into the juice cup, and the pulp will be expelled into the pulp collection cup.
6. After juicing, turn the power switch to the "OFF" position and unplug the appliance.



Image: The Reemix juicer in operation, showing juice being extracted into a glass and pulp being expelled into a separate container.



Image: The compact Reemix juicer extracting fresh orange juice, highlighting its powerful motor and efficient operation.

6. Cleaning and Maintenance

Regular cleaning ensures the longevity and hygiene of your juicer. All removable parts are designed for easy cleaning.

1. Unplug the juicer from the power outlet.
2. Disassemble the juicer by reversing the assembly steps.
3. Rinse all removable parts (feeding chute, auger, filter, juice cup, pulp cup) under running water.
4. Use the provided cleaning brush to remove any pulp residue from the filter and other components.
5. Wash parts with warm, soapy water.
6. Rinse thoroughly and allow all parts to air dry completely before reassembling or storing.
7. Wipe the motor unit with a damp cloth. Never immerse the motor unit in water.



Image: A person cleaning the removable parts of the juicer under running water, demonstrating the ease of maintenance.

7. Troubleshooting

If you encounter any issues with your Reemix Juicer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Juicer does not turn on.	Not plugged in; improper assembly; power switch off.	Ensure power cord is securely plugged in. Check if all parts are correctly assembled and locked. Turn the power switch to "ON".
Juicer stops during operation.	Overload protection activated; ingredients too large or hard.	Unplug the juicer, disassemble, and clear any blockages. Cut ingredients into smaller pieces. Allow the motor to cool down for 15-20 minutes before restarting.
Low juice yield or wet pulp.	Ingredients not properly prepared; filter clogged.	Ensure fruits and vegetables are cut into appropriate sizes. Clean the filter thoroughly after each use.
Excessive noise or vibration.	Improper assembly; foreign object inside.	Disassemble and reassemble all parts correctly, ensuring they are securely locked. Check for any foreign objects and remove them.

8. Product Specifications

- **Brand:** Reemix
- **Model Name:** 2021 (Item model number: SG-120W-2021)
- **Color:** Silver
- **Special Feature:** Easy to Clean, Masticating (Cold Press)
- **Product Dimensions:** 7.2"D x 5.7"W x 17"H
- **Maximum Power:** 120 Watts
- **Power Source:** Corded Electric
- **Blade Material:** Stainless Steel
- **Item Weight:** 3.9 pounds
- **Material:** Plastic (BPA-Free Tritan components)
- **Product Care Instructions:** Hand Wash Only

9. Warranty and Customer Support

Reemix is committed to providing quality products. If you receive a defective item or are not satisfied with your purchase, please contact our customer service team for assistance.
To contact support:

- Go to your account on the platform where you purchased the product.
- Navigate to "Your Orders".
- Find the relevant order and select "Order Problem".
- Choose "Contact Seller" to reach our support team.

We will endeavor to provide the best possible solution to your concerns.

© 2026 Reemix. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CXJJJH76

More documents and user manuals: **https://manuals.plus/**