**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



**VEIKK VK1060 V2**

# VEIKK VK1060 V2 Drawing Tablet User Manual

Model: VK1060 V2 | Brand: VEIKK

## 1. Introduction

This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your VEIKK VK1060 V2 Drawing Tablet. Please read this guide thoroughly to ensure optimal performance and a seamless creative experience.

## 2. Setup

### 2.1. Unboxing and Package Contents

Carefully unpack your VEIKK VK1060 V2 Drawing Tablet and verify all components are present. The package should contain the following items:

- VEIKK VK1060 V2 Drawing Tablet
- Battery-Free Pen
- Pen Holder
- USB Cable (attached to tablet)
- Artist Glove
- Replaceable Pen Nibs (28 pieces)
- OTG Adapters (2 pieces, for Android connection)
- Nib Remover
- Quick Start Guide




Figure 2.1: Included accessories for the VEIKK VK1060 V2 Drawing Tablet.

Video 2.1: An unboxing video demonstrating the contents and initial presentation of the VEIKK VK1060 Drawing Tablet.

## 2.2. Driver Installation

Before connecting your tablet, it is recommended to download and install the latest driver from the official VEIKK website. If you have drivers from other tablet brands installed, please uninstall them first to avoid potential conflicts. Follow the on-screen instructions during the driver installation process.

## 2.3. Connecting the Tablet

Connect the VEIKK VK1060 V2 Drawing Tablet to your computer using the integrated USB cable. For Android devices, use the provided OTG adapters to connect the tablet to your phone or tablet. Ensure a secure connection for proper functionality.




Figure 2.3: Connecting the VEIKK VK1060 V2 to a PC and an Android mobile device.

## 3. Operating the Tablet

### 3.1. Basic Drawing Functionality

The VEIKK VK1060 V2 features a 10 x 6 inch active drawing area with a papery texture surface, providing a natural drawing feel. The battery-free pen offers 8192 levels of pressure sensitivity and ±60° tilt sensitivity, allowing for precise and fluid lines, similar to traditional drawing tools.




Figure 3.1a: The battery-free stylus utilizing EMR technology.

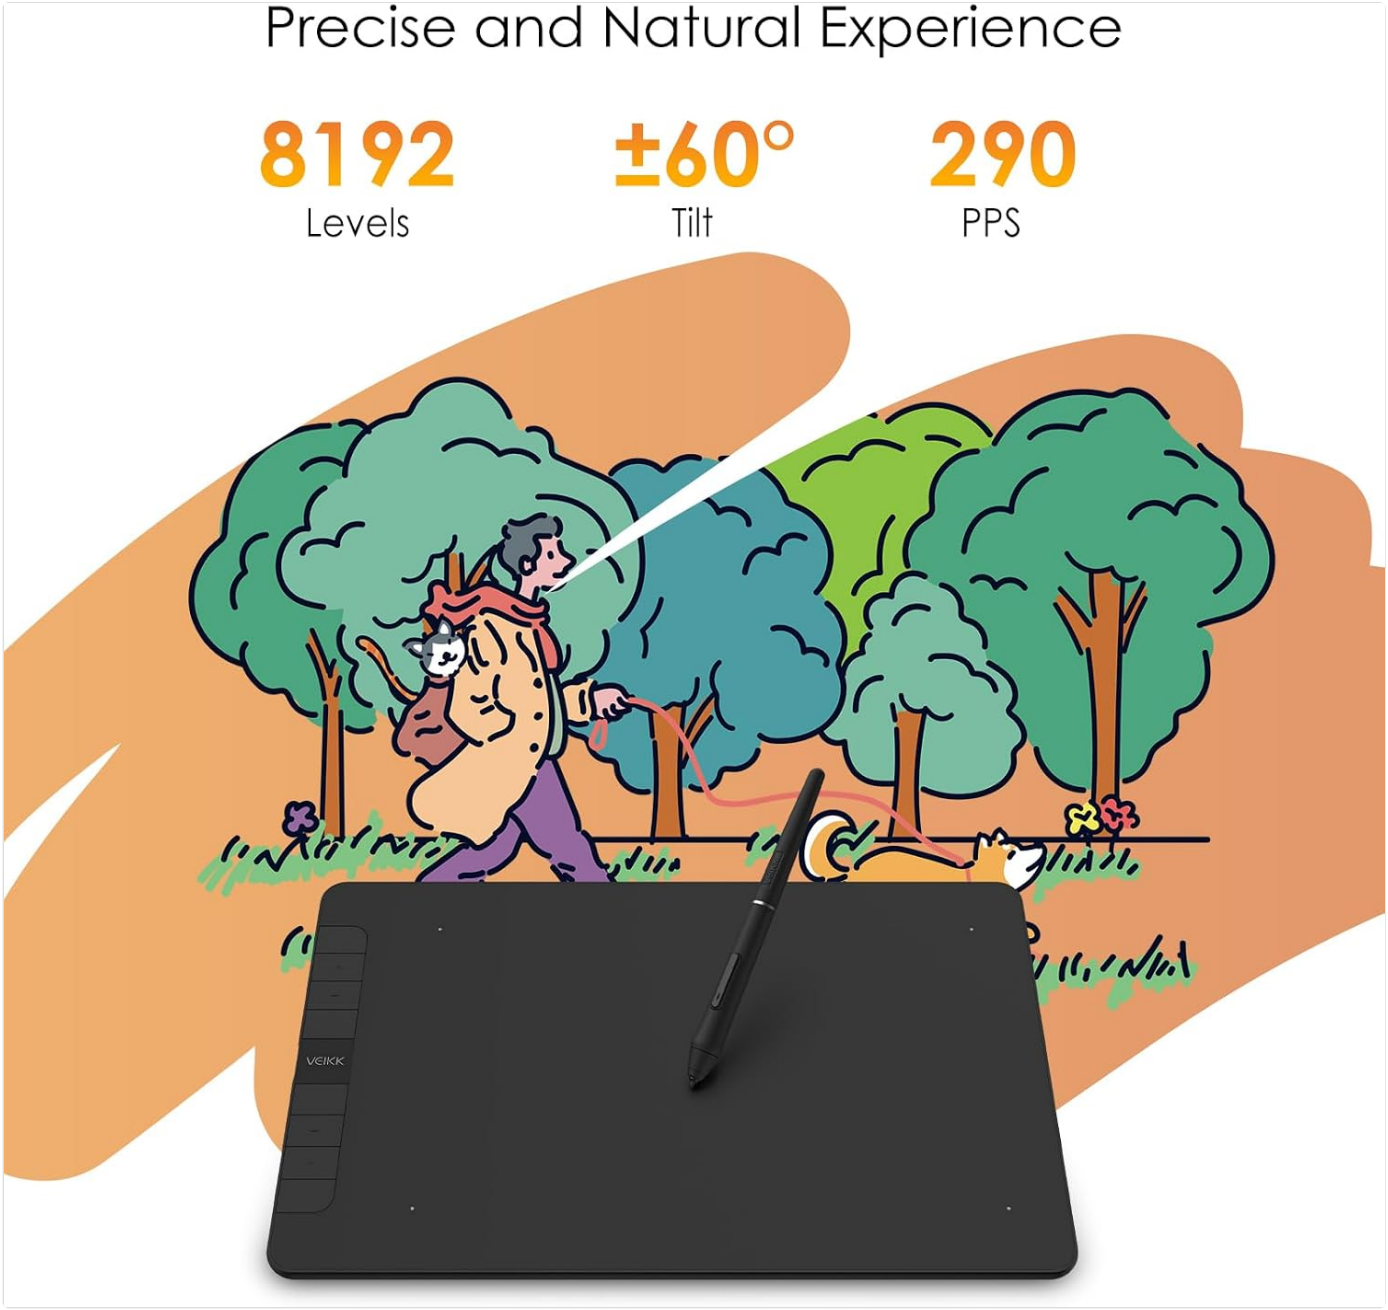



Figure 3.1b: Demonstrating precise and natural drawing with the tablet's advanced pen features.

## 3.2. Customizing Shortcut Keys and Quick Dial

The tablet is equipped with 8 customizable shortcut keys and a quick dial to enhance your workflow. These can be programmed to your preferred keyboard shortcuts for various functions like zoom in/out, brush size adjustment, undo, and more. Refer to the driver software for detailed customization options.




Figure 3.2: The 8 customizable shortcut keys on the VEIKK VK1060 V2.

Video 3.2: Instructions on how to customize the shortcut keys and pen buttons on your VEIKK tablet.

## 3.3. Using with Creative Software

The VK1060 V2 is compatible with a wide range of operating systems including Windows 7 or later, Mac OS 10.12 or later, Android 6.0 or later, and Linux. It works seamlessly with most popular drawing and design programs such as Photoshop, Illustrator, SAI, Clip Studio Paint, MediBang Paint, Krita, ibisPaint, Autodesk Sketchbook, Zbrush, and more. Please note that it is not compatible with iPhone/iPad devices.




Figure 3.3: Multi-software compatibility of the VEIKK VK1060 V2 Drawing Tablet.

### 3.4. Windows Ink Functionality

The VEIKK VK1060 V2 supports Windows Ink functionality, allowing for natural handwriting and drawing input in compatible applications, including Microsoft Office suite programs like Word, Excel, and PowerPoint, as well as Microsoft Whiteboard.

Video 3.4: Demonstration of using the VEIKK drawing tablet with Microsoft Office applications.

## 4. Maintenance

### 4.1. Cleaning

To clean the tablet surface and pen, use a soft, dry, lint-free cloth. Avoid using harsh chemicals, abrasive cleaners, or

excessive moisture, as these can damage the device.

### 4.2. Storage

Store the tablet in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. When not in use, keep the pen in its holder to prevent damage.

### 4.3. Pen Nib Replacement

The pen nibs are consumable items and will wear down with use. Replace the nib when it becomes too short or sharp to maintain optimal drawing performance. Use the included nib remover tool to carefully pull out the old nib and insert a new one.

## 5. Troubleshooting

### 5.1. Tablet Not Responding

- Ensure the USB cable is securely connected to both the tablet and your computer/device.
- Verify that the tablet driver is correctly installed and up-to-date. Reinstall the driver if necessary.
- Check for conflicts with other tablet drivers; uninstall any old drivers from different brands.
- Restart your computer and try reconnecting the tablet.

### 5.2. Pen Buttons or Tablet Keys Not Working

- Ensure the tablet driver is running in the background.
- Check the customization settings in the VEIKK driver software to confirm the keys are assigned correctly.
- Some software may have specific shortcut keys that override tablet settings. Adjust the tablet keys to match the software's shortcuts if needed.
- For Microsoft Office applications, ensure the "Enable Windows Ink Function" option is selected in the driver's mapping settings.

### 5.3. Inaccurate Pen Tracking

- Recalibrate the working area in the tablet driver settings.
- Ensure there are no electronic devices or strong magnetic fields near the tablet that could interfere with its operation.

## 6. Specifications

| Feature | Specification |
| --- | --- |
| Product Dimensions | 10 x 6 x 0.04 inches |
| Item Weight | 1.45 pounds |

| | |
|---|---|
| Item Model Number | VK1060 |
| Connectivity Technology | USB |
| Pressure Sensitivity | 8192 Levels |
| Operating System | Windows 7 or later, Mac OS 10.12 or later, Android 6.0 or later, and Linux |
| Special Feature | 60° Tilt Support, Extra-Slim, Shortcut Key |

## 7. Warranty and Support

VEIKK offers a one-year hardware warranty for the VK1060 V2 Drawing Tablet. Additionally, free driver updates are provided to ensure ongoing compatibility and performance enhancements. For any questions, technical assistance, or support inquiries, please contact VEIKK customer service at Service@veikk.com.

© 2024 VEIKK. All rights reserved.

### Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

**Open the live page**

**https://manuals.plus/asin/B0CXXY27QC**

More documents and user manuals: **https://manuals.plus/**