Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

TRESKO TRESKO-AERSON-60CM

TRESKO AERSON 60 cm Floor Fan Instruction Manual

Model: TRESKO-AERSON-60CM

1. Introduction

Thank you for choosing the TRESKO AERSON 60 cm Floor Fan. This industrial-style fan is engineered for maximum cooling performance and high airflow, making it suitable for various environments. It features a robust metal construction, three speed levels, and an adjustable tilt head for optimal air direction. Please read this manual carefully before use to ensure safe and efficient operation.

2. Safety Instructions

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Always unplug the fan from the power outlet before cleaning, servicing, or moving it.
- Do not operate the fan with a damaged cord or plug. If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- Keep the fan away from water or other liquids. Do not immerse the fan in water.
- Do not insert fingers or any other objects through the grille when the fan is operating.
- Ensure the fan is placed on a stable, level, and non-slip surface to prevent tipping.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Do not use the fan in areas where flammable liquids or gases are stored.
- Ensure the voltage indicated on the rating label matches your mains voltage.

3. Setup and Assembly

The TRESKO AERSON Floor Fan requires no assembly and is ready for immediate use.

1. Unpack the fan carefully and remove all packaging materials.
2. Place the fan on a stable, flat, and non-slip surface in the desired location. Ensure there is adequate space around the fan for optimal airflow.
3. Unwind the power cable (approximately 154 cm long) and plug it into a suitable 220-240V AC power outlet.



Figure 1: Fan dimensions and specifications. The fan measures approximately 23 cm (depth) x 67 cm (width) x 68 cm (height). The cable length is approximately 1.54 meters. Power consumption is 200 Watts, and the air flow rate is 166.66 m³/min.

4. Operating Instructions

The TRESKO AERSON Floor Fan is designed for simple and effective operation.

1. **Power On/Off:** Locate the rocker switch on the fan's control panel. Toggle the switch to turn the fan on or off.
2. **Adjusting Speed:** The fan features three speed levels (Low, Medium, High). Use the control knob or switch to select your desired airflow intensity.
3. **Adjusting Tilt Angle:** The fan head can be continuously adjusted up to 110 degrees. Gently tilt the fan head to direct the airflow precisely where needed. The robust stand ensures stability at any angle.

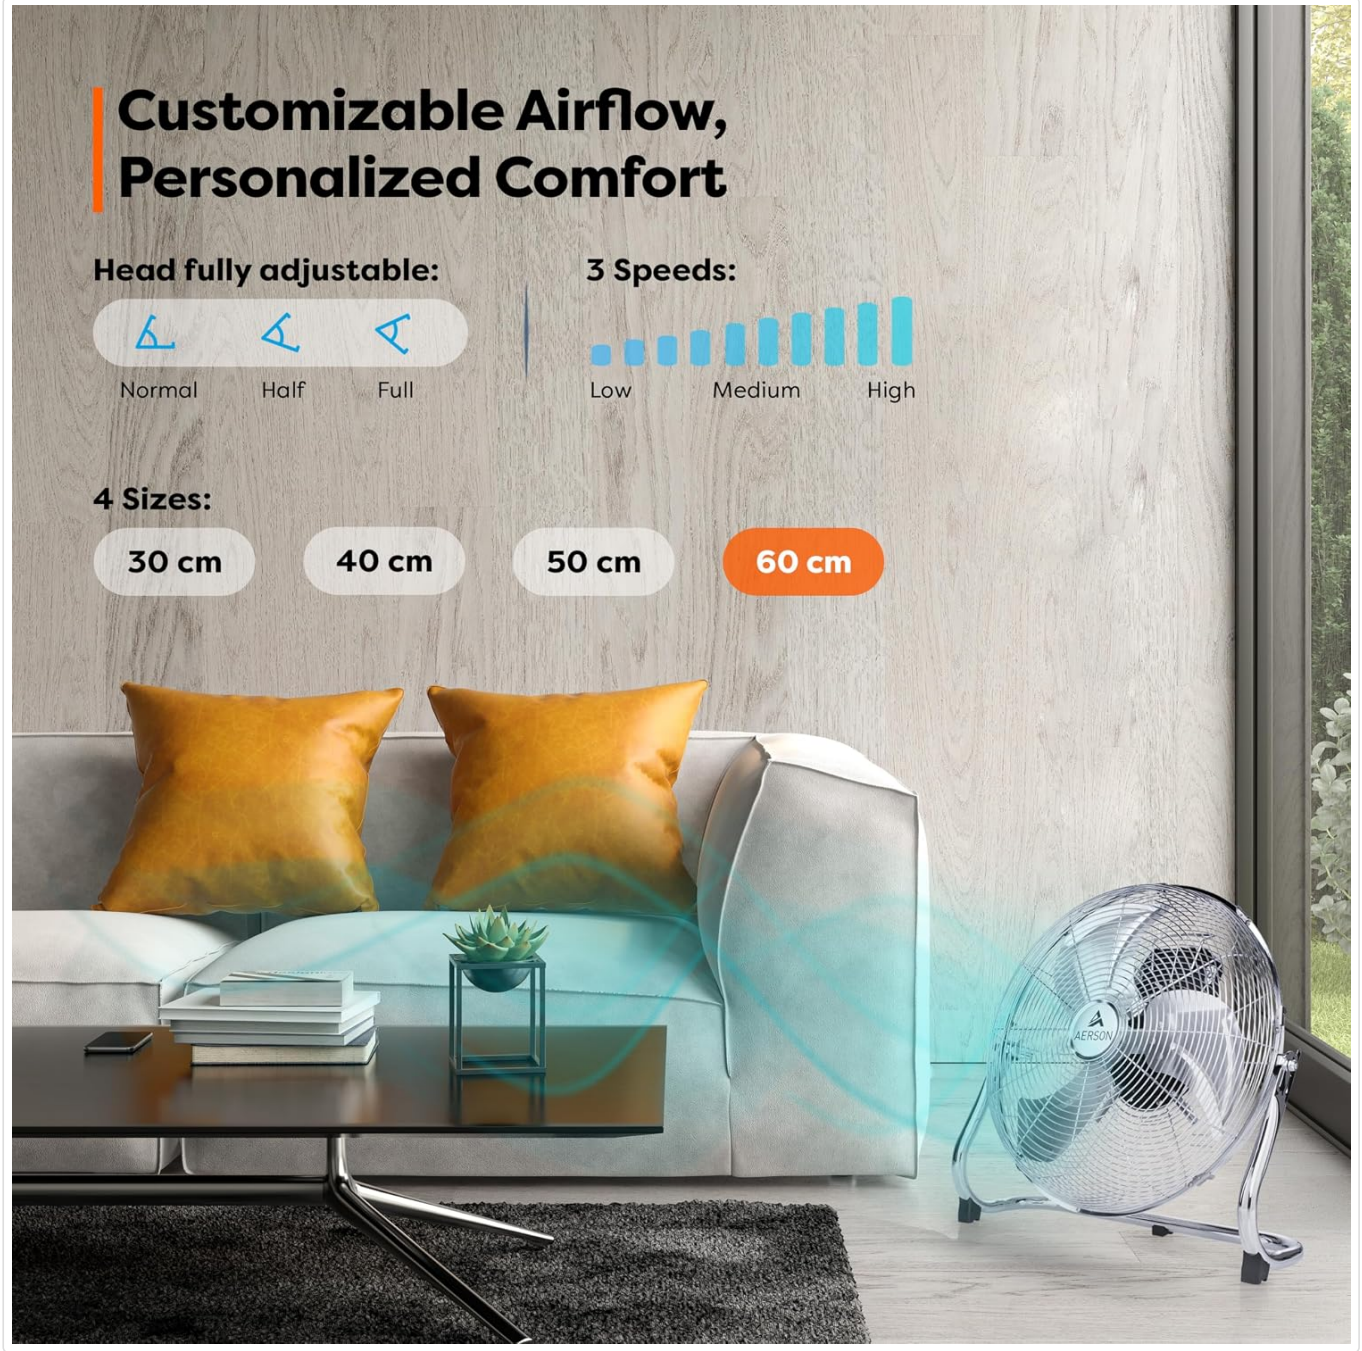

Figure 2: Customizable airflow with a fully adjustable head (Normal, Half, Full positions) and three speed settings (Low, Medium, High).



Figure 3: The fan head can swivel continuously up to a maximum angle of 110 degrees, allowing for precise air direction.



Figure 4: The fan is equipped with a carrying handle for easy portability. It also features a safety grid and can be placed in elevated positions.

Homemade Air Conditioning Tip:

For enhanced cooling, especially in very warm conditions, you can create a homemade air conditioning effect:

- Place the fan on the floor (or as low as possible).
- Place a large bucket or container of ice cubes in front of the fan.
- The fan will blow air over the ice, providing a cooling effect similar to air conditioning.



Figure 5: Illustration of using ice cubes in front of the fan to achieve a cooling effect, reducing ambient temperature from over 32°C to 28°C or less.

5. Maintenance

Regular cleaning and maintenance will help prolong the life of your TRESKO AERSON Floor Fan.

1. **Before Cleaning:** Always unplug the fan from the power outlet before performing any cleaning or maintenance.
2. **Exterior Cleaning:** Wipe the exterior surfaces of the fan with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish.
3. **Grille Cleaning:** Use a vacuum cleaner with a brush attachment or a soft brush to remove dust and debris from the front and rear metal grilles.
4. **Storage:** If storing the fan for an extended period, cover it to protect it from dust and store it in a dry, cool place.



Figure 6: Detailed views of the fan's control panel with speed switches, the robust motor housing, and the protective metal grille.

6. Troubleshooting

If you encounter issues with your fan, refer to the following troubleshooting guide:

Problem	Possible Cause	Solution
Fan does not turn on	No power supply Fan switch is off	Check if the power cord is securely plugged into a working outlet. Ensure the rocker switch is in the 'ON' position.
Low or weak airflow	Fan speed set too low Obstruction in front or behind the fan	Increase the fan speed setting. Remove any objects blocking the airflow.

Problem	Possible Cause	Solution
Excessive noise or vibration	Fan not on a stable surface Loose parts (unlikely due to robust construction)	Ensure the fan is placed on a flat, stable surface. While the fan is designed for high airflow and may produce noticeable sound, if there's unusual noise, unplug and inspect for any visible loose components.

7. Specifications

Feature	Specification
Brand	TRESKO
Model Number	TRESKO-AERSON-60CM
Color	Chrome
Electric Fan Design	Floor Fan
Power Source	Electric Cable
Style	Industrial
Product Dimensions (D x W x H)	23 cm x 67 cm x 68 cm
Recommended Uses	Cooling, Ventilation
Mounting Type	Floor Mount
Controller Type	Rocker Switch
Number of Speeds	3
Noise Level	2.5 Decibels (as per product specifications)
Power	200 Watts
Number of Blades	3
Airflow	166.66 Cubic meters per minute
Usage	Indoor
Blade Material	Aluminum
Cable Length	154 cm

8. Warranty and Support

For warranty information or technical support, please refer to the documentation provided with your purchase or contact TRESKO customer service. Keep your proof of purchase for warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CY5PVN1F

More documents and user manuals: **https://manuals.plus/**