Joyroom JR-FB3

Joyroom JR-FB3 Funpods Series True Wireless Earphones Instruction Manual

Model: JR-FB3

1. Introduction

This instruction manual provides comprehensive guidance for the Joyroom JR-FB3 Funpods Series True Wireless Earphones. Please read this manual thoroughly before using the product to ensure proper operation and to maximize your listening experience. Keep this manual for future reference.



Figure 1.1: Joyroom JR-FB3 Funpods Series True Wireless Earphones and Charging Case.

2. Product Overview

2.1 Key Features

- **Extended Playtime:** Up to 35 hours of music playback with the charging case.

- **Water Resistance:** IP54-certified for water and sweat resistance.
- **Advanced Connectivity:** Bluetooth 5.3 for stable, low-latency connections.
- **Rapid Charging:** Fully charged in approximately 1.5 hours.
- **Enhanced Calling:** DNC (Detect Noise Cancellation) for clear call quality.
- **Touch Control:** Intuitive touch-sensitive controls for various functions.

2.2 Components

The Joyroom JR-FB3 Funpods Series includes the following components:

- Left Earbud
- Right Earbud
- Charging Case
- USB-C Charging Cable (not explicitly listed but standard)
- User Manual (this document)



Figure 2.1: Side view of a single Joyroom JR-FB3 earbud.

3. Setup

3.1 Initial Charging

1. Place both earbuds into the charging case.
2. Connect the charging case to a power source using a USB-C cable.
3. Allow the earbuds and case to fully charge before first use. A full charge takes approximately 1.5 hours. The indicator light on the case will show charging status.

3.2 Bluetooth Pairing

The earbuds feature one-step reconnection for convenience.

1. Ensure the earbuds are charged and placed inside the charging case.
2. Open the lid of the charging case. The earbuds will automatically enter pairing mode.
3. On your device (e.g., smartphone, tablet), navigate to the Bluetooth settings.
4. Search for available devices and select "Joyroom Funpods FB3" from the list.
5. Once connected, your device will display a "Connected" status.

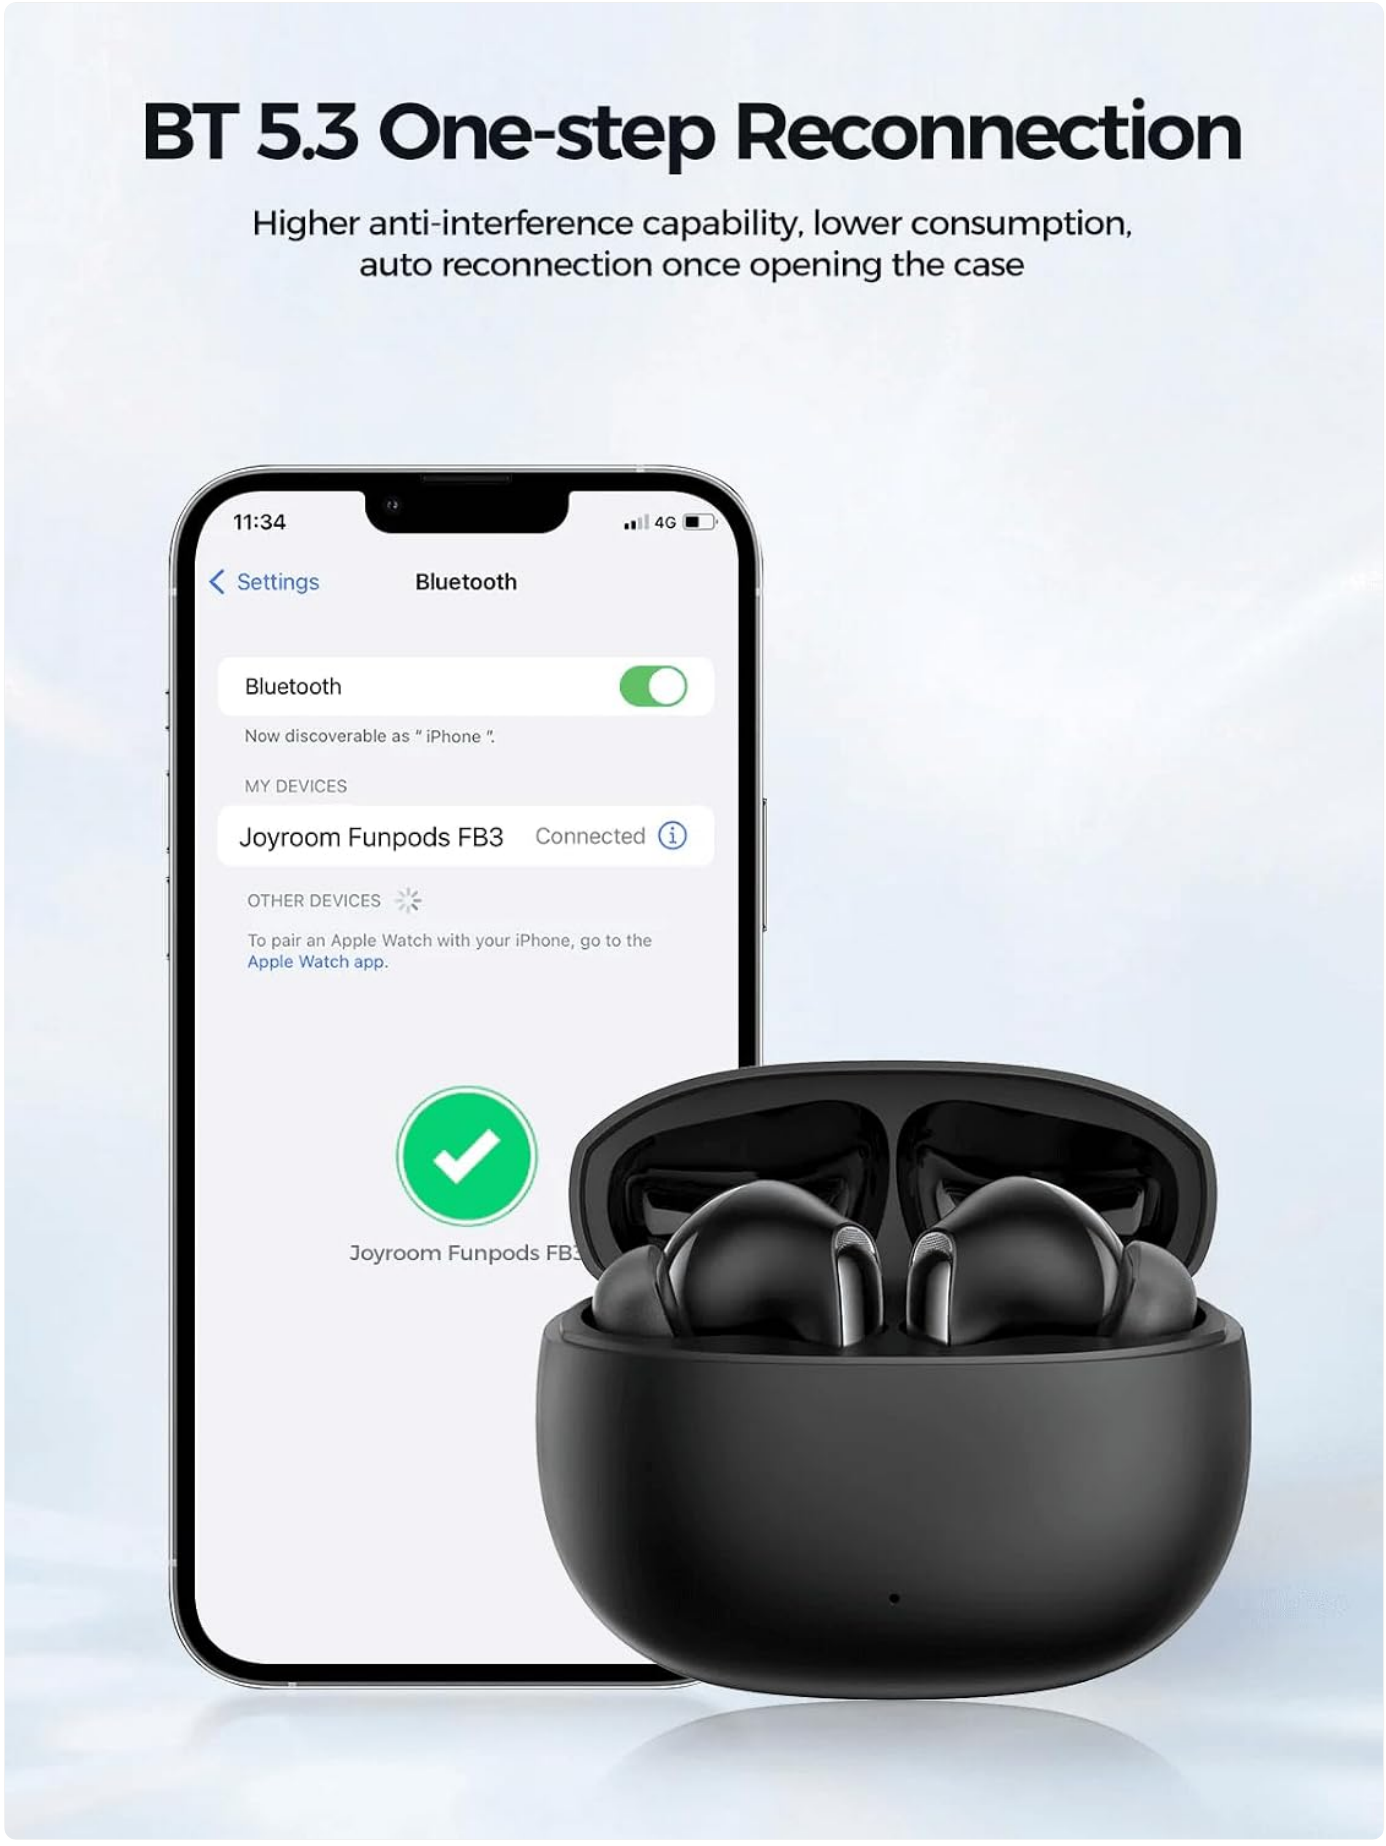


Figure 3.1: Bluetooth pairing process on a smartphone.

3.3 Wearing the Earbuds

Gently insert each earbud into your ear canal. Adjust for a comfortable and secure fit to optimize sound quality and noise cancellation.

4. Operating Instructions

4.1 Power On/Off

- **Power On:** Open the charging case lid, or take the earbuds out of the case. They will automatically power on and attempt to reconnect to the last paired device.
- **Power Off:** Place the earbuds back into the charging case and close the lid. They will automatically power off and begin charging.

4.2 Touch Controls

The earbuds feature touch-sensitive areas for control. Specific functions may vary slightly based on your device and application.

Action	Function
Single Tap (Left/Right Earbud)	Play/Pause music, Answer/End call
Double Tap (Right Earbud)	Next Track
Double Tap (Left Earbud)	Previous Track
Triple Tap (Left/Right Earbud)	Activate Voice Assistant
Long Press (Left/Right Earbud)	Reject Call, Toggle Noise Control Mode (if applicable)

4.3 Sound Modes

The earbuds support different sound modes for varied listening experiences.

- **Bass Boost:** Enhances low-frequency sounds for a more impactful audio experience.
- **Classic Mode:** Provides a balanced audio profile suitable for general listening.

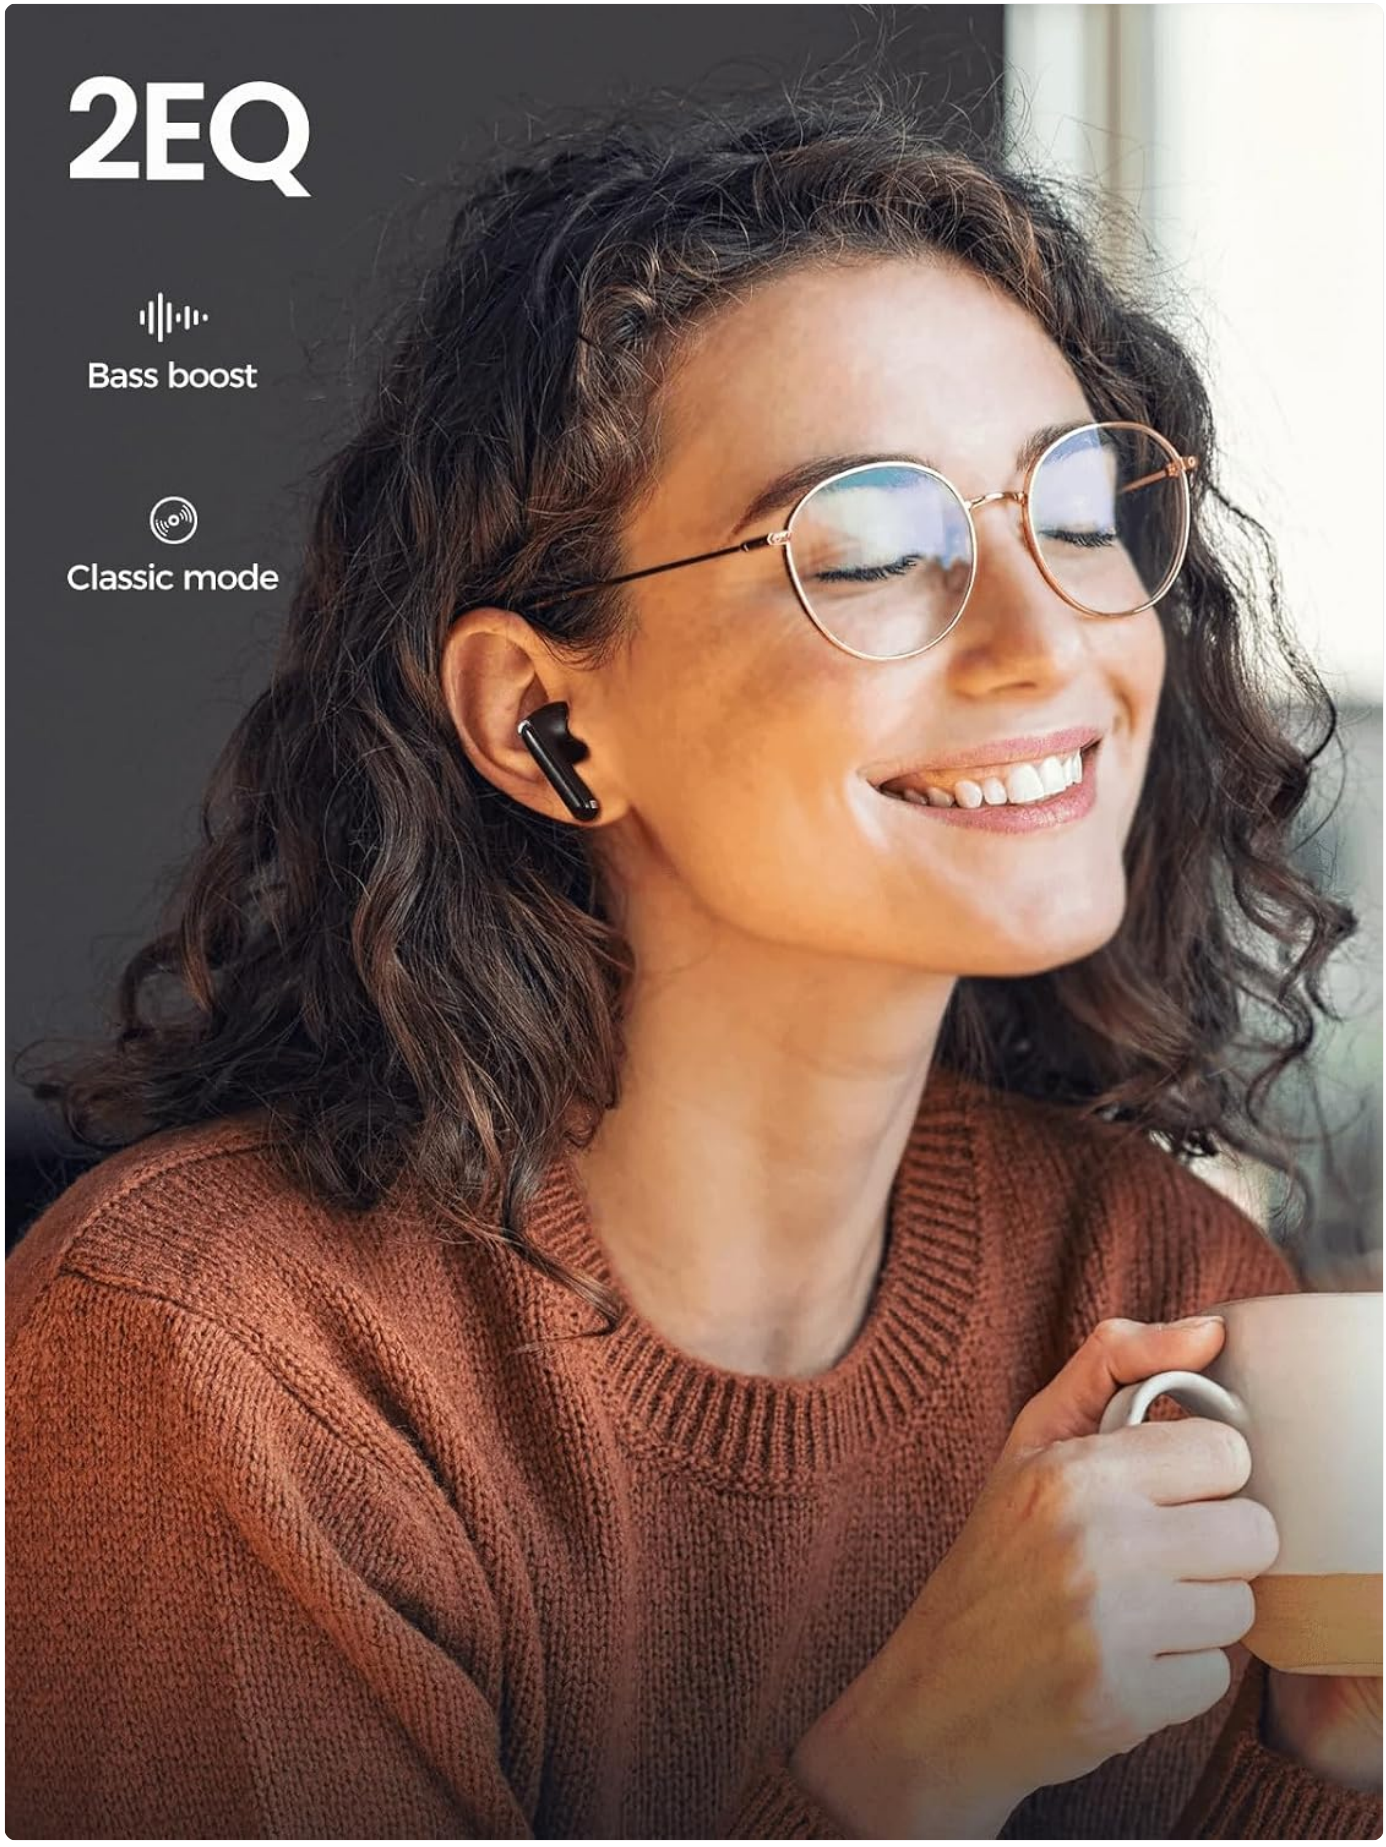


Figure 4.1: Illustration of available sound modes.

4.4 Noise Control (DNC)

The Joyroom JR-FB3 features DNC (Detect Noise Cancellation) for an improved audio experience and clear calling.

- **Active Noise Cancellation:** Reduces ambient noise for immersive listening.

- **DNS Enhanced Calling:** Utilizes noise reduction technology during calls to ensure your voice is clear to the recipient.

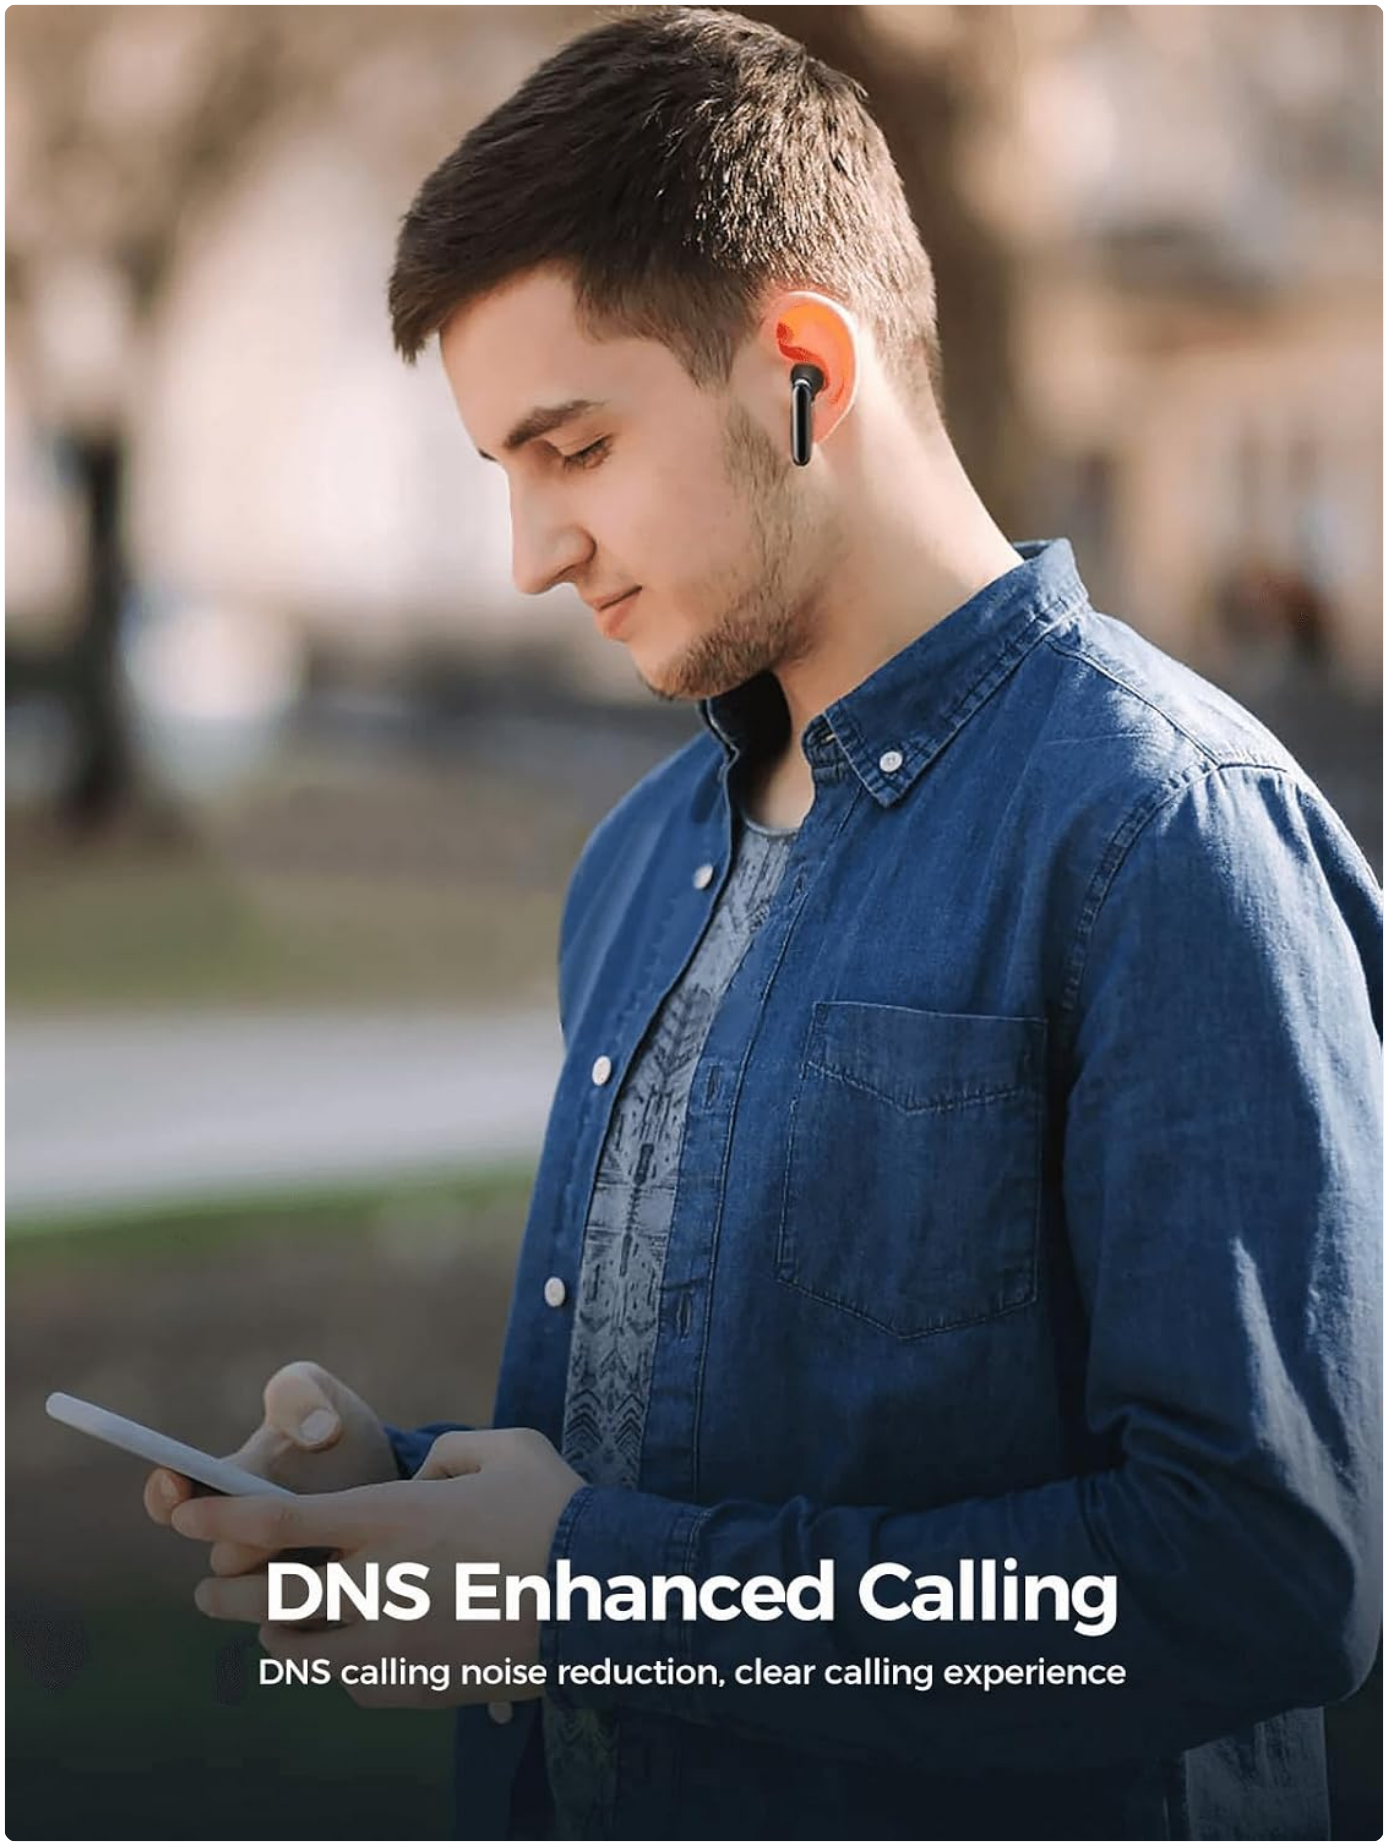


Figure 4.2: DNS Enhanced Calling for clear communication.

4.5 Low Latency Technology

The earbuds incorporate low latency technology (65ms) to ensure audio and video synchronization, particularly beneficial for gaming and video playback.



Figure 4.3: Low latency for synchronized audio and video.

5. Maintenance

5.1 Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, solvents, or aerosol sprays.
- Gently remove any earwax or debris from the earbud tips and speaker mesh using a small, soft brush or cotton swab.

5.2 Storage

- When not in use, store the earbuds in their charging case to protect them and keep them charged.
- Store the device in a cool, dry place, away from extreme temperatures and direct sunlight.

5.3 Water Resistance

The earbuds are IP54-rated for water and sweat resistance. This means they are protected against dust ingress and splashing water from any direction. They are not designed for submersion in water. Avoid exposing them to high-pressure water jets or prolonged immersion.



Figure 5.1: Enhanced portability with the protective case and carabiner clip.

6. Troubleshooting

If you encounter issues with your Joyroom JR-FB3 Funpods, refer to the following common solutions:

Problem	Possible Solution
Earbuds not pairing	Ensure earbuds are charged. Place them in the case, close the lid, then open to re-enter pairing mode. Delete "Joyroom Funpods FB3" from your device's Bluetooth list and try pairing again.

Problem	Possible Solution
No sound from one earbud	Check battery level of both earbuds. Try placing both earbuds back in the case, closing, and reopening the lid. Re-pair the earbuds with your device.
Charging case not charging	Ensure the USB-C cable is securely connected to both the case and the power source. Try a different USB-C cable or power adapter.
Low volume	Adjust volume on both your connected device and the earbuds (if supported by touch controls). Clean any debris from the earbud speaker mesh.
Intermittent connection	Ensure your device is within the effective Bluetooth range (typically 10 meters/33 feet) and there are no major obstructions. Avoid strong electromagnetic interference.

6.1 Resetting the Earbuds

If issues persist, a factory reset may resolve them. Refer to the official Joyroom support resources or product packaging for specific reset instructions, as this procedure can vary by model.

7. Specifications

Technical specifications for the Joyroom JR-FB3 Funpods Series True Wireless Earphones:

Feature	Detail
Model Number	JR-FB3
Connectivity	Bluetooth 5.3
Noise Control	Active Noise Cancellation (DNC)
Battery Life (Earbuds)	Up to 7 hours (approximate, single charge)
Battery Life (with Case)	Up to 35 hours
Charging Time	Approx. 1.5 hours (earbuds and case)
Charging Case Battery Capacity	400mAh
Water Resistance Rating	IP54
Control Method	Touch
Material	ABS, PC Plastic
Item Weight	34 grams (total product)



Figure 7.1: Extended playtime capabilities.

8. Warranty and Support

8.1 Warranty Information

Joyroom products are typically covered by a manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included with your product or visit the official Joyroom website for specific warranty terms and conditions applicable to your region.

8.2 Customer Support

For further assistance, technical support, or inquiries regarding your Joyroom JR-FB3 Funpods Series True Wireless Earphones, please contact Joyroom customer service through their official website or the retailer from whom you purchased the product.

9. Official Product Videos

No official product videos from the seller were available for embedding based on the provided product data.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question