Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Forno C-FDWBI8067-24BLK

FORNO 24" Pozzo Dishwasher User Manual

Model: C-FDWBI8067-24BLK | Brand: Forno

Product Overview

The Forno 24" built-in dishwasher offers a compelling combination of cleaning performance, functionality, and aesthetics. Operating at a whisper-quiet 49 decibels, the Forno 24 ensures your kitchen remains a peaceful haven even during cleaning cycles. Operating the Forno 24 is a breeze. The dishwasher features an electronic control panel with a sleek LED display. The Forno 24 is an Energy Star-certified appliance, signifying its commitment to environmental responsibility. The FORNO 24" built-in dishwasher is more than just a kitchen appliance - it's a testament to superior craftsmanship, innovation, and thoughtful design.

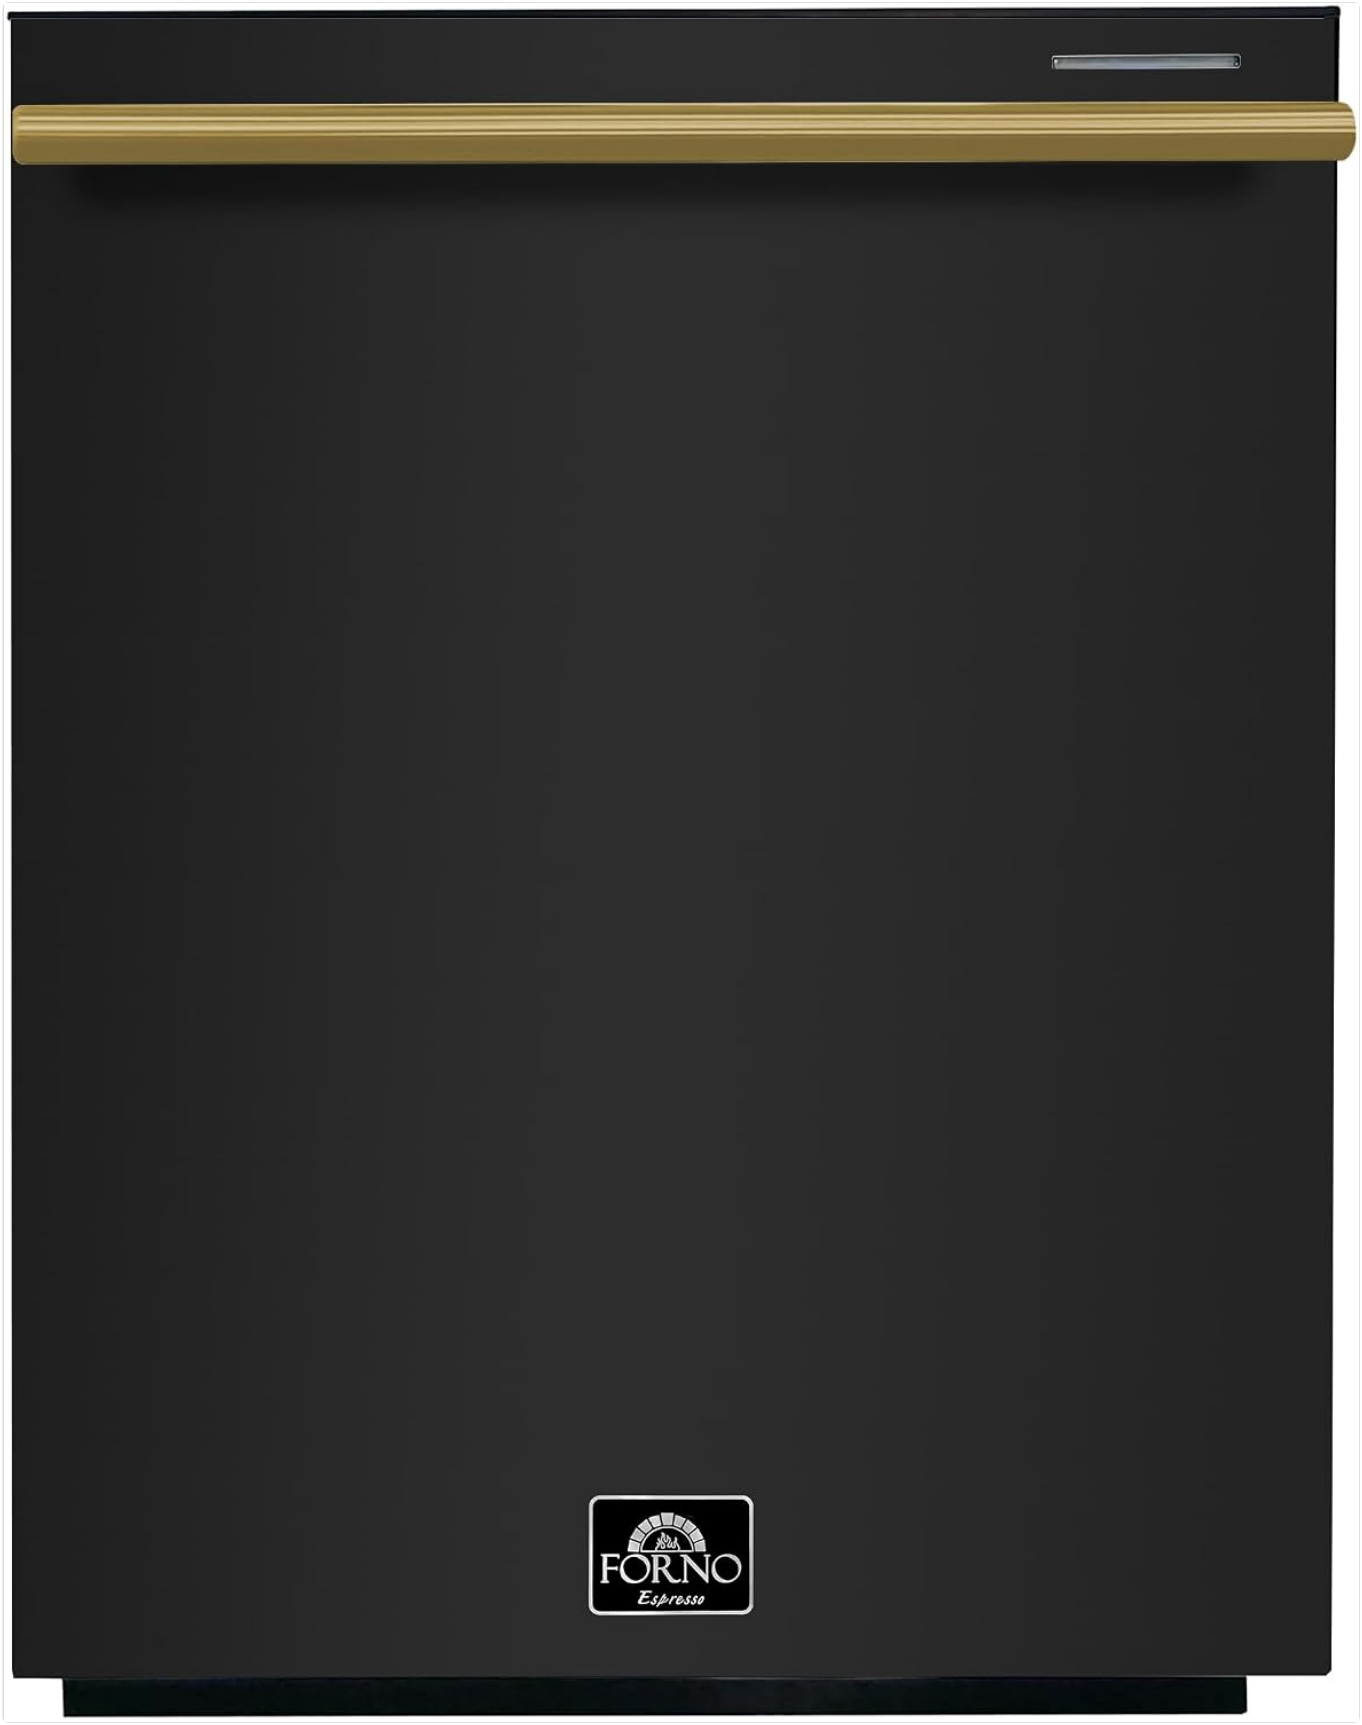


Figure 1: Front view of the FORNO 24" Pozzo Dishwasher in Black Stainless Steel with Antique Brass handles.

Key Features

- **Efficient Cleaning with Six Wash Programs:** Offers versatility with six different wash programs for various dish types, from heavily soiled pots and pans to lightly rinsed glasses. This promotes water and energy efficiency.
- **Low-Noise Operation (49 dBa):** Operates at an ultra-quiet level, minimizing disturbance during wash cycles, suitable for use at any time.

- **Durable Stainless-Steel Tub with Three Baskets:** Features a rust and corrosion-resistant stainless-steel tub. Three baskets provide flexible loading and ample capacity for dishes and utensils.
- **Touch Controls with Digital LED Display:** Electronic touch controls and an LED display simplify operation and cycle status monitoring.
- **Spacious and Flexible Loading with Three Racks:** Three dedicated racks offer ample space for a large number of dishes, utensils, and cookware. Adjustable racks allow customization for various dish shapes and sizes.

Setup & Installation

The FORNO 24" Pozzo Dishwasher is designed for built-in installation. Professional installation is recommended to ensure proper electrical and plumbing connections, and to comply with local building codes. Refer to the separate installation guide for detailed instructions on preparing the cabinet opening, connecting water supply and drain lines, and securing the unit.
Ensure the dishwasher is properly leveled for optimal performance and quiet operation. The unit requires a 120V, 20A electrical connection.

Operating Instructions

Control Panel and Cycles

The dishwasher features an electronic control panel with an LED display located on the top edge of the door. This panel allows for selection of wash cycles and options.



Figure 2: Interior view of the dishwasher showing the racks.

Available wash cycles include:

- Pots & Pans
- Normal Wash
- Quick Wash
- China/Crystal
- Rinse Only
- Energy Saver

Additional options include Air Exchange, Steam Wash, Vortex Wash, Heating Dry, and Sanitize. The Air Exchange function allows fresh air into the dishwasher every six hours to prevent odors.

Loading the Dishwasher

The dishwasher is equipped with two large racks and a top utensil rack, capable of holding up to 14 place settings. The racks are nylon-coated for durability.

- The **top utensil rack** is designed for easy placement of cutlery and can be customized to accommodate specific needs, such as large wine glasses.
- A **portable utensil basket** is also provided, which can store smaller items like bottle tops or cup lids.
- The **upper and lower rack tines** can be folded down to create more usable loading space for larger items like pots and pans.
- The **upper rack** is adjustable and easily movable, allowing for more space on either the top or lower shelf as needed.



Figure 3: Dishwasher interior demonstrating loading capacity.

Spray Arms and Cleaning System

The dishwasher features three strong spray arms for comprehensive cleaning. An optional Vortex disk-shaped sprayer is available to tackle the toughest dishes and pots. These spray arms are designed to effectively clean challenging dishes while also being gentle enough for delicate crystal glasses.



Figure 4: Interior view highlighting the spray arm.

The detergent dispenser and rinse aid compartment are conveniently located on the door for easy access and refilling.

Maintenance

To ensure optimal performance and longevity of your dishwasher, regular maintenance is essential.

Filter Cleaning

The dishwasher is equipped with a multiple micro-mesh filter system designed to capture the finest particles of soil and recirculate clean water. This system helps in washing away tough stains and maintaining cleaning efficiency.

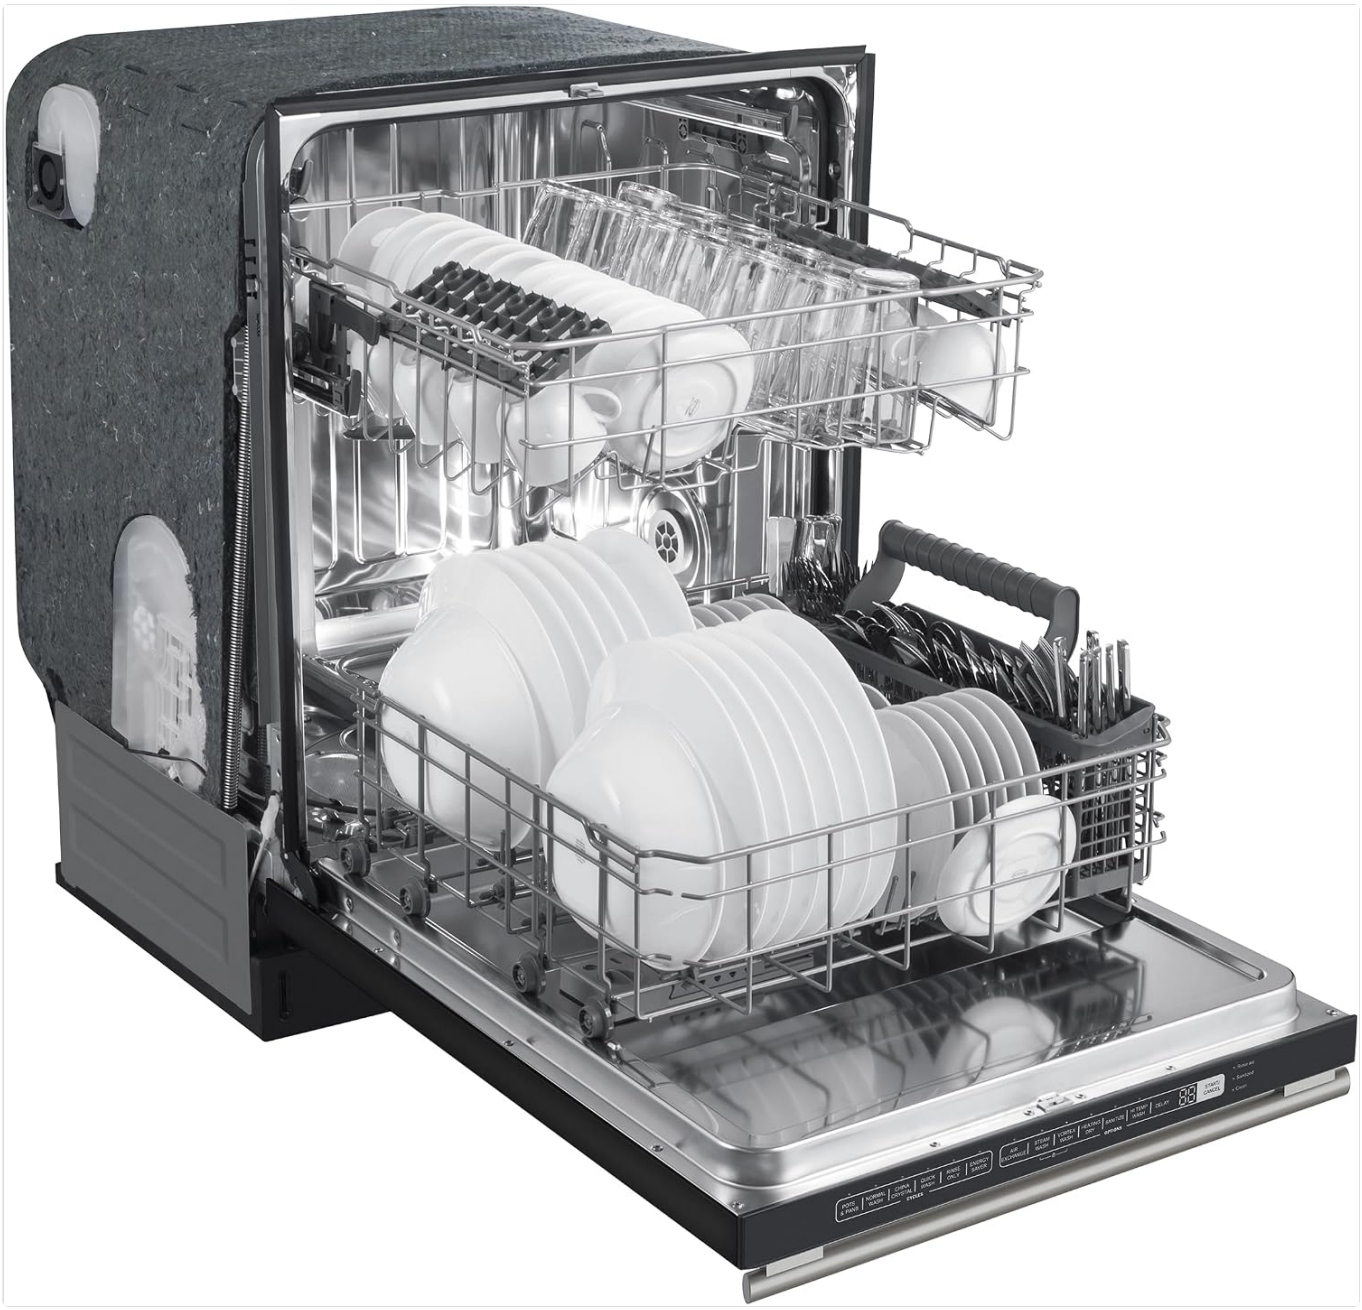


Figure 5: Close-up view of the dishwasher's micro-mesh filter system.

The soil filter is easy to remove and clean. Regularly inspect and clean the filter to prevent blockages and ensure the dishwasher runs at its optimum efficiency.

Troubleshooting

If you encounter any issues with your FORNO 24" Pozzo Dishwasher, please refer to the following common troubleshooting tips. For more complex problems, contact customer support.

- **Dishwasher not starting:** Ensure the door is fully closed and latched. Check if the power cord is securely plugged in and the circuit breaker has not tripped.
- **Dishes not clean:** Verify that the spray arms are not blocked by dishes. Ensure the filter is clean and properly installed. Use the correct amount and type of detergent.
- **Excessive noise:** Check for any foreign objects inside the dishwasher. Ensure dishes are loaded correctly and not interfering with spray arms.
- **Water not draining:** Inspect the drain hose for kinks or blockages. Clean the filter system.

Specifications

Attribute	Value
Product Type	Built-in Dishwasher
Model Name	C-FDWBI8067-24BLK
Brand	Forno
Color	Black
Material	Stainless Steel
Noise Level	49 dB
Number of Cycles	6
Number of Place Settings	14
Control Type	Touch
Display Type	LED
Voltage	120 Volts
Amperage	20 Amps
Product Dimensions (D x W x H)	26.54" x 23.85" x 33.74"
Item Weight	102 Pounds
Tub Material	Stainless Steel
Rack Material	Nylon-coated Metal
Included Components	Dishwasher, Drain Hose

Warranty & Support

The FORNO 24" Pozzo Dishwasher comes with a**2-Year Limited Warranty**. This warranty covers defects in materials and workmanship under normal use.
For customer support, technical assistance, or warranty claims, please refer to the contact information provided in your product packaging or visit the official Forno website. You can also find additional support resources at Forno Store on Amazon.

Product Video Overview

▶ **Watch video online**
FORNO Pozzo 24" Dishwasher Stainless Steel Brass Handles

Video 1: A comprehensive overview of the FORNO Pozzo 24" Dishwasher, highlighting its features, interior design, and operational aspects.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D1YMYRX1

More documents and user manuals: **https://manuals.plus/**