Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

VEVOR YY-R108

VEVOR Restaurant Pager System Instruction Manual

Model: YY-R108

Introduction

This manual provides comprehensive instructions for the VEVOR Restaurant Pager System, Model YY-R108. This wireless system is designed to streamline customer flow and improve service efficiency in various environments such as restaurants, food trucks, churches, nurseries, and hospitals. It features a 999-channel wireless touch keyboard transmitter and 20 guest pagers with vibration, flashing, and buzzer alert modes, offering a reliable communication solution over a 500-meter range.

Package Contents

Before you begin, please ensure all items are present in your package:

- 1 x Wireless Touch Keyboard Transmitter
- 20 x Guest Pagers (Round, Touch Screen)
- 1 x Power Adapter
- User Manual (this document)
- Other accessories as specified by VEVOR.



Figure 1: System components including the keypad, 20 pagers, and power adapter.

Setup

1. Initial Charging

Place all pagers onto the charging base. Ensure the power adapter is connected to the charging base and a power outlet. The pagers will indicate charging status. A full charge takes approximately 4 hours and provides up to 24 hours of standby time or 20 hours of active use.



Figure 2: Pagers on charging base, illustrating charging and battery life.

2. Setting Pager Numbers (Pairing)

To assign or re-assign a number to a pager:

1. Carefully remove the shell plate from the pager to access the internal buttons.
2. Press the upper corner button and the front button simultaneously to enter pairing mode. The pager's indicator lights will flash.
3. On the keypad transmitter, enter the desired pager number (e.g., "01" for pager 1).
4. Press the "CALL" button on the keypad. The pager will ring, flash, and vibrate, confirming successful pairing.
5. Replace the shell plate on the pager.

▶ **Watch video online**

How to Set Up the Pagers Number?

Video 1: Instructions on how to set up the pager number by entering pairing mode and using the keypad.

3. Setting Keypad ID

To change the keypad's ID:

1. Within 3 seconds of plugging in the keypad transmitter, quickly press the "DEL" button multiple times.
2. Enter the new desired ID number.
3. Press the "CALL" button to save the new ID. The setup is complete.

▶ **Watch video online**

How to Set Up the Keypad ID?

Video 2: Guide to setting the Keypad ID by pressing the DEL button and entering a new number.

Operating Instructions

1. Calling a Pager

To call a customer:

1. Ensure the pager is charged and within range.
2. On the keypad transmitter, enter the number of the pager you wish to call.
3. Press the "CALL" button. The corresponding pager will activate its alert modes (vibration, flash, and/or beep).



Figure 3: Keypad transmitter with digital display for calling pagers.

2. Alert Modes

The pagers offer three distinct alert modes: vibration, beep, and flash. These modes ensure effective notification even in noisy environments. The digital tube on the pager displays the menu number.



Figure 4: Pager features and available alert modes.

3. Setting Pager Ringing Time

To adjust how long a pager alerts:

1. Remove the shell plate from the pager.
2. Press the front button repeatedly. Each press cycles through different ringing durations (e.g., 8s, 16s, 24s, 32s, 40s), indicated by the LED lights.
3. Stop pressing when the desired duration is selected. The setting is automatically saved.
4. Replace the shell plate.

▶ **Watch video online**

How to Set the Pagers Ringing Time?

Video 3: Instructions for setting the pager's ringing duration by cycling through options with a button press.

4. Turning Off the Pager Ringer

To disable the pager's audible alert (ringer):

1. Remove the shell plate from the pager.
2. Press the front button repeatedly until all LED lights are off. This indicates the ringer is disabled.
3. The setup is complete. Replace the shell plate.

▶ **Watch video online**
How to Turn Off the Pager Ringer?

Video 4: Guide on how to turn off the pager ringer by pressing the front button until all lights are off.

5. System Shutdown

To shut down all pagers simultaneously:

1. Place all pagers back into the keyboard base.
2. On the keypad, type "99" and then press the "CALL" button. All pagers will turn off.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the keypad and pagers. Avoid abrasive cleaners or solvents.
- **Battery Care:** The pagers feature a 250mAh lithium polymer battery. For optimal battery life, avoid fully discharging the pagers frequently. Charge them regularly.
- **Storage:** When not in use for extended periods, store the system in a cool, dry place. Ensure pagers are partially charged before storage.
- **Range:** The system has a maximum unobstructed range of 500m (1640 ft). Obstacles like walls and metal structures can reduce this range.

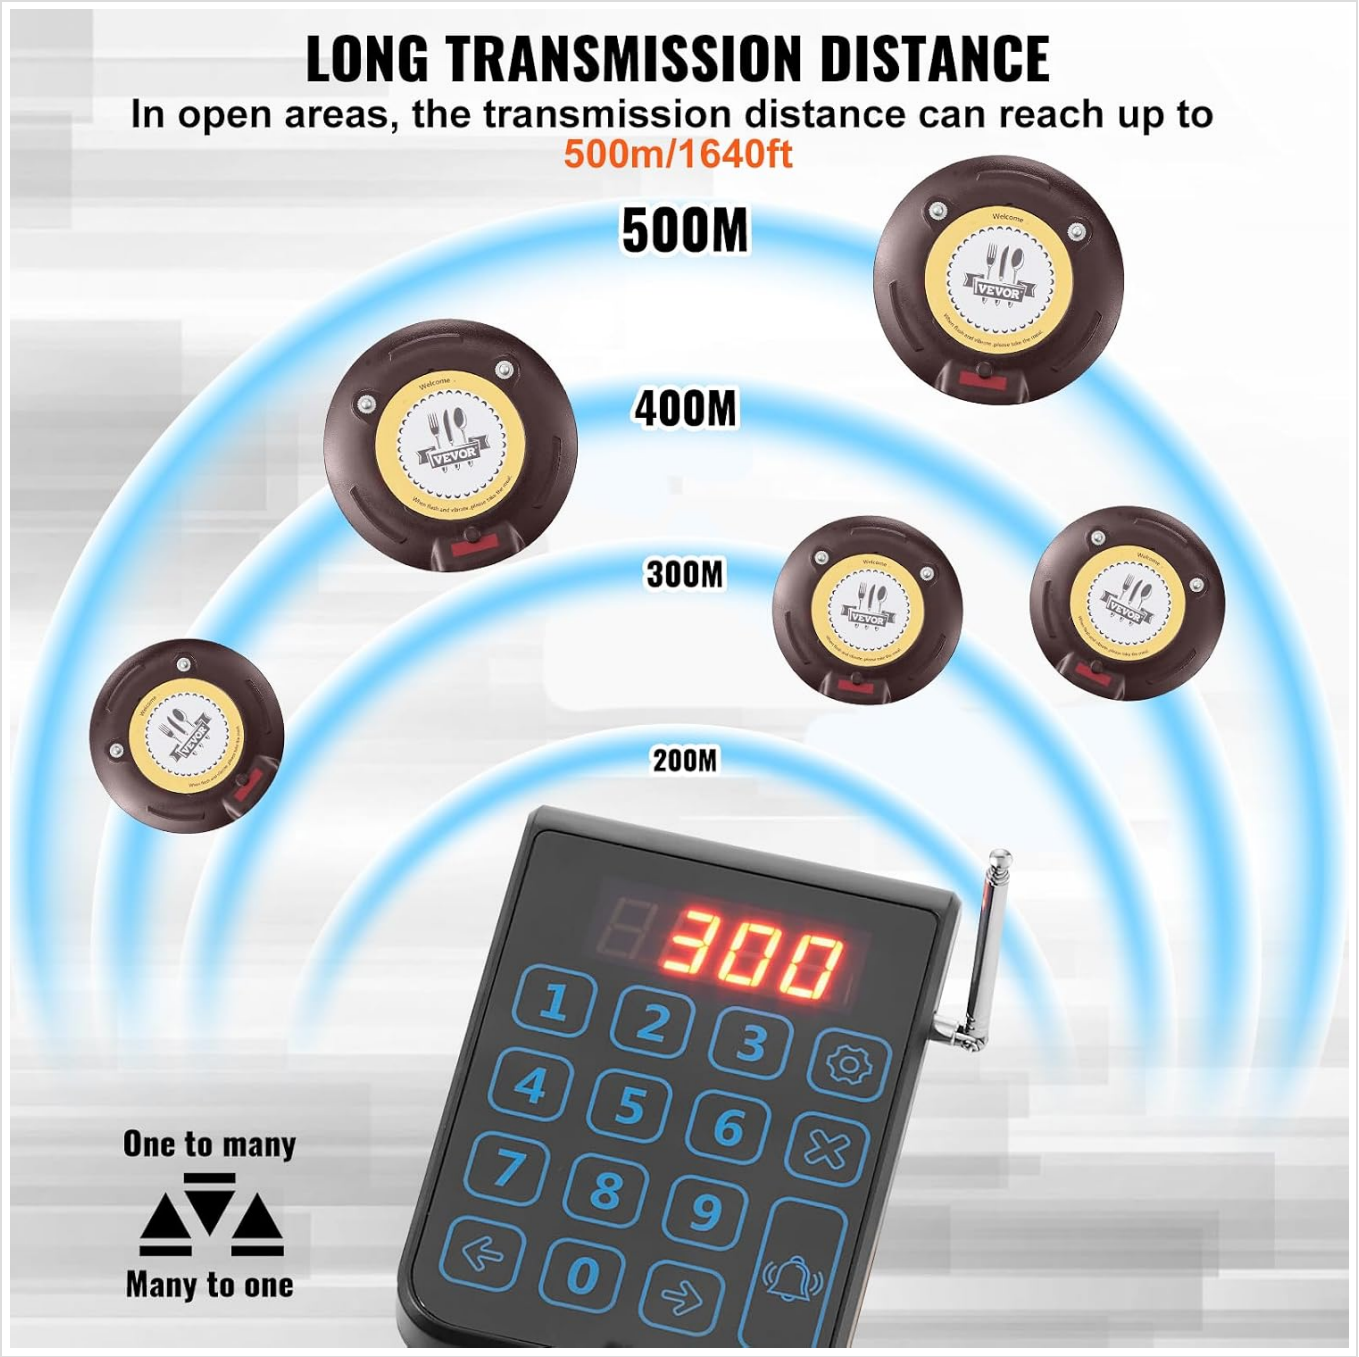

Figure 5: Illustration of the system's effective transmission range.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Pager not responding to call	Pager is out of range. Pager battery is low or dead. Pager is not correctly paired. Incorrect pager number entered.	Move pager closer to the transmitter. Place pager on charging base. Re-pair the pager following "Setting Pager Numbers" instructions. Verify the entered pager number.
Short transmission range	Obstructions (walls, metal structures). Interference from other wireless devices.	Relocate the transmitter to a more open area. Minimize other wireless devices in the vicinity.

Problem	Possible Cause	Solution
Pager not charging	Pager not properly seated on the charging base. Charging base not powered. Damaged pager or charging base.	Ensure firm contact between pager and charging pins. Check power adapter and outlet connection. Contact customer support if damage is suspected.
Keypad unresponsive	Power issue. Keypad malfunction.	Check power connection. Restart the keypad by unplugging and re-plugging. Contact customer support.

Specifications

Feature	Detail
Model Number	YY-R108
Number of Pagers	20 (Touch Screen, Round)
Transmitter Channels	999
Wireless Range	Up to 500m / 1640 ft (unobstructed)
Pager Battery	250mAh Lithium Polymer
Charging Time	Approx. 4 hours
Standby Time	Up to 24 hours
Alert Modes	Vibration, Beep, Flash
Product Dimensions	47.24 x 39.37 x 0.94 inches (packaging)
Item Weight	3.53 pounds (overall system)

Warranty and Support

VEVOR products are designed for reliability and performance. For warranty information, technical support, or service inquiries, please contact VEVOR customer support through their official website or the contact details provided with your purchase. Please have your model number (YY-R108) and purchase date available when contacting support.

© 2026 VEVOR. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D25DMF3N

More documents and user manuals: **https://manuals.plus/**