Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Eureka NEW430BL

Eureka RapidWash NEW430BL Cordless Wet Dry Vacuum Cleaner User Manual

Model: NEW430BL
Brand: Eureka

Introduction

The Eureka RapidWash NEW430BL is a versatile 2-in-1 cordless wet and dry vacuum cleaner designed to simplify your floor cleaning routine. It effectively tackles both wet and dry messes, offering powerful suction and convenient features like self-cleaning and self-drying. This manual will guide you through the proper use and maintenance of your new appliance to ensure efficient and long-lasting performance.




The Eureka RapidWash NEW430BL Cordless Wet Dry Vacuum Cleaner with its accessories.

What's in the Box

Please ensure all components are present before initial setup:

- Main Unit
- Handle
- Docking Station
- Cleaning Brush
- Sponge
- Adapter
- User Manual (this document)

- Cleaning Solution

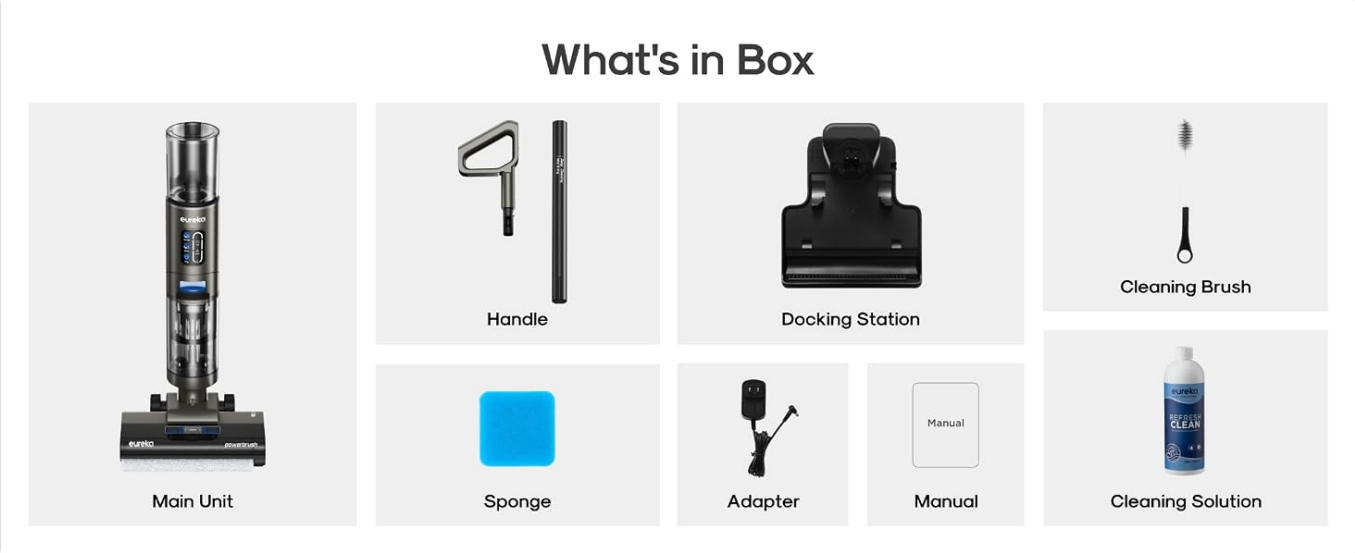

Visual representation of the contents included with your Eureka RapidWash NEW430BL.

Setup

Assembly

1. Carefully unpack all components from the box.
2. Insert the handle into the main unit until it clicks securely into place.
3. Place the docking station on a flat, stable surface near a power outlet.

Charging the Battery

Before first use, fully charge the vacuum cleaner. The LED display will indicate battery status.

1. Place the assembled vacuum cleaner onto the docking station.
2. Connect the adapter to the docking station and plug it into a power outlet.
3. Allow the unit to charge until the battery indicator on the LED display shows a full charge. A full charge provides up to 25 minutes of runtime.

Filling the Clean Water Tank

The vacuum cleaner features a 770ml large-capacity clean water tank.

1. Remove the clean water tank from the main unit.
2. Open the tank cap and fill with clean water. You may add the provided cleaning solution according to the recommended ratio (e.g., 30% cleaner to 70% water, adjust as needed).
3. Securely close the tank cap and reinsert the clean water tank into the main unit.

Operating Instructions

Power On/Off and Mode Selection

The vacuum cleaner features an intuitive LED display and voice prompts to guide you.



The LED display provides real-time updates on cleaning modes and battery status.

- Press the Power button to turn the unit on or off.
- Select from three cleaning modes:
  - **ECO Mode:** Intelligently detects stain size and adjusts suction power for efficient cleaning.
  - **Dry Mode:** Specifically designed for vacuuming dry messes on wet floors, ensuring fast drying.
  - **Turbo Mode:** Provides maximum suction for tough messes.
- The LED display will show the current mode and battery level.
- Helpful voice prompts will notify you of cleaning status, such as "Please empty dirty water tank" or "Low battery, Recharging."

Vacuuming and Mopping

The Eureka RapidWash NEW430BL cleans wet and dry messes in a single step.



Vacuum and Mop in One Step

Cleaning up wet and dry messes in a single step.

Clean up wet and dry messes simultaneously with ease.

- Ensure the clean water tank is filled and the dirty water tank is empty before starting.
- Press the Power button and select your desired cleaning mode.
- The self-propelled function provides forward power assistance, making the unit easy to maneuver. Simply steer your floor washer to clean effortlessly.



The self-propelled design ensures effortless maneuverability.

- Move the vacuum cleaner across the floor at a steady pace. The flexible brush head and swivel steering allow for easy navigation around furniture.

0mm Edge Cleaning Technology

The upgraded design ensures thorough cleaning along edges and corners.



Effectively cleans every edge and corner without missing spots.

- Position the vacuum cleaner with the brush head flush against walls or baseboards to utilize the 0mm edge cleaning feature.
- Move slowly along edges to ensure comprehensive cleaning.

Maintenance

Self-Cleaning and Self-Drying Cycle

This feature automatically cleans and dries the brush roller and internal tubing.



Convenient maintenance without manual effort through self-cleaning and self-drying.

1. After each use, place the vacuum cleaner back on its docking station.
2. Ensure the clean water tank has sufficient water and the dirty water tank is empty.
3. Press the self-clean button (refer to your unit's specific button layout). The cycle will flush the inner tubing and brush roller in approximately 40 seconds.
4. Following the self-clean, the unit will thoroughly dry the roller brush with cool air for 1.5 hours, which helps reduce odors.

Emptying the Dirty Water Tank

The dirty water tank collects all the liquid and debris from your cleaning sessions. It should be emptied after each use, especially before running the self-cleaning cycle.

1. Remove the dirty water tank from the main unit.
2. Carefully open the tank and dispose of the contents.
3. Rinse the tank, lid, filter, and filter basket with clean water. You may use mild soap if necessary.

4. Allow all components to air dry completely before reassembling and reinserting the tank.

Tangle-Free Nozzle Design

The brush roller features a comb and scraper to prevent hair tangling.



The tangle-free nozzle design prevents hair from wrapping around the brush roller.

- While the design minimizes tangles, periodically check the brush roller for any accumulated hair or debris.
- If necessary, use the provided cleaning brush to remove any stubborn tangles or debris from the roller and its housing.

Troubleshooting

If you encounter issues with your Eureka RapidWash NEW430BL, please refer to the following common solutions:

Problem	Possible Cause	Solution
Unit does not power on	Low battery; Not properly docked; Power adapter issue	Ensure unit is fully charged; Check docking connection; Verify power adapter is plugged in correctly.
No water dispensing / Poor cleaning performance	Clean water tank empty; Tank not properly installed; Nozzle clogged	Refill clean water tank; Reinstall tank securely; Check and clear any clogs in the nozzle or brush roller.
Dirty water tank overflows / Suction is weak	Dirty water tank full; Filter clogged; Brush roller tangled	Empty dirty water tank; Clean or replace filter; Remove tangled hair/debris from brush roller.
Unpleasant odor from unit	Dirty water tank not cleaned; Brush roller not dried properly	Empty and thoroughly clean dirty water tank; Ensure self-drying cycle completes after each use.

If the problem persists after attempting these solutions, please contact Eureka customer support for further assistance.

Specifications

Feature	Detail
Brand	Eureka
Model Name	Cordless Wet Dry Vacuum Cleaner (NEW430BL)
Special Feature	Spotless Cleaning, Wet/Dry, Wheels, Cordless, Bagless
Filter Type	Foam
Capacity (Water Tank)	0.8 Liters (770ml)
Wattage	160 watts
Runtime	Up to 25 minutes
Recommended Uses	Hard Floor, Tile Floor, Hardwood, Bare Floor
Form Factor	Stick
Color	Blue
Product Dimensions	10.63"L x 11.1"W x 44.09"H
Battery Type	Rechargeable Lithium Ion (1 included)
Noise Level	80 dB
Control Method	Push Button, Touch
Number of Speeds	3

Feature	Detail
Item Weight	8.5 pounds
UPC	840296511428

Warranty and Support

For warranty information and customer support, please refer to the official Eureka website or contact their customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.
For additional resources and product registration, visit:www.eureka.com

© 2024 Eureka. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D269J2G2

More documents and user manuals: **https://manuals.plus/**