Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Motorola PB0T0004US

Motorola Edge 2024 User Manual

Brand: Motorola | **Model:** PB0T0004US

This manual provides essential information for setting up, operating, and maintaining your Motorola Edge 2024 smartphone.

1. Introduction

The Motorola Edge 2024 is an unlocked smartphone designed for the US market, featuring 8GB RAM and 256GB storage. It boasts an advanced 50MP camera with enhanced low-light capabilities, ultrafast 68W TurboPower charging, and a beautifully curved design with vegan leather and IP68 water protection. Experience seamless performance with its Snapdragon processor and cinematic pOLED display.

Product Overview

Your browser does not support the video tag.

Official Motorola Edge 2024 product overview video, highlighting key features and design.

2. What's in the Box

Your Motorola Edge 2024 package includes the following items:

- Motorola Edge 2024 Device
- SIM Tray Ejector Tool
- USB Cable (for charging and data transfer)
- Quick Start Guides and Documentation

Note: A power adapter is not included in the box and must be purchased separately to utilize the 68W TurboPower charging.

3. Physical Overview

Familiarize yourself with the various components and features of your Motorola Edge 2024.




Front and Back View: This image displays the sleek front with its curved pOLED display and the textured vegan leather back, featuring the Motorola logo and the dual camera module.



Right Side View: Shows the power button and volume rocker. The Quick Button, a customizable hardware button, is also visible on this side.



Bottom View: Features the USB-C charging port, microphone, and speaker grille. The SIM card tray is also located on the bottom edge.

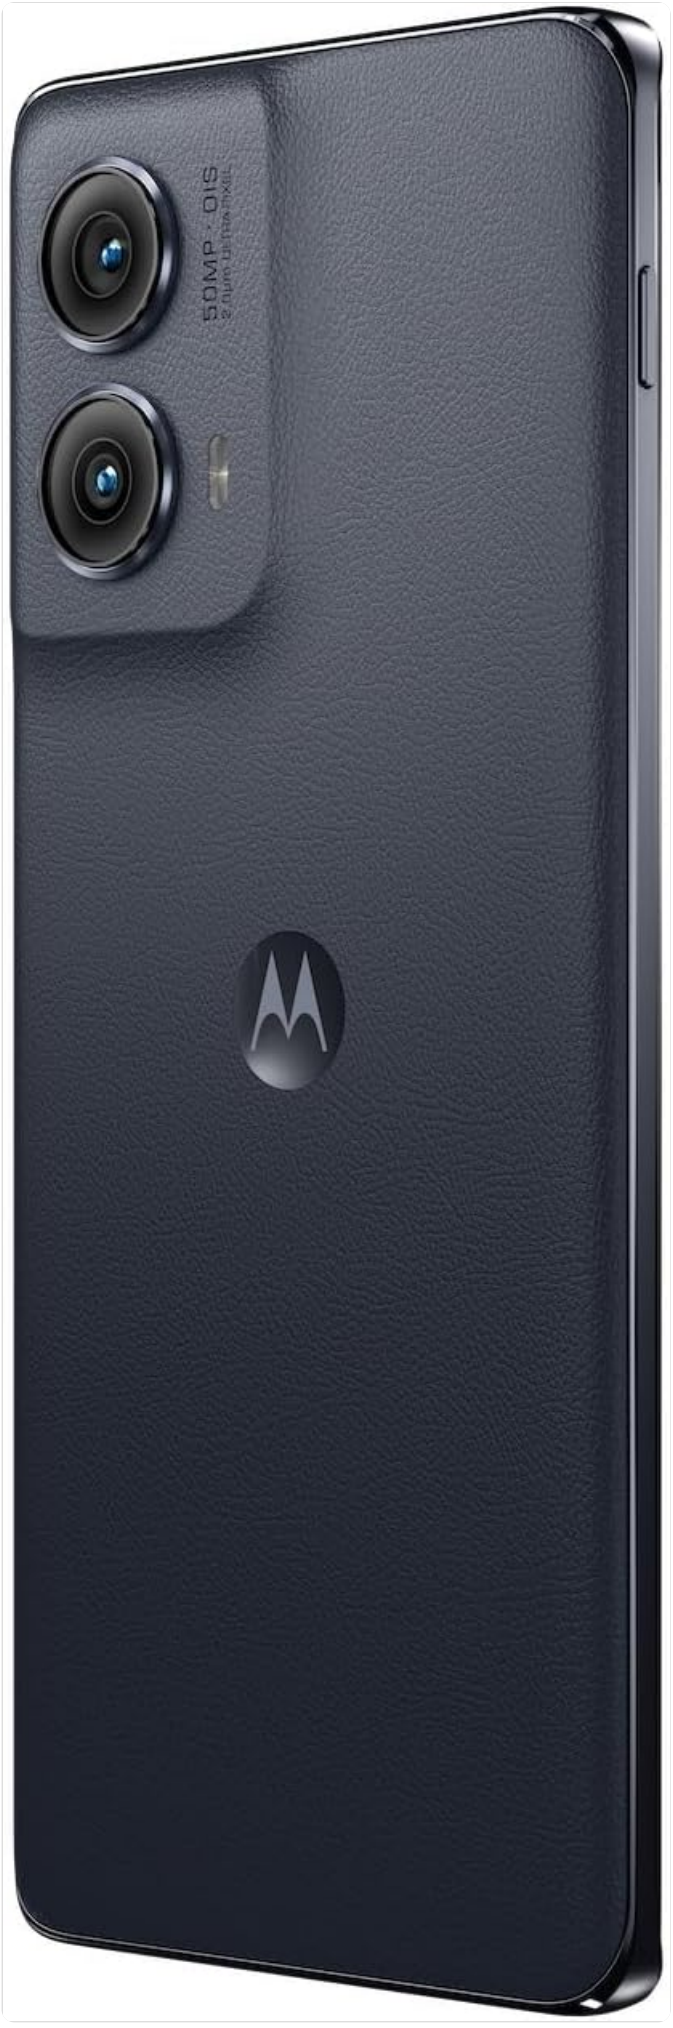

Top View: Displays a secondary microphone for noise cancellation.



Rear Camera Module: A closer look at the 50MP main camera with Optical Image Stabilization (OIS) and the ultrawide camera, along

with the LED flash.

4. Setup

Follow these steps to set up your new Motorola Edge 2024 and transfer your data.

4.1 Initial Power-On and Basic Setup

1. **Power On:** Press and hold the power button on the right side of the device until the Motorola logo appears.
2. **Language Selection:** Choose your preferred language from the list.
3. **Connect to Wi-Fi:** Select your Wi-Fi network and enter the password to connect to the internet. This is crucial for completing the setup and downloading updates.
4. **Copy Apps & Data:** You will be prompted to copy data from an old device. Proceed to the next section for detailed data transfer instructions.
5. **Google Account:** Sign in with your Google account or create a new one. This is essential for accessing the Play Store, Gmail, and other Google services.
6. **Security Setup:** Set up a screen lock (PIN, pattern, password, fingerprint, or face unlock) to protect your device.
7. **Review & Accept:** Review and accept the terms and conditions to complete the setup process.

4.2 Data Transfer

You can transfer data from your old Android or iPhone device to your new Motorola Edge 2024.

Transferring Data from an Android Device

Your browser does not support the video tag.

Detailed instructions on how to transfer data from an old Android phone to your new Motorola device using wired or wireless methods.

Transferring Data from an iPhone Device

Your browser does not support the video tag.

Detailed instructions on how to transfer data from an iPhone to your new Motorola device, including using the "Switch to Android" app.

5. Operating Your Device

Learn about the key features and functionalities of your Motorola Edge 2024.

5.1 Quick Button and Gestures

The Motorola Edge 2024 features a customizable Quick Button on the side for one-touch access to your favorite apps or functions. Additionally, Motorola's intuitive gestures allow for quick actions:

- **Quick Capture:** Twist your wrist twice to instantly open the camera.
- **Fast Flashlight:** Shake your phone twice to turn the flashlight on or off.
- **Three-finger Screenshot:** Touch and hold the screen with three fingers to capture a screenshot.
- **Lift to Unlock:** Lift your phone to automatically wake the screen and prepare for face unlock.
- **Flip for DND:** Place the phone face down to activate Do Not Disturb mode.

5.2 Camera Features

The 50MP main camera with Ultra Pixel technology and Optical Image Stabilization (OIS) allows for sharp and bright photos, even in low-light conditions. The 13MP ultrawide camera offers a 120-degree field of view, perfect for

landscapes or group shots, and supports macro vision for close-up details.

- **Low-Light Photography:** Utilize Google Auto Enhance and Ultra Pixel technology for improved night shots.
- **Video Recording:** Record videos in 4K at 30 frames per second (fps) or 1080p at up to 60 fps.

6. Maintenance

Proper care and maintenance will ensure the longevity of your device.

6.1 Charging

The Motorola Edge 2024 supports ultrafast 68W TurboPower charging, allowing you to get significant battery life in just 15 minutes. It also supports 15W wireless charging.

- For optimal charging speed, use a compatible 68W TurboPower charger (sold separately).
- Wireless charging requires a Qi-compatible wireless charger.

6.2 Water Protection

Your device is designed with IP68 water protection, meaning it can withstand immersion in up to 1.5 meters of fresh water for up to 30 minutes. This protection is for accidental spills, splashes, or light rain. It is not designed to work while submerged underwater. Do not expose to pressurized water or liquids other than fresh water. Resistance may decrease with normal wear and tear. Do not attempt to charge a wet phone.

7. Troubleshooting

If you encounter any issues with your Motorola Edge 2024, try the following common troubleshooting steps:

- **Restart Device:** A simple restart can often resolve minor software glitches.
- **Check for Software Updates:** Ensure your device is running the latest software version by checking in Settings > System > System updates.
- **Clear Cache:** If an app is misbehaving, try clearing its cache in Settings > Apps > [App Name] > Storage & cache > Clear cache.
- **Factory Reset:** As a last resort, you can perform a factory reset (Settings > System > Reset options > Erase all data (factory reset)). **Warning: This will erase all data on your device. Back up important data before proceeding.**
- **Contact Support:** For persistent issues, refer to the Motorola Support website or contact customer service.

8. Specifications

Feature	Detail
Model Name	motorola edge 2024
Operating System	Android 14
Display Size	6.6 Inches pOLED
Display Resolution	2400 x 1080
Refresh Rate	144 Hz

Feature	Detail
Processor	Snapdragon 7s Gen 2
RAM	8 GB
Storage	256 GB
Rear Camera	50MP (OIS) + 13MP Ultrawide/Macro
Front Camera	(Not specified in provided data, usually around 32MP for Edge series, but will omit if not explicitly stated)
Battery Capacity	5000 mAh
Wired Charging	68W TurboPower
Wireless Charging	15W
Water Protection	IP68
Dimensions	2.83 x 0.32 x 6.28 inches
Weight	6.1 ounces (174 Grams)
Connectivity	5G, Bluetooth, Wi-Fi, USB, NFC

9. Warranty and Support

Motorola provides a limited warranty for its products. For detailed warranty information, please refer to the warranty card included in your product packaging or visit the official Motorola support website.

For technical assistance, FAQs, and additional resources, please visit theMotorola Support website. You can also find contact information for customer service on their website.

© 2024 Motorola. All rights reserved.
Motorola and the Stylized M Logo are trademarks of Motorola Trademark Holdings, LLC.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D2JB6HP5

More documents and user manuals: **https://manuals.plus/**