VJIANGER WX02-6K-Black

VJIANGER 2025 Upgrade 6K Digital Camera User Manual

Model: WX02-6K-Black

1. INTRODUCTION

This manual provides detailed instructions for the VJIANGER 2025 Upgrade 6K Digital Camera, Model WX02-6K-Black. It covers setup, operation, maintenance, and troubleshooting to help you maximize your camera's performance and capture high-quality photos and videos.

2. WHAT'S IN THE BOX

Please verify that all items listed below are included in your package:

- VJIANGER 6K Digital Camera (WX02-6K-Black) x1
- 32GB Micro SD Card x1
- Type-C USB Cable x1
- Rechargeable Lithium Ion Batteries x2
- User Manual x1
- 52mm Wide Angle Lens x1
- Macro Lens x1
- Dual Battery Charger x1

Note:Not a professional camera, suitable for beginners

Image: All included accessories for the VJIANGER 6K Digital Camera.

3. PRODUCT FEATURES

The VJIANGER 6K Digital Camera is designed for versatility and ease of use, offering a range of features for both photography and videography:

- **High Resolution:** Capture stunning 64MP photos and record videos in 6K Ultra HD at 30 frames per second.
- **Versatile Lenses:** Equipped with 52mm wide-angle and macro lenses, allowing for diverse shooting scenarios from expansive landscapes to detailed close-ups.
- **Digital Zoom:** Features 16X digital zoom to bring distant subjects closer.
- **Autofocus:** Ensures sharp and clear images without manual focus adjustments.
- **180° Flip Screen:** The rotatable screen is perfect for vlogging, selfies, and creative low-angle shots.
- **Webcam Functionality:** Connect to your PC via USB to use the camera as a high-quality webcam for video calls and live streaming.
- **Wi-Fi Connectivity:** Seamlessly transfer photos and videos to your smartphone, or control the camera remotely via a dedicated app.
- **Multiple Shooting Modes:** Includes time-lapse, looping video, slow-motion video, continuous shooting, smile face detection, beauty face, self-timer, and over 10 creative filters.

- **HDMI Output:** View your content directly on a larger screen by connecting to a TV (HDMI cable not included).
- **Compact Design:** Lightweight and portable, making it an ideal travel companion.

Image: The camera's 64MP photo and 6K video resolution capabilities.

52MM WIDE ANGLE/MACRO LENSES

*Wide-angle lens ensures that you capture the entire scene in stunning detail

*Macro lens attachment for close ups

120°Extra Field of View

Image: Explanation of the 52mm wide angle and macro lenses.

Video: A demonstration of the 6K Vlogging Camera with its 180-degree flip screen, showcasing its use for vlogging.

Webcam Function & Live Streaming

Insert the USB cable and switch the camera to "PC Camera" mode,
perfect for video calling, live streaming, blogging, vlogging, online teaching, etc

Image: The camera's webcam function and live streaming capabilities.

Built-in Wi-Fi

Make uploading and sharing your content both quick and seamless

Image: Built-in Wi-Fi for quick content sharing and remote control. Scan the QR code on the camera screen to download the app.

Pocket Sized Digital Camera

Enjoy photography all day with a camera that weighs only 0.5LBS

Image: The camera's pocket-sized design for easy portability.

4. SETUP GUIDE

4.1 Battery Installation

The camera requires two Lithium Ion batteries (included). Open the battery compartment cover located at the bottom of the camera. Insert the batteries, ensuring they are oriented according to the polarity indicators inside the compartment. Close the cover securely.

4.2 Micro SD Card Installation

Locate the Micro SD card slot, usually next to the battery compartment. Insert the provided 32GB Micro SD card with the gold contacts facing down (or as indicated by the slot diagram) until it clicks into place. To remove, press the card gently until it springs out.

4.3 Lens Attachment

To attach the 52mm wide-angle or macro lens, align the mounting marks on the lens with those on the camera body. Gently push the lens onto the camera and twist clockwise until it locks securely into position. To remove, press the release button (if present) and twist counter-clockwise.

5. Operating Instructions

5.1 Power On/Off

Press and hold the power button (typically located on the top or side of the camera) for a few seconds to turn the camera on or off.

5.2 Photo Modes

Rotate the mode dial or navigate through the menu to select your desired photo mode. Options include:

- **Standard Photo:** For general photography.
- **Continuous Shooting:** Captures multiple photos in quick succession.
- **Timed Shooting (Self-Timer):** Delays the shutter release by 2s, 5s, 10s, or 15s.
- **Beauty Face:** Enhances facial features for portraits.
- **Smile Face Detection:** Automatically captures a photo when a smile is detected.
- **Filters:** Apply various creative filters to your photos.

Image: The camera's multi-function modes, including various photo and video options.

Smile Face Capture Function

Keep on tracking your smiling face and catch
your best moments whenever you want!

Image: Visual representation of the four main photography modes.
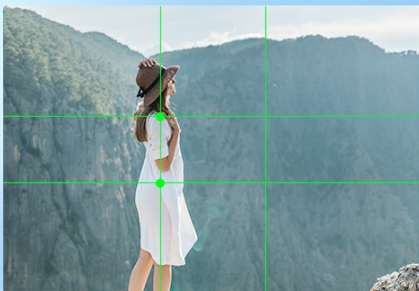
00:12:59

● REC
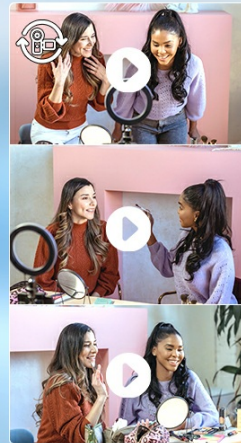
4 Video Modes

Video Mode

Time-lapse recording

Slow-motion recording

Loop recording

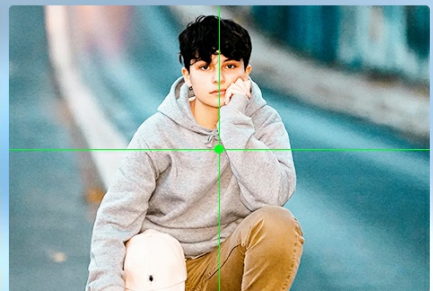Image: A selection of over 10 built-in filters to enhance your photos.

3 Framing Grid

Golden Ratio

Rule of Thirds

Cross shatch

Image: Demonstration of the Beauty Function for portrait enhancement.

Image: The Smile Face Capture Function for automatically taking photos when smiles are detected.

Image: Three framing grid options to assist with composition.

5.3 Video Modes

Switch to video mode to record high-quality footage. Available video modes include:

- **Standard Video:** Records in 6K Ultra HD.
- **Time-lapse Recording:** Captures frames at set intervals to create a sped-up video.
- **Slow-motion Recording:** Records at a higher frame rate for smooth slow-motion playback.
- **Loop Recording:** Continuously records, overwriting the oldest footage when the memory card is full.

Image: Visual representation of the four main video modes.

5.4 Zoom and Autofocus

Use the zoom controls (typically a rocker switch near the shutter button) to activate the 16X digital zoom. The camera's autofocus system will automatically adjust for clear focus on your subject.

Image: Demonstration of the 16X digital zoom capability.

5.5 Wi-Fi Connectivity

To connect your camera to a smartphone via Wi-Fi:

1. Turn on the camera's Wi-Fi function via the settings menu.
2. A QR code and Wi-Fi ID/password will appear on the camera screen.
3. Scan the QR code with your smartphone to download the companion app, or manually search for the app in your app store.
4. Connect your smartphone to the camera's Wi-Fi network using the provided ID and password.
5. Use the app for remote control, photo/video download, and playback.

Download the app here: https://qr24.cn/FypBbk

5.6 Webcam Function

To use your camera as a webcam:

1. Connect the camera to your computer using the supplied Type-C USB cable.

2. On the camera screen, select 'PC Camera' mode when prompted.
3. Your computer should recognize the camera as a webcam, which can then be selected in video conferencing or streaming software.

5.7 HDMI Output

Connect an HDMI cable (not included) from the camera's HDMI port to an HDMI input on your TV or monitor to view your media on a larger display.

5.8 Recording While Charging

The camera supports continuous operation while connected to a power source via the Type-C USB cable, allowing for extended recording sessions without interruption.
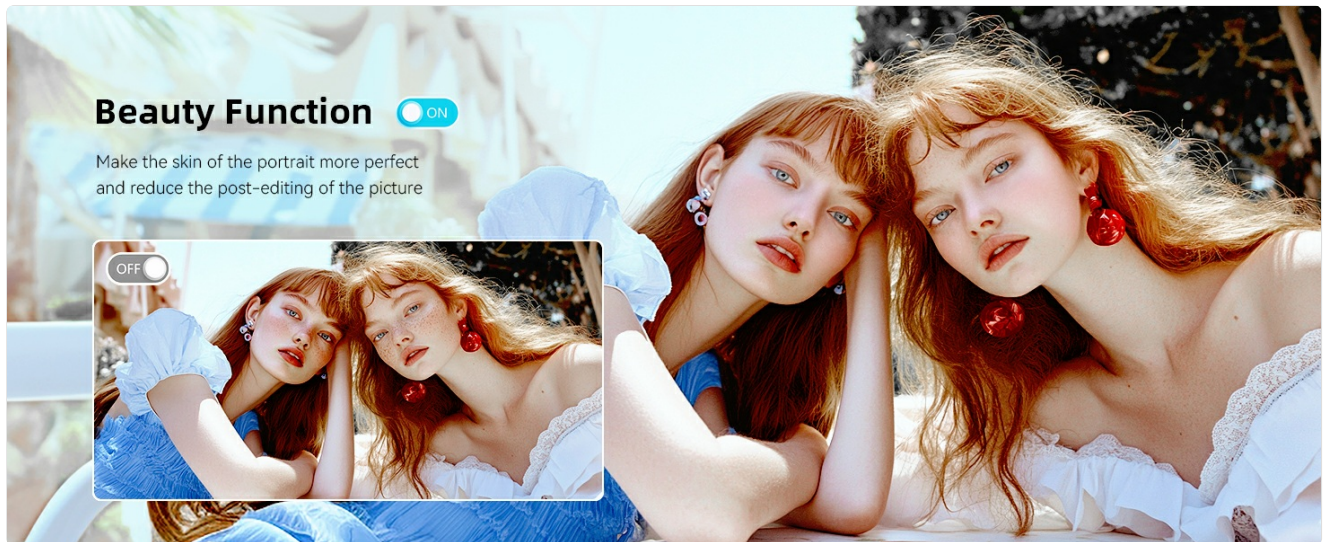
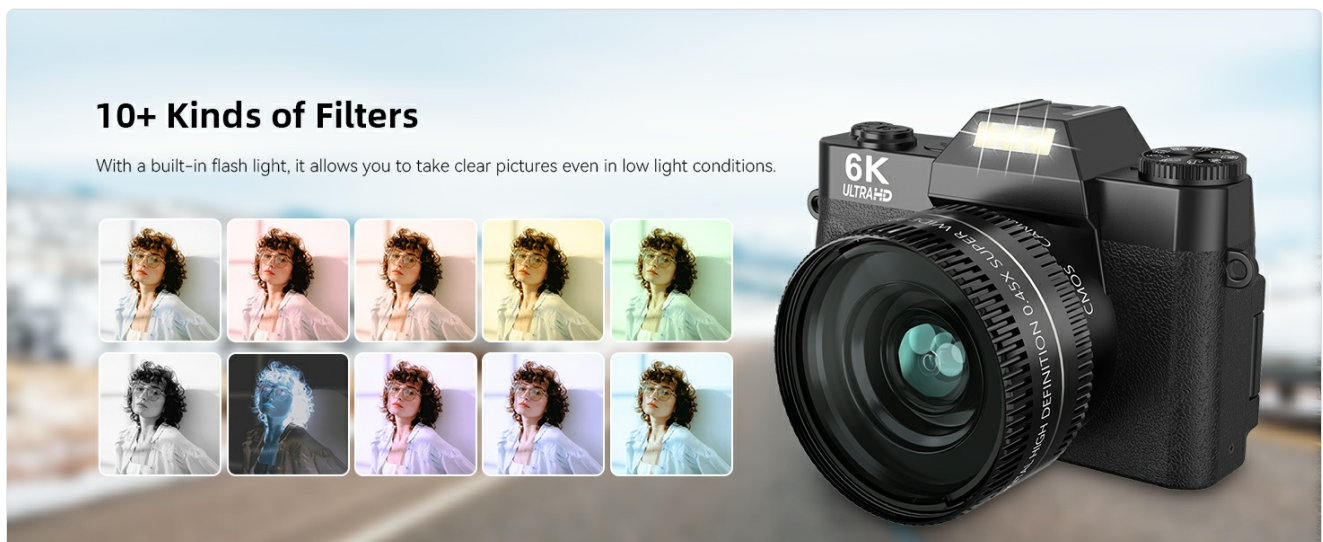Image: The camera's ability to record while charging, extending usage time.

Image: The camera's expandability options, including tripod mounting.

6. MAINTENANCE

To ensure optimal performance and longevity of your VJIANGER 6K Digital Camera, follow these maintenance guidelines:

- **Cleaning:** Use a soft, lint-free cloth to clean the camera body, lens, and screen. For stubborn smudges on the lens, use a specialized lens cleaning solution and cloth. Avoid using abrasive materials or harsh chemicals.
- **Storage:** Store the camera in a dry, cool place away from direct sunlight, high humidity, and extreme temperatures. If storing for extended periods, remove the batteries.

- **Battery Care:** Charge batteries fully before use. Avoid overcharging. If batteries are not used for a long time, charge them periodically to maintain their health.
- **SD Card:** Handle the Micro SD card with care. Avoid bending or exposing it to extreme conditions. Format the card periodically to maintain performance, backing up all data first.

7. TROUBLESHOOTING

If you encounter issues with your camera, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Camera not turning on	Ensure batteries are fully charged and correctly inserted. Try using the second battery.
Blurred photos	Verify autofocus is enabled. Ensure sufficient lighting. Clean the lens.
Short battery life	Ensure batteries are fully charged. Reduce screen brightness or turn off Wi-Fi when not in use. Consider carrying spare charged batteries.
Poor audio quality	Ensure the built-in microphone is not obstructed. For improved audio, consider connecting an external microphone via the 3.5mm jack.
Cannot connect to Wi-Fi	Ensure the companion app is installed on your smartphone. Double-check the Wi-Fi password. Restart both the camera and your phone.
SD card error	Ensure the SD card is inserted correctly. Format the SD card (this will erase all data). Try a different compatible SD card.

8. SPECIFICATIONS

Key technical specifications for the VJIANGER 6K Digital Camera:

Feature	Detail
Model Name	W02
Effective Still Resolution	64 MP
Video Resolution	6K UHD 2160p, 1080p
Frame Rate	60 fps (max)
Digital Zoom	16 x
Lens Type	Fixed (52mm wide angle & macro lens)
Screen Size	3 Inches
Display Type	LCD (flexible)
Flash Memory Type	Micro SD (32 GB included)
Connectivity Technology	Wi-Fi, USB, HDMI

Feature	Detail
Battery Type	Lithium Ion (2 included)
Battery Average Life	2 Hours
Item Weight	0.65 Kilograms
Compatible Mountings	1/4"-20 (Tripod)

9. WARRANTY AND SUPPORT

Your VJIANGER 6K Digital Camera comes with a standard manufacturer's warranty. For warranty details, technical support, or any product-related inquiries, please contact the seller directly through the Amazon platform.
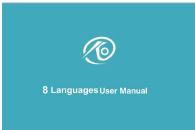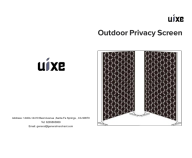

Image: Guide on how to contact the seller for support on Amazon.

Related Documents - WX02-6K-Black

[HEIYOUCAM and WorldGolbal Wireless Outdoor Security Cameras: User Manual and Product Details](#)
Explore the range of HEIYOUCAM and WorldGolbal wireless outdoor security cameras. This document provides details on models including IP66, BW4, QW5, 3MP, A20/A20QQ, and the Four Lens Four Screen camera. Features cover resolutions from 2K to 10K, advanced night vision, AI motion detection, two-way audio, IP66 waterproofing, and solar power options.

[WiMIUS P62 Projector: Frequently Asked Questions and Troubleshooting](#)
Find answers to common questions about the WiMIUS P62 projector, including troubleshooting tips for image quality, connectivity, sound issues, and screen mirroring.

[GardePro E9PCF [CLOSE FOCUS] Wi-Fi Trail Camera - Features & Specifications](#)
Detailed information on the GardePro E9PCF [CLOSE FOCUS] Wi-Fi trail camera, featuring advanced macro lens, 64MP photos, 1296P video, Wi-Fi connectivity, and 30m night vision.

[Camera Troubleshooting Guide and Connectivity Solutions](#)
A comprehensive guide for troubleshooting common camera issues, including internet connectivity, WiFi setup, image quality problems, video storage, password management, and intercom functionality. Provides step-by-step solutions and technical specifications.

[UIXE 76 in. Galvanized Steel Garden Fence Outdoor Privacy Screen Installation Guide](#)
This guide provides instructions for installing the UIXE 76 in. Galvanized Steel Garden Fence Outdoor Privacy Screen. Learn about recommended assembly steps, parts included, and available patterns.

[4G Camera Connection Guide - V380 Pro APP](#)
Step-by-step instructions for connecting and setting up a 4G camera using the V380 Pro mobile application, including download, power-on, adding the device, and APN settings.