## FeefeeYang RM-014S+

# Universal Remote Control RM-014S+ Instruction Manual

Model: RM-014S+

Brand: FeefeeYang

## Introduction

The FeefeeYang RM-014S+ is a universal remote control designed to replace original remote controls for a wide range of LCD/LED 3D HDTV Smart TVs. This manual provides detailed instructions for setting up, operating, and maintaining your RM-014S+ remote control.






Figure 1: Front and side view of the FeefeeYang RM-014S+ Universal Remote Control.

The RM-014S+ is compatible with most major TV brands, including LG, Samsung, Philips, Panasonic, Sharp, TCL, Vizio, Sony, Sanyo, Toshiba, Magnavox, Hisense, JVC, RCA, Hitachi, Haier, Westinghouse, Vestel, and Seiki. It features a new setting method with brand codes and offers easy and convenient operation with its original quality ABS material and memory IC.




Figure 2: Compatibility overview of the RM-014S+ remote control.

## Setup and Programming

### Battery Installation

Before first use, install two new batteries (not included) into the battery compartment located on the back of the remote control. Ensure correct polarity (+/-) as indicated inside the compartment.

### Programming Methods

The RM-014S+ offers multiple methods for programming to your television. Please refer to the diagrams below for visual guidance.

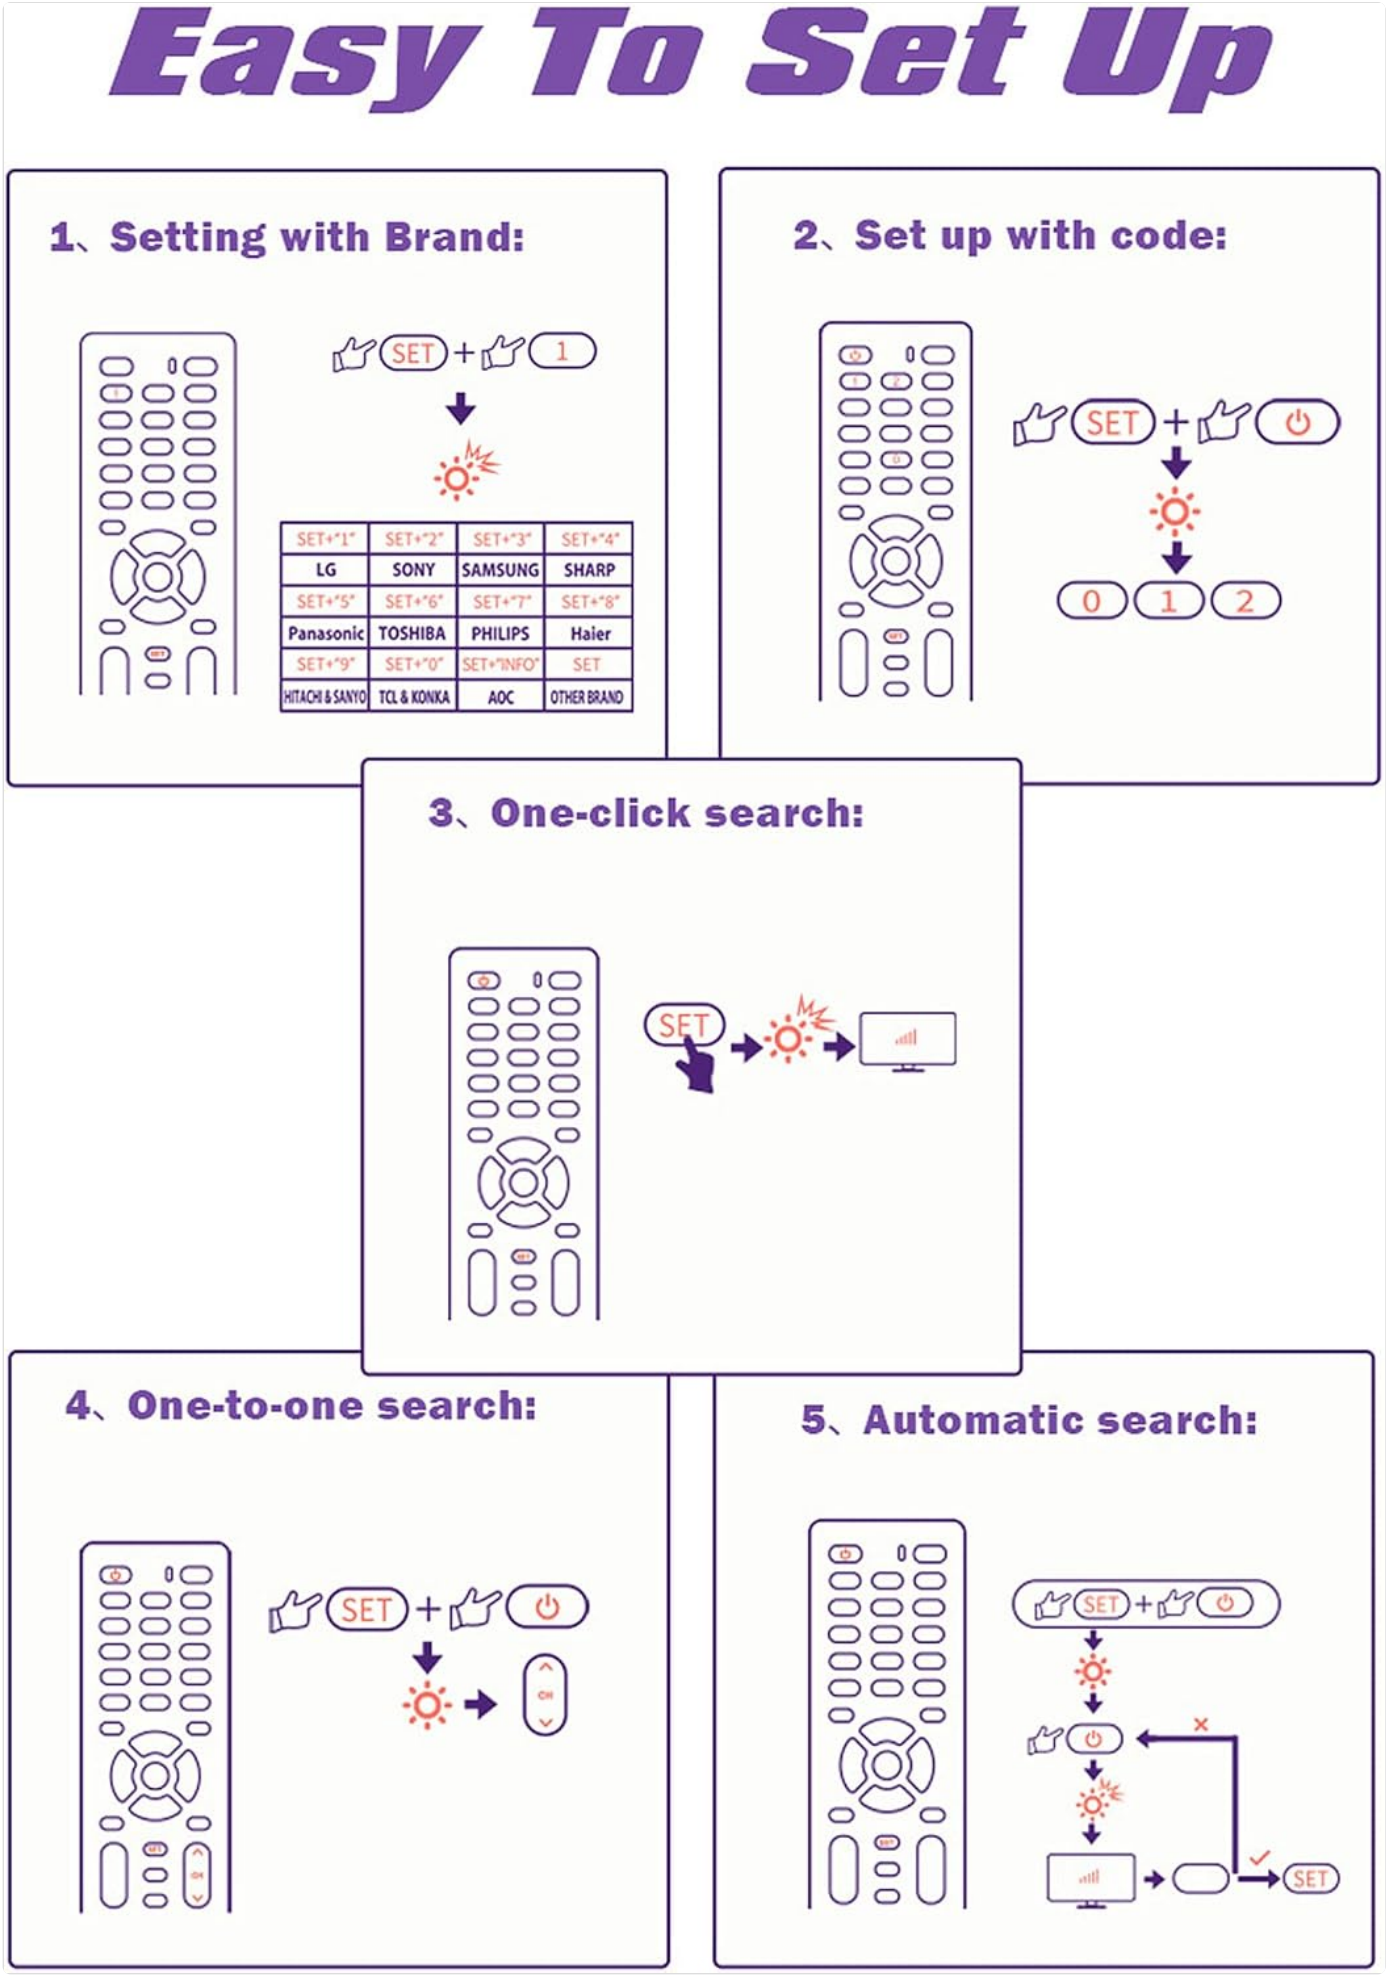


Figure 3: Visual guide for the five programming methods.

1. **Method 1: Brand Setting**

   Press the 'SET' button and the corresponding brand number button simultaneously for 5 seconds. The LED indicator on the remote will blink three times, indicating successful programming. A detailed brand list is included with the product for reference.




Figure 4: Remote with brand code table for direct setting.

2. **Method 2: One Key Search**

   If your TV brand is not listed or the direct brand setting does not work, press and hold the 'SET' button. The LED light will illuminate. Continue holding until the 'Volume' symbol appears on your TV screen. Release the 'SET' button immediately. Test other keys to ensure functionality. If not all keys work, repeat the process.

3. **Method 3: One By One Search**

   Press 'SET' and 'POWER' buttons simultaneously until the LED light turns on. Then, press 'CH+' or 'CH-' repeatedly, one press at a time. When your TV channel changes, test other keys. If they do not work, repeat the process from the beginning of this method.

4. **Method 4: Automatic Search**

   Press 'SET' and 'POWER' buttons simultaneously until the LED light turns on. Press the 'POWER' button again. The LED light will blink one by one until the 'Volume' symbol appears on your TV screen. Press 'SET' to confirm and turn off the LED light. The setting is now complete.

## System Lock/Unlock

After successful programming, you can lock the system to prevent accidental changes. To lock or unlock the system, press 'SET' and 'OK' buttons simultaneously.

Video 1: Demonstrates the features and setup process of the FeefeeYang RM-014S+ Universal Remote Control, including its design and compatibility.

## Operating Your Remote Control

The RM-014S+ remote control features a reasonable button distribution and a simple layout for ease of use. It includes standard TV control functions as well as dedicated hot keys for popular streaming applications.




Figure 5: The remote in use, highlighting its streaming app hot keys.

## Key Features:

- **Dedicated Hot Keys:** Quickly access Netflix, YouTube, and Smart TV functions with dedicated buttons.
- **Quick Response:** The remote is designed to respond quickly, typically within 0.5 seconds, and can be used directly within 35 feet.
- **Durable Design:** Constructed with new ABS material and a memory IC for long service life and excellent contact.




Figure 6: Infrared emitter on the remote control, indicating signal transmission.

## Maintenance

### Battery Replacement

When the remote control's performance degrades or the LED indicator does not light up during button presses, it is time to replace the batteries. Always use new batteries of the specified type and ensure correct polarity. Dispose of old batteries responsibly according to local regulations.

### Cleaning

To clean the remote control, wipe it gently with a soft, dry cloth. Do not use liquid cleaners, abrasive cleaners, or chemical solvents, as these may damage the remote's surface or internal components. Avoid exposing the remote to excessive moisture or direct sunlight.

## Troubleshooting

If you encounter issues with your FeefeeYang RM-014S+ Universal Remote Control, please refer to the following common problems and solutions:

- **Remote is not responding or controlling the TV:**
  - Ensure new batteries are correctly installed.
  - Re-attempt the programming methods (Brand Setting, One Key Search, One By One Search, or Automatic Search) as described in the 'Setup and Programming' section.
  - Ensure there are no obstructions between the remote control and the TV's infrared receiver.
  - Verify that the remote is pointed directly at the TV.
- **Buttons are sticking or feel unresponsive:**
  - Gently press the affected buttons multiple times to dislodge any minor debris.
  - Clean the remote's surface as described in the 'Maintenance' section. Avoid forcing buttons.
- **Specific functions or buttons (e.g., menu navigation, select) are not working:**
  - Some universal remotes may not support every single function of all TV models. Try different programming methods to see if a better code is found.
  - Ensure the system is not locked (refer to 'System Lock/Unlock' in the 'Setup and Programming' section).
  - Consult your TV's original manual to confirm if the specific function requires a unique signal not typically found on universal remotes.

## Product Specifications

| Feature | Detail |
|---|---|
| Model Number | RM-014S+ |
| Product Dimensions | 2 x 4 x 21 inches |
| Item Weight | 3.52 ounces |
| Connectivity Technology | Infrared |
| Compatible Devices | Television |
| Max Number of Supported Devices | 1 |
| Special Feature | Universal |






Figure 7: Dimensions and weight of the RM-014S+ remote control.

## Warranty and Support

For warranty information or technical support regarding your FeefeeYang RM-014S+ Universal Remote Control, please refer to the contact information provided with your product packaging or visit the official FeefeeYang website. Keep your purchase receipt as proof of purchase for any warranty claims.


### Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

## Answered questions about this manual

**How do I program the FeefeeYang RM-014S+ universal remote control to my TV?**

To program your FeefeeYang RM-014S+ universal remote to your television, you can use one of the following methods:Method 1: Brand Setting - Press the SET button and the number button corresponding to your TV...

**Read full answer**

**How do I get my FeefeeYang RM-014S+ remote control to work on my Sinotec STL-42KC51F LED TV even though it is not listed?**

If your Sinotec TV brand is not listed in the manual for the FeefeeYang RM-014S+, you can use the search methods designed for unlisted brands. Try the following steps in order:Method 1: One Key...

**Read full answer**