Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Skullcandy 2SKSK185

Skullcandy Stomp Bluetooth Speaker User Manual

Model: 2SKSK185

INTRODUCTION

The Skullcandy Stomp is a portable Bluetooth speaker designed to deliver powerful audio with enhanced features for various environments. It boasts IPX7 waterproof rating, a long-lasting battery, LED light show capabilities, and Multi-Link technology for connecting multiple speakers. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Stomp speaker.



Image: Front view of the Skullcandy Stomp speaker, showcasing its navy color and vibrant LED light border.

Safety Information

- Do not expose the speaker to extreme temperatures or direct sunlight for extended periods.
- Avoid dropping or subjecting the speaker to strong impacts.
- Keep the speaker away from sources of heat, such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

- Do not attempt to disassemble, repair, or modify the speaker. This will void the warranty.
- Ensure all ports are securely closed when the speaker is exposed to water to maintain its IPX7 rating.
- Use only the charging cable provided or a certified equivalent.
- Dispose of batteries properly according to local regulations.

Package Contents

Verify that all items are present in your package:

- Skullcandy Stomp Bluetooth Speaker
- USB-C Charging Cable
- User Manual (this document)

Product Overview

The Skullcandy Stomp speaker is designed for robust performance and portability. Key features include:

- **IPX7 Waterproof Rating:** Submersible in up to 1 meter of water for 30 minutes.
- **12-Hour Battery Life:** Extended playtime for prolonged use.
- **Bluetooth 5.3:** Stable and efficient wireless connectivity.
- **LED Light Show:** Dynamic lighting effects that sync with music.
- **SKDY Multi-Link™:** Connect up to 99 Skullcandy Bluetooth speakers for a larger sound experience.
- **USB-C & USB-A Output:** Charge your mobile devices directly from the speaker.

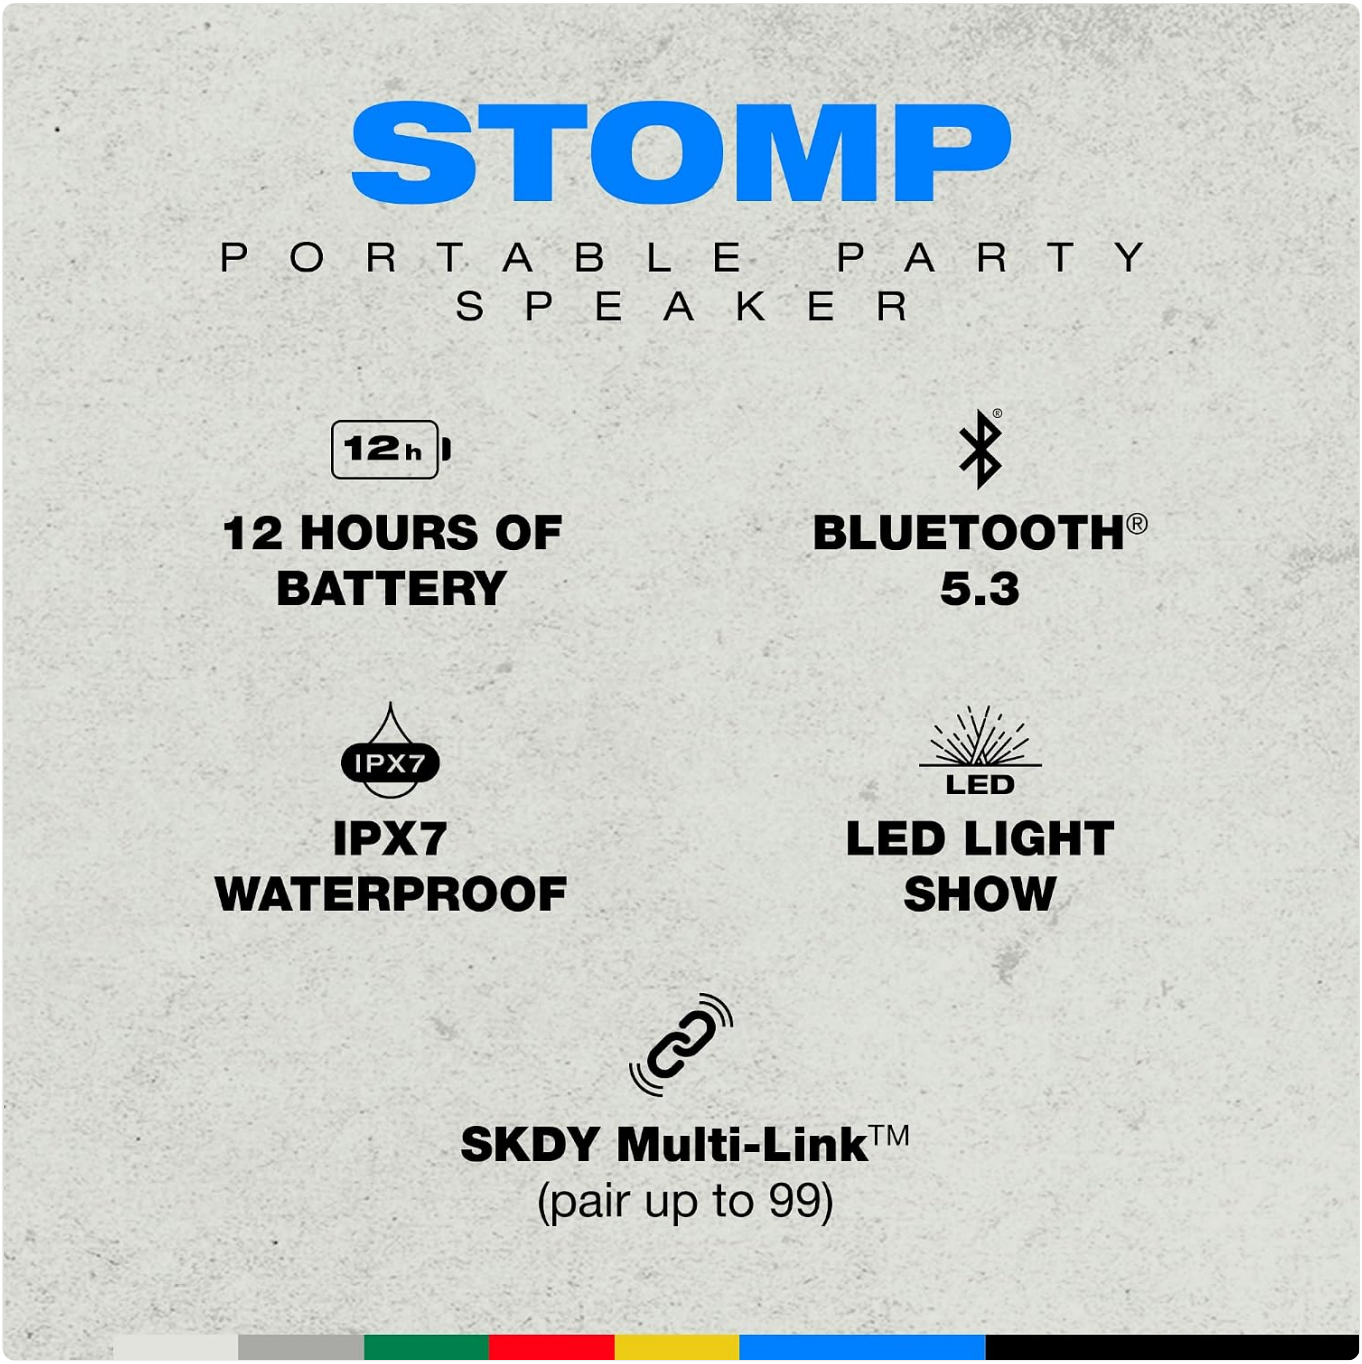

Image: Infographic highlighting the main features of the Stomp speaker, including battery life, Bluetooth version, waterproof rating, LED lights, and Multi-Link capability.



Image: Top-down view of the Skullcandy Stomp speaker, displaying the control panel with buttons for power, volume adjustment, and LED light management.

Setup

1. Charging the Speaker

Before first use, fully charge your Skullcandy Stomp speaker. Connect the provided USB-C cable to the speaker's USB-C port and the other end to a USB power adapter (not included) or a computer's USB port. The LED indicator will show charging status and turn off when fully charged.

2. Powering On/Off

- **Power On:** Press and hold the Power button () for approximately 2 seconds until you hear an audible tone and the LED lights illuminate.
- **Power Off:** Press and hold the Power button () for approximately 2 seconds until you hear an audible tone and the LED lights turn off.

3. Bluetooth Pairing

1. Ensure the speaker is powered on and in pairing mode (LED indicator will flash). If not, press and hold the Bluetooth button ( ) for 3 seconds to enter pairing mode.
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "Skullcandy Stomp" from the list of devices.
4. Once connected, you will hear a confirmation tone, and the LED indicator will stop flashing.

4. Multi-Link™ Feature (Connecting Multiple Speakers)

The Multi-Link feature allows you to connect up to 99 Skullcandy Stomp speakers for a synchronized audio experience.

1. Ensure all speakers you wish to link are powered on and not currently connected to any Bluetooth device.
2. On the first speaker (the primary speaker), press the Multi-Link button (). The LED indicator will flash rapidly.
3. On each additional speaker (secondary speakers), press the Multi-Link button ().
4. The speakers will automatically connect to each other. Once connected, the LED indicators on all linked speakers will show a steady light.
5. Connect your device to the primary speaker via Bluetooth as described in step 3. Audio will now play through all linked speakers.



Image: Two Skullcandy Stomp speakers demonstrating the Multi-Link feature, with visual cues indicating a successful wireless connection between them.

5. LED Light Show Modes

The Stomp speaker features an integrated LED light bar and strobe light that can sync with your music. Press the Light Mode button ( ) to cycle through different light patterns and effects. Press and hold the Light Mode button to turn the lights off.

Operating

Basic Controls

Button	Function
Power ( )	Press and hold for 2 seconds to Power On/Off.

Button	Function
Volume Up (+)	Press to increase volume.
Volume Down (-)	Press to decrease volume.
Play/Pause (▶)	Press to Play/Pause audio.
Next Track	Double press the Play/Pause button.
Previous Track	Triple press the Play/Pause button.
Bluetooth ( )	Press and hold for 3 seconds to enter pairing mode.
Multi-Link ( )	Press to initiate Multi-Link pairing.
Light Mode ( )	Press to cycle through light modes. Press and hold to turn lights off.

Charging External Devices (Charge Out)

The Skullcandy Stomp speaker features USB-C and USB-A output ports, allowing you to use its internal battery to charge your mobile devices.

1. Locate the USB-C or USB-A output port on the speaker.
2. Connect your device's charging cable to the appropriate port on the speaker.
3. The speaker will begin charging your device. Note that using the charge-out feature will reduce the speaker's playtime.



Image: The Skullcandy Stomp speaker with a smartphone connected, illustrating its capability to charge external devices using its USB-A output port.

Maintenance

Cleaning

To clean your speaker, use a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the speaker's finish or components. Ensure all port covers are securely closed before cleaning with a damp cloth.

Storage

When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. It is recommended to charge the speaker fully before storing it to maintain battery health.

Water Resistance (IPX7)

The Stomp speaker is IPX7 waterproof, meaning it can be submerged in up to 1 meter of water for 30 minutes. To maintain its waterproof integrity, always ensure the rubber flap covering the charging and output ports is securely sealed before exposing the speaker to water. After exposure to water, wipe the speaker dry before opening any ports or charging.



Image: The Skullcandy Stomp speaker shown with water splashing around it, emphasizing its IPX7 water-resistant design for outdoor and poolside use.

Troubleshooting

Problem	Possible Solution
Speaker does not power on.	Ensure the battery is charged. Connect the speaker to a power source using the USB-C cable.

Problem	Possible Solution
Cannot pair via Bluetooth.	◦ Ensure the speaker is in Bluetooth pairing mode (LED flashing). ◦ Make sure Bluetooth is enabled on your device. ◦ Move the speaker closer to your device. ◦ Forget "Skullcandy Stomp" from your device's Bluetooth settings and try pairing again. ◦ Turn off and on both the speaker and your device.
No sound or low volume.	◦ Increase the volume on both the speaker and your connected device. ◦ Ensure the speaker is properly connected via Bluetooth. ◦ Check if the audio source is playing.
Multi-Link not working.	◦ Ensure all speakers are Skullcandy Stomp models and are not connected to any other Bluetooth device. ◦ Repeat the Multi-Link pairing steps carefully. ◦ Ensure speakers are within range of each other.
LED lights not working.	Press the Light Mode button () to cycle through modes or turn them on.

SPECIFICATIONS

Feature	Detail
Model Name	2SKSK185
Brand	Skullcandy
Connectivity Technology	Bluetooth 5.3, Wireless
Water Resistance Level	IPX7 Waterproof
Battery Life	Up to 12 Hours
Speaker Maximum Output Power	120 Watts
Frequency Response	650 Hz
Product Dimensions	20"D x 10"W x 12"H
Item Weight	12.67 pounds
Power Source	Battery Powered (1 Lithium Ion battery included)
Control Method	Touch
UPC	812350262638

Warranty and Support

Skullcandy products are designed for durability and performance. For detailed warranty information, please refer to the warranty card included with your product or visit the official Skullcandy website. If you encounter any issues not covered in this manual, or require further assistance, please contact Skullcandy Customer Support through their official channels.

Online Support: www.skullcandy.com/support

© 2024 Skullcandy. All rights reserved. Skullcandy and other marks are registered trademarks of Skullcandy, Inc.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D5G1B63M

More documents and user manuals: **https://manuals.plus/**