Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Tchibo PARENT Coffee Machine + milk frother

Tchibo Automatic Espresso & Coffee Machine with Induction Milk Frother User Manual

Model: PARENT Coffee Machine + milk frother

1. Introduction

Welcome to the world of premium coffee with your new Tchibo Automatic Espresso & Coffee Machine and Induction Milk Frother. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and keep it for future reference.



Image 1.1: The Tchibo Automatic Espresso & Coffee Machine with Induction Milk Frother. This image shows the complete coffee machine setup, including the espresso maker and the separate induction milk frother, ready for use on a kitchen counter.

2. Important Safety Instructions

- Read all instructions before using the appliance.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire,

electric shock, or injury to persons.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. Product Overview and Components

Your Tchibo coffee machine is designed for ease of use and high-quality coffee preparation. It features an intuitive LED touch panel, a built-in grinder, and a removable brewing unit. The accompanying induction milk frother creates rich, creamy foam for various coffee beverages.

Key Features:

- **Automatic Espresso & Coffee Machine:** Grinds whole beans for fresh, single-serve espresso or Americano.
- **Induction Milk Frother:** Creates hot or cold milk foam in approximately 60 seconds.
- **Built-in Grinder:** Low-noise electric grinder with adjustable settings for various roasts.
- **Intuitive LED Touch Panel:** For easy operation and beverage selection.
- **Adjustable Dispenser:** Accommodates different cup sizes.
- **Easy Cleaning:** Features automatic descaling and a magnetically secured, front-attached drip tray.
- **Removable Brewing Unit:** For thorough cleaning and maintenance.



Image 3.1: Detailed view of the Tchibo espresso machine highlighting its intuitive LED touch panel, low-noise stainless steel grinder with adjustable settings, and removable brewing unit with automatic descaling function.

Milk Frother Components:



Image 3.2: Exploded view of the Tchibo Induction Milk Frother showing its dishwasher-safe removable jug, non-slip silicone grip, and base unit with power specifications and automatic switch-off feature.

- **Removable Jug:** Dishwasher-safe for easy cleaning.
- **Non-slip Silicone Grip:** For secure handling.
- **Induction Base:** Heats and froths milk efficiently.
- **Automatic Switch-off:** After 3 minutes for safety and energy saving.

4. Setup and First Use

1. **Unpacking:** Carefully remove all packaging materials and ensure all components are present.
2. **Initial Cleaning:** Before first use, clean the water tank, drip tray, and milk frother jug with warm water and a mild detergent. Rinse thoroughly.
3. **Positioning:** Place the machine on a stable, level, and heat-resistant surface. Ensure adequate ventilation around the appliance.
4. **Fill Water Tank:** Open the water tank lid and fill with fresh, cold drinking water up to the MAX mark. Close the lid securely.
5. **Fill Bean Hopper:** Open the bean hopper lid and pour whole coffee beans into the hopper. Close the lid

securely.

6. **Power Connection:** Plug the power cord into a grounded electrical outlet.
7. **First Rinse Cycle:** Follow the on-screen instructions or manual for the initial rinse cycle to prime the system and clean internal components.

5. Operating Instructions

5.1 Making Espresso or Americano

1. Ensure the water tank is filled and the bean hopper contains coffee beans.
2. Place a cup under the coffee dispenser. Adjust the dispenser height if necessary.
3. Turn on the machine using the power button. The machine will perform a brief self-check.
4. On the LED touch panel, select your desired beverage (Espresso or Americano).
5. The machine will automatically grind the beans, brew, and dispense your coffee.
6. Once brewing is complete, remove your cup.



Image 5.1: The Tchibo Automatic Espresso & Coffee Machine brewing a fresh cup of coffee, with coffee beans visible in the background, demonstrating the machine's primary function.

5.2 Using the Induction Milk Frother

1. Pour cold milk into the frother jug. Do not exceed the MAX fill line.
2. Place the lid on the jug.
3. Place the jug onto the induction base.
4. Press the appropriate button on the frother for hot foam (red indicator) or cold foam (blue indicator).
5. The frother will automatically start and stop when the foam is ready (approximately 60 seconds).
6. Pour the frothed milk into your coffee.



Image 5.2: A person pouring frothed milk from the Tchibo Induction Milk Frother into a coffee cup, illustrating the creation of creamy foam for beverages.

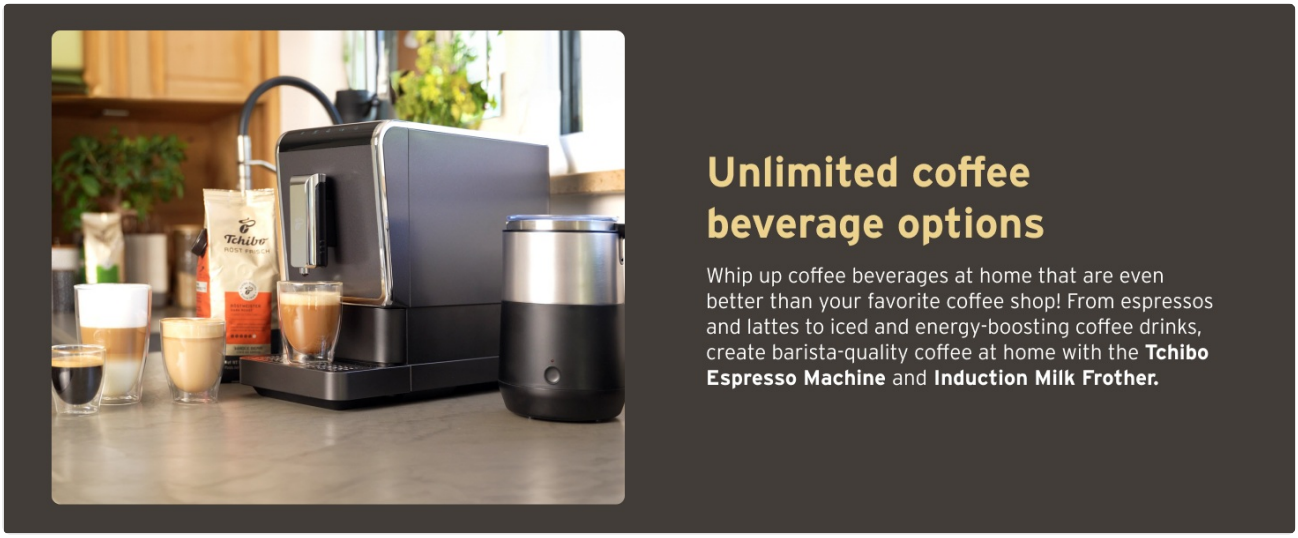

Image 5.3: A selection of coffee beverages, including espresso, latte, and cappuccino, prepared using the Tchibo machine and frother, showcasing the versatility of the system.

6. Maintenance and Cleaning

Regular cleaning and maintenance ensure the longevity and optimal performance of your Tchibo coffee machine and milk frother.

6.1 Daily Cleaning

- **Drip Tray:** The front-attached drip tray secures magnetically for swift removal. Empty and clean it daily with warm, soapy water.
- **Water Tank:** Rinse the water tank daily and refill with fresh water.
- **Milk Frother Jug:** After each use, rinse the frother jug immediately. It is dishwasher-safe for thorough cleaning.
- **Coffee Dispenser:** Wipe the coffee dispenser with a damp cloth.

6.2 Removable Brewing Unit

The brewing unit is removable for easy cleaning. Refer to the machine's display or specific instructions for removing and reinserting the brewing unit. Rinse it under running water to remove coffee grounds. Allow it to air dry before reinserting.

6.3 Descaling

The machine features automatic descaling. The display will indicate when descaling is required. Follow the on-screen prompts and use a suitable descaling solution as recommended by Tchibo. Regular descaling prevents mineral buildup and ensures optimal machine performance.

7. Troubleshooting

If you encounter issues with your machine, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power outage.	Check power cord connection; check power supply.

Problem	Possible Cause	Solution
No coffee is dispensed.	Water tank empty; bean hopper empty; brewing unit clogged.	Fill water tank; fill bean hopper; clean brewing unit.
Coffee tastes weak or watery.	Grind setting too coarse; insufficient coffee dose.	Adjust grinder to a finer setting; ensure sufficient beans are in hopper.
Milk frother not producing foam.	Insufficient milk; milk too warm; frother jug not clean.	Ensure adequate cold milk; clean frother jug thoroughly.
"Descale" message appears.	Machine requires descaling.	Perform descaling cycle as per instructions.

8. Specifications

Technical details for your Tchibo Automatic Espresso & Coffee Machine and Induction Milk Frother.



Image 8.1: The Tchibo Automatic Espresso & Coffee Machine and Milk Frother with key dimensions indicated, showing its compact design suitable for various counter spaces.

Feature	Detail
Brand	Tchibo
Model Name	Coffee Maker red + milk frother
Product Dimensions (D x W x H)	15.7"D x 8"W x 13.7"H
Material	Stainless Steel
Coffee Maker Type	Espresso Machine
Operation Mode	Fully Automatic
Coffee Input Type	Whole Grains
Filter Type	Reusable
Human Interface Input	Buttons
Included Components	Filter
Milk Frother Power	500 Watts
Milk Frother Capacity	Up to 17 oz of foam

9. Warranty and Support

Information regarding product warranty and customer support was not provided in the product details. For warranty claims or technical assistance, please refer to the documentation included with your purchase or visit the official Tchibo website.
You can visit the Tchibo Store for more information:Tchibo Store on Amazon.

© 2024 Tchibo. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D5R344S6

More documents and user manuals: **https://manuals.plus/**