Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ANTEMPER D115

ANTEMPER 2025 Android 14 Tablet D115 User Manual

Model: D115 | Brand: ANTEMPER

1. Introduction

Thank you for choosing the ANTEMPER 2025 Android 14 Tablet D115. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device. The tablet features a 10.1-inch display, runs on Android 14, and supports 4G LTE cellular connectivity, 5G WiFi, and Bluetooth 5.0. It is equipped with an octa-core processor, 14GB RAM, 128GB ROM (expandable up to 1TB), and an 8000mAh battery.

2. What's in the Box

Please verify that all items are present in your package:

- ANTEMPER 2025 Android 14 Tablet D115
- Keyboard
- Mouse
- Capacitive Stylus
- Protective Case
- Screen Protector
- Type-C Charger
- User Manual (this document)



Image: The ANTEMPER Tablet shown with its accompanying keyboard, mouse, and stylus, highlighting the complete accessory package.

3. Product Overview

Familiarize yourself with the physical components and ports of your ANTEMPER Tablet.





Image: A detailed diagram illustrating the location of the SIM/SD socket, 8MP front camera, power button, reset button, Type-C port, dual speakers, 13MP rear camera, and flashlight on the ANTEMPER Tablet.

Key Components:

- **10.1-inch IPS Display:** High-resolution screen for clear visuals.
- **8MP Front Camera:** For video calls and selfies.
- **13MP Rear Camera:** For capturing photos and videos.
- **SIM/SD Socket:** Supports two SIM cards and one SD card for expanded storage.
- **Power Button:** To turn the tablet on/off or put it to sleep.
- **Reset Button:** For system reset if needed.
- **Type-C Port:** For charging and data transfer.
- **Dual Speakers:** For enhanced audio output.

4. Setup

4.1 Initial Charging

Before first use, fully charge your tablet using the provided Type-C charger. Connect the charger to the tablet's Type-C port and plug it into a power outlet. The battery indicator on the screen will show charging progress.

4.2 Power On/Off

- **To Power On:** Press and hold the Power button until the ANTEMPER logo appears on the screen.
- **To Power Off:** Press and hold the Power button, then select 'Power off' from the options that appear.
- **To Restart:** Press and hold the Power button, then select 'Restart' from the options.

4.3 SIM and SD Card Installation

The tablet supports two SIM cards and one Micro SD card for expanded storage. Locate the SIM/SD socket on the side of the tablet.

1. Gently open the SIM/SD card tray.
2. Insert your SIM cards and Micro SD card into the designated slots, ensuring correct orientation.
3. Carefully close the tray until it clicks into place.



Image: The ANTEMPER Tablet displaying the SIM card and SD card slots, indicating where to insert the cards for cellular connectivity and storage expansion.

4.4 Initial Android 14 Setup

Upon first power-on, follow the on-screen prompts to complete the initial setup, including language selection, Wi-Fi connection, Google account login, and privacy settings.

5. Operating Instructions

5.1 Android 14 Features

The ANTEMPER Tablet runs on the Android 14 operating system, offering enhanced performance, improved privacy protection, and advanced AI technologies.

- **System Optimization:** Enjoy smoother operation and efficient resource management.
- **Privacy Protection:** Stricter app permission management and finer control over data sharing.
- **Multitasking:** Improved PC mode with more split-screen options and better drag-and-drop functionality.
- **AI Technologies:** Smarter voice recognition and more accurate gesture recognition.



Image: The Android 14 operating system interface displayed on the ANTEMPER Tablet, showcasing its modern design and features.

5.2 App Management

The tablet comes preloaded with Google Play, allowing you to download a wide range of applications. Ensure you have a stable internet connection to download and update apps.

5.3 Display Modes

The tablet includes built-in eye protection mode and dark light mode to reduce eye fatigue. These modes can be adjusted in the display settings.

5.4 Parental Control

Utilize the parental control features to manage tablet usage time and restrict access to certain content, ensuring a safe environment for children.

6. Connectivity

6.1 4G LTE Cellular

With dual SIM card slots, you can insert SIM cards to enable 4G LTE cellular connectivity, allowing you to make calls and

access the internet outdoors without Wi-Fi.

6.2 5G WiFi

The tablet supports dual-band 2.4G and 5G Wi-Fi, providing faster transmission speeds and a more stable network connection indoors.

6.3 Bluetooth 5.0

Bluetooth 5.0 technology allows for quick and stable connections to external devices such as the included keyboard, mouse, headphones, and other Bluetooth accessories.



Image: The ANTEMPER Tablet highlighting its 4G LTE, 5G WiFi, and Bluetooth 5.0 capabilities, demonstrating versatile connectivity options.

7. Camera Usage

The tablet is equipped with an 8MP front camera and a 13MP rear camera.

- **Front Camera:** Ideal for video calls, online meetings, and virtual classes.
- **Rear Camera:** Capture high-quality photos and videos of important moments.

Access the camera application from the home screen or app drawer to start taking photos or recording videos.

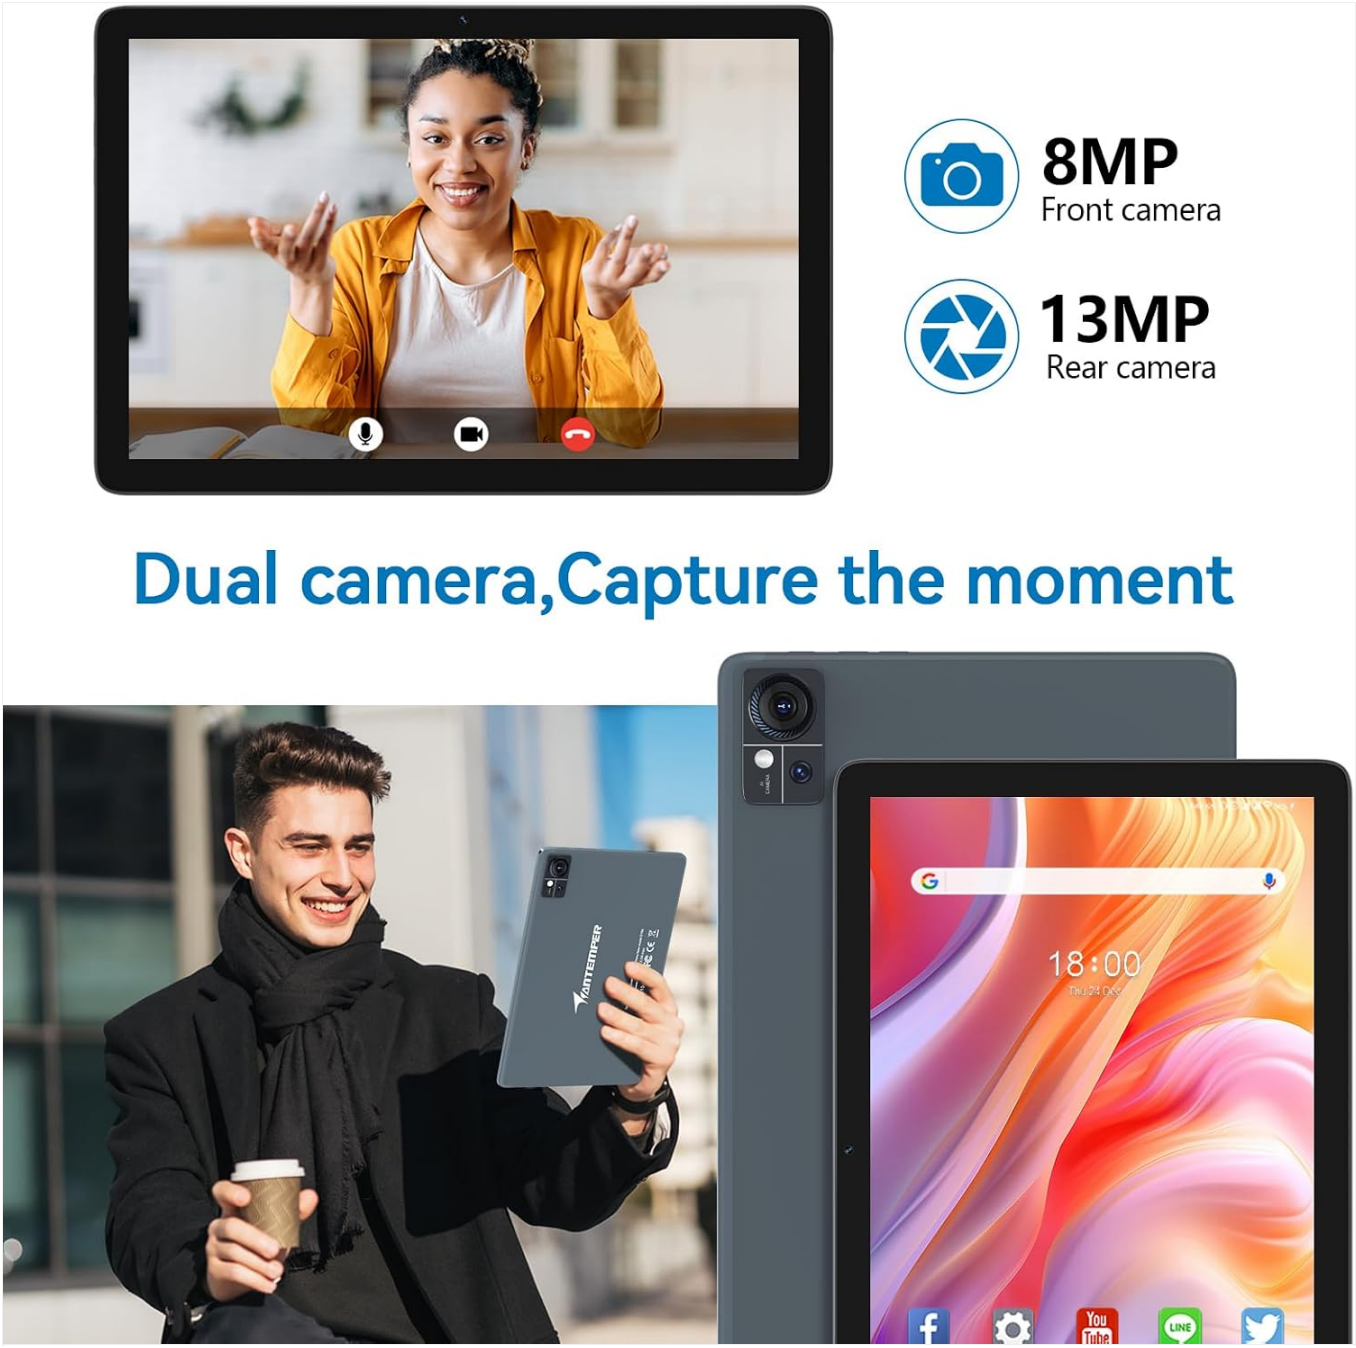

Image: The ANTEMPER Tablet demonstrating the use of its 8MP front camera for video calls and the 13MP rear camera for photography, capturing moments.

8. Battery Management

The tablet features an 8000mAh battery, providing extended usage times.

- Up to 450 hours of standby time.
- Up to 8 hours of gaming.
- Up to 12 hours of video calls.
- Up to 18 hours of music playback.

Always use the provided Type-C charger for optimal charging speed and battery health. Avoid extreme temperatures and prolonged exposure to direct sunlight to preserve battery life.



Image: Visual representation of the ANTEMPER Tablet's 8000mAh battery performance, showing estimated hours for gaming, video, calling, and standby.

9. Storage and Performance

The tablet is designed for smooth performance and ample storage.

- **RAM:** 14GB (6GB physical + 8GB virtual) for efficient multitasking.
- **ROM:** 128GB internal storage for apps and files.
- **Expandable Storage:** Supports up to 1TB Micro SD card expansion.
- **Processor:** T606 Octa-core processor (1.6GHz) for balanced performance and power efficiency.

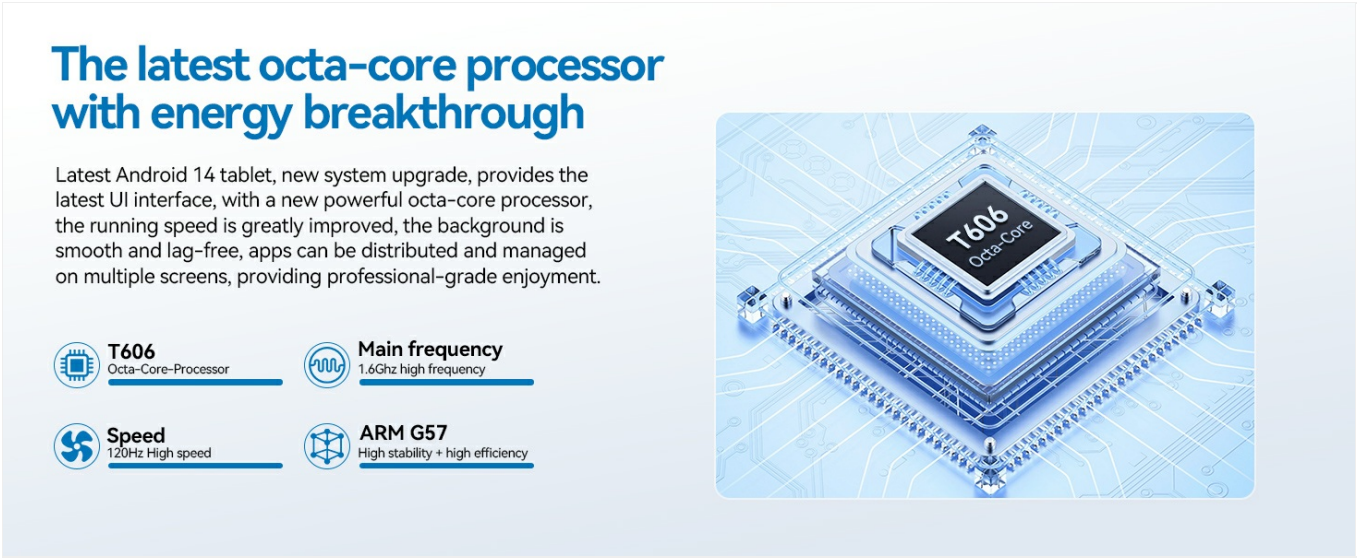

Image: A visual representation of the ANTEMPER Tablet's memory configuration, detailing 14GB RAM, 128GB ROM, and support for 1TB TF card expansion.

10. Maintenance

10.1 Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials that could damage the surface.

10.2 Software Updates

Regularly check for and install system updates to ensure optimal performance, security, and access to the latest features. Updates can be found in the tablet's settings menu.

10.3 Storage Management

Periodically review your installed applications and files. Uninstall unused apps and delete unnecessary files to free up storage space and maintain tablet speed.

11. Troubleshooting

If you encounter issues with your tablet, refer to the following common solutions:

- **Tablet not turning on:** Ensure the battery is charged. Connect the charger and try again.
- **Apps crashing or freezing:** Close and reopen the app. If the issue persists, restart the tablet. Clear the app's cache or reinstall it.
- **Slow performance:** Close background applications. Clear cache and temporary files. Consider uninstalling unused apps.
- **Wi-Fi connectivity issues:** Restart your Wi-Fi router and the tablet. Forget the network and reconnect.
- **No cellular service:** Ensure SIM cards are correctly inserted and activated. Check network settings.
- **Factory Reset:** As a last resort, if software issues persist, you can perform a factory reset through the tablet's settings. **Warning: This will erase all data on your tablet. Back up important data before proceeding.**

12. Specifications

Feature	Specification

Feature	Specification
Brand	ANTEMPER
Model Number	D115
Operating System	Android 14
Screen Size	10.1 inches
Screen Resolution	1024 x 800 pixels (Max 1280)
Processor	Unisoc T606 Octa-core (1.6GHz)
RAM	14GB (6GB + 8GB virtual)
Internal Storage (ROM)	128GB
Expandable Storage	Up to 1TB via Micro SD card
Rear Camera	13MP
Front Camera	8MP
Battery Capacity	8000mAh
Charging Port	Type-C
Wireless Connectivity	4G LTE, 5G WiFi (802.11n), Bluetooth 5.0
Dimensions (LxWxH)	9.3 x 6.2 x 0.2 inches
Item Weight	3.14 pounds

13. Warranty and Support

ANTEMPER provides comprehensive support for your tablet.

- **Warranty:** Your tablet is covered by a 24-month warranty from the date of purchase.
- **Lifetime Service:** We offer lifetime technical support for our products.
- **Technical Assistance:** If you encounter any issues or have questions, please contact our professional technical team.

For support, please visit our official website or contact us via the details provided on your product packaging or purchase receipt.

© 2025 ANTEMPER. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the

question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D6TXGSFV

More documents and user manuals: **https://manuals.plus/**