Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Lehwey CD005

Lehwey Portable CD Player User Manual

Model: CD005

1. Introduction

Thank you for purchasing the Lehwey Portable CD Player. This device is a versatile audio player offering multiple functions including CD playback, Bluetooth transmitting and receiving, FM radio, USB playback, and AUX input/output. Its compact design and rechargeable battery make it ideal for both home and portable use. Please read this manual carefully to ensure proper use and maintenance of your device.



Figure 1: Lehwey Portable CD Player highlighting its 8-in-1 multifunctional capabilities.

2. What's in the Box

Please check the package contents upon unboxing:

- Lehwey Portable CD Player
- User Manual
- Remote Control
- Type-C Charging Cable
- CD Cleaning Cloth

3. Product Overview

3.1 Controls and Ports

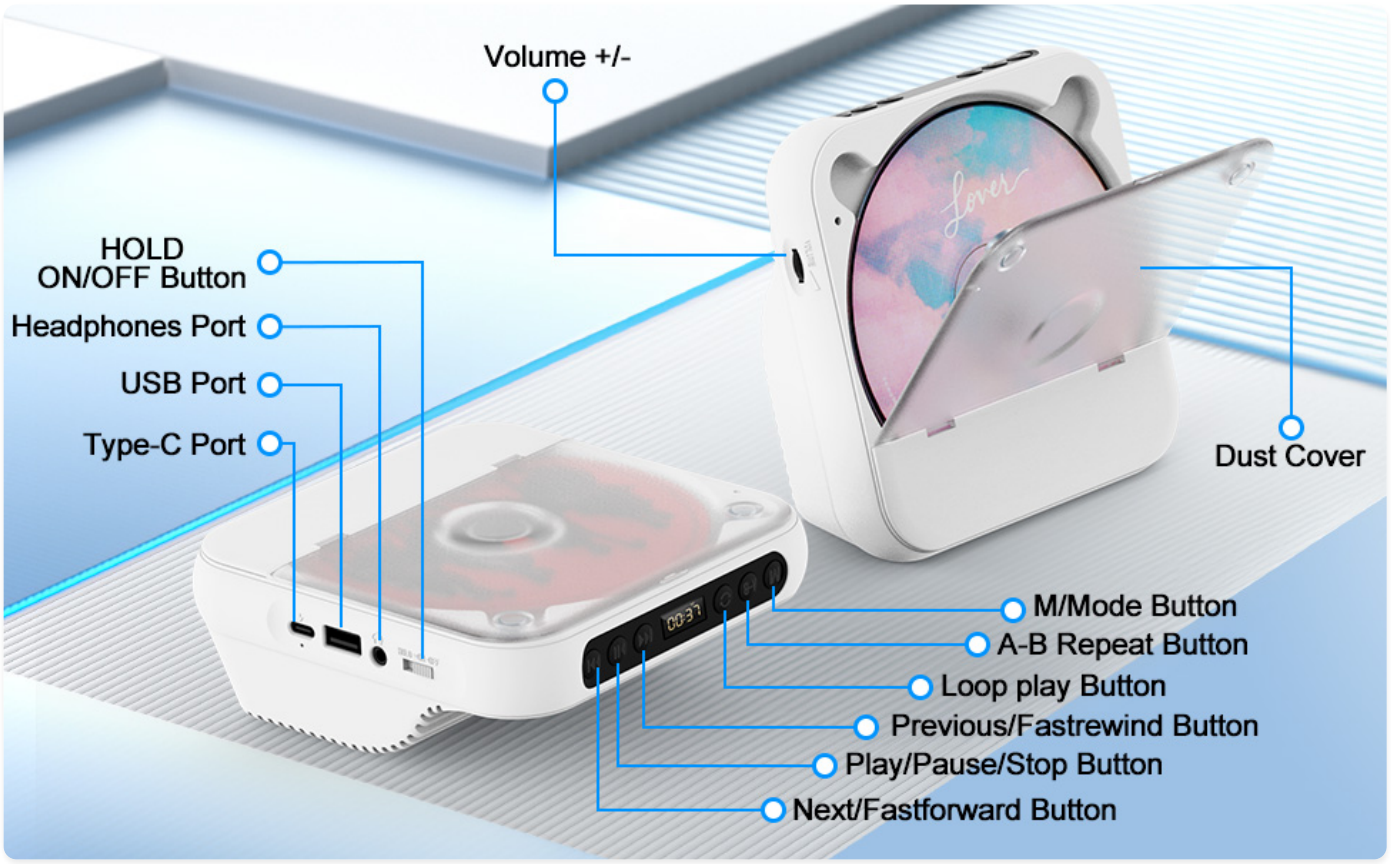

Figure 2: Front, top, and side view of the CD player with labeled components.

1. **HOLD ON/OFF Button:** Slide to power on/off or lock buttons.
2. **Headphones Port:** 3.5mm audio output for headphones.
3. **USB Port:** For USB flash drive playback.
4. **Type-C Port:** For charging the device.
5. **Volume +/-:** Adjust playback volume.
6. **Dust Cover:** Protects the CD compartment.
7. **M/Mode Button:** Switch between CD, Bluetooth, FM, USB, AUX modes.
8. **A-B Repeat Button:** Repeat a specific segment of audio.
9. **Loop Play Button:** Cycle through repeat modes (e.g., repeat one, repeat all).
10. **Previous/Fastrewind Button:** Skip to previous track or fast rewind.
11. **Play/Pause/Stop Button:** Control playback.
12. **Next/Fastforward Button:** Skip to next track or fast forward.

4. Setup

4.1 Charging the Device

Before first use, fully charge the CD player. Connect the provided Type-C cable to the Type-C port on the device and the other end to a USB power adapter (not included) or a computer USB port. The charging indicator will show the charging status.

4.2 Powering On/Off

Slide the **HOLD ON/OFF** switch to the 'ON' position to power on the device. To power off, slide it to the 'OFF' position.

5. Operating Instructions

5.1 CD Playback

1. Open the dust cover and carefully place a CD (CD, CD-R, CD-RW, MP3, WMA formats supported) onto the spindle, label side up.
2. Close the dust cover. The player will automatically detect the CD and begin playback.
3. Use the **Play/Pause/Stop** button to control playback.
4. Use the **Previous/Fastrewind** and **Next/Fastforward** buttons to skip tracks or fast forward/rewind.
5. Press the **Loop Play** button to cycle through repeat modes (e.g., repeat one track, repeat all tracks).
6. Press the **A-B Repeat** button to set a start point (A) and end point (B) for a specific audio segment to repeat. Press again to cancel.

5.2 Bluetooth Transmitting Mode (BT TX)

This mode allows the CD player to send audio to Bluetooth headphones or speakers.

1. Ensure the CD player is in CD mode.
2. Press and hold the **M/Mode** button for 3 seconds until the Bluetooth transmission icon appears on the display. The player is now in pairing mode.
3. Put your Bluetooth headphones or speaker into pairing mode.
4. The CD player will automatically search for and connect to nearby Bluetooth devices. Once connected, audio from the CD will play through your Bluetooth device.



Figure 3: Bluetooth Transmitting to headphones.

5.3 Bluetooth Receiving Mode (BT RX)

This mode allows the CD player to act as a Bluetooth speaker, receiving audio from your phone, tablet, or computer.

1. Press the **M/Mode** button repeatedly until 'bt' appears on the display. The player is now in Bluetooth receiving pairing mode.
2. On your mobile device, enable Bluetooth and search for 'Lehwey CD005' (or similar).
3. Select the device to pair. Once connected, you can play audio from your mobile device through the CD player's built-in speakers.



Figure 4: Bluetooth Receiving, connecting to various devices.

5.4 FM Radio Mode

1. Press the **M/Mode** button repeatedly until 'FM' appears on the display.
2. The player will automatically scan and store available FM stations (76MHz-108.0MHz).
3. Use the **Previous/Fastrewind** and **Next/Fastforward** buttons to navigate through stored stations.



Figure 5: FM Radio mode in operation.

5.5 USB Playback Mode

1. Insert a USB flash drive into the **USB Port**.
2. Press the **M/Mode** button repeatedly until 'USB' appears on the display.
3. The player will automatically detect and play audio files from the USB drive.
4. Use playback controls as with CD mode.



Figure 6: USB Playback mode.

5.6 AUX Mode

1. Connect an external audio device (e.g., smartphone, MP3 player) to the**Headphones Port** using a 3.5mm audio cable (not included).
2. Press the **M/Mode** button repeatedly until 'AUX' appears on the display.
3. Audio from the connected device will now play through the CD player's speakers. Control playback from the external device.



Figure 7: AUX Mode in use.

5.7 Sleep Timer

The sleep timer allows the device to automatically turn off after a set period.

1. While playing music, press the **Timer** button on the remote control (or a dedicated button if available on the unit, refer to diagram).
2. Repeatedly press the button to cycle through available sleep timer settings (e.g., 30, 60, 90, 120, 180 minutes).
3. The device will automatically power off after the selected time.



Figure 8: Sleep Timer function.

5.8 Remote Control

The included remote control allows for convenient operation from a distance. All primary functions (power, mode, play/pause, skip, volume, A-B repeat, timer) are accessible via the remote.



Figure 9: Using the remote control.

6. Maintenance

- **Cleaning the Device:** Use a soft, dry cloth to clean the exterior of the player. For stubborn marks, a slightly damp cloth can be used, followed by a dry cloth.
- **Cleaning the CD Lens:** If CD playback issues occur, use the provided CD cleaning cloth or a specialized CD lens cleaner disc to gently clean the optical lens. Do not touch the lens directly with your fingers.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.

7. Troubleshooting

Problem	Possible Cause	Solution
Device does not power on.	Battery is depleted.	Charge the device fully.
CD does not play or skips.	CD is dirty, scratched, or inserted incorrectly. Lens is dirty.	Clean the CD. Ensure CD is inserted correctly. Clean the CD lens. Try another CD.
No sound from speakers/headphones.	Volume is too low. Headphones not fully inserted. Incorrect mode.	Increase volume. Ensure headphones are fully plugged in. Check if the correct mode (CD, AUX, etc.) is selected.
Bluetooth device cannot connect.	Player not in pairing mode. Device too far. Interference.	Ensure player is in BT TX/RX pairing mode. Move devices closer. Turn off other Bluetooth devices.
Poor FM radio reception.	Weak signal. Interference.	Relocate the player to an area with better reception. Extend any external antenna if available.

8. Specifications

Feature	Specification
Model Number	CD005

Feature	Specification
Brand	Lehwey
Supported CD Formats	CD, CD-R, CD-RW, MP3, WMA
Bluetooth Version	5.1 (Transmitting & Receiving)
FM Radio Frequency	76MHz-108.0MHz
Connectivity	Auxiliary, Bluetooth, USB
Power Source	Battery Powered (Rechargeable)
Battery Life	Up to 4 hours (approx.)
Speaker Type	Stereo (2 built-in HiFi speakers)
Audio Output Mode	Stereo
Item Dimensions (L x W x H)	5.31 x 5.31 x 2.08 inches
Item Weight	0.6 kg

9. Warranty and Support

This Lehwey CD Player comes with a one-year warranty from the date of purchase. If you encounter any issues or have questions regarding your product, please contact our customer support. We aim to respond to all emails within 24 hours. For support, please refer to the contact information provided with your purchase or visit the official Lehwey store page on Amazon: Lehwey Store

© 2023 Lehwey. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D7MFZJ3T

More documents and user manuals: **https://manuals.plus/**