MERACH MR-T26

MERACH T26 3-in-1 Walking Pad User Manual

Model: MR-T26 | Brand: MERACH

1. Introduction

Welcome to the MERACH T26 3-in-1 Walking Pad User Manual. This guide provides essential information for the safe and effective operation, maintenance, and troubleshooting of your new walking pad. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

The MERACH T26 is designed to offer a versatile and convenient fitness solution for your home or office, featuring a compact design, powerful yet silent motor, and intuitive controls.

2. Safety Information

WARNING: To reduce the risk of serious injury, read all important precautions and instructions in this manual before using the MERACH T26 Walking Pad.

- Always place the walking pad on a flat, stable surface. Ensure there is adequate clear space around the unit (at least 2 meters behind and 0.6 meters on each side).
- Keep children and pets away from the walking pad during operation.
- Do not exceed the maximum user weight capacity of 265 lbs (120 kg).
- Wear appropriate athletic footwear and clothing during use.
- If you experience dizziness, nausea, chest pain, or any other abnormal symptoms, stop your workout immediately and consult a physician.
- Unplug the walking pad from the power outlet when not in use, before cleaning, or before performing any maintenance.
- Do not operate the walking pad if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged.
- This product is for indoor use only. Do not expose it to water or excessive humidity.

Electrical Safety:

- Use only the provided power cord.
- Ensure the power outlet is properly grounded.
- Do not use extension cords or adapters.

3. Product Overview

3.1 Components

The MERACH T26 Walking Pad comes with the following components:

- MERACH T26 Walking Pad Unit
- Remote Control
- Power Cord
- Tool Kit (Hexagonal wrench)
- User Manual (this document)

3.2 Key Features

- **New Steel Frame Design:** Utilizes integrated die-casting technology for extreme support and longevity, with a 265 lb (120 kg) load capacity.
- **Silent 2.75HP Motor:** Equipped with a dual-turbo design and integrated noise reduction plate, operating at less than 45dB.
- **Remote Control & LED Display:** Magnetic remote control with lanyard for easy access and storage. LED display clearly shows exercise data.
- **Portable & Space-Saving:** Ultra-low 13cm body, dimensions 116 x 47.6 x 13 cm. Lightweight at 18kg with integrated pulleys and portable armrests for easy movement and vertical/horizontal storage.
- **No Installation Required:** Ready to use right out of the box.
- **3-in-1 Functionality:** Supports Work Mode (1-2 KM/H), Walk Mode (2-3 KM/H), and Jog Mode (3-6 KM/H).
- **5-Layer Running Belt:** Designed for impact reduction and durability, featuring wear-resistant surface, sound insulation, high-strength support, shock-absorbing, and compression layers.
- **Smart App Integration:** Connects with the MERACH APP for tracking exercise data, professional coaching programs, real-life experiences, and VR sports games.

3.3 Product Diagram and Display



Figure 3.1: MERACH T26 Walking Pad in use, highlighting its compact design and suitability for under-desk use.



Figure 3.2: Intuitive LED display showing exercise data (Speed, Time, Distance, Calories) and the remote control.



Figure 3.3: Powerful and Silent Motor System with specifications.



Figure 3.4: Three-in-one functionality: Work, Walk, and Jog Modes.

4. Setup

The MERACH T26 Walking Pad is designed for immediate use with no assembly required. Simply unpack and begin your workout.

4.1 Unpacking

1. Carefully remove the walking pad from its packaging.
2. Inspect the unit for any signs of damage. If damaged, contact customer support immediately.
3. Remove all packing materials. Keep the packaging for future storage or transport if needed.

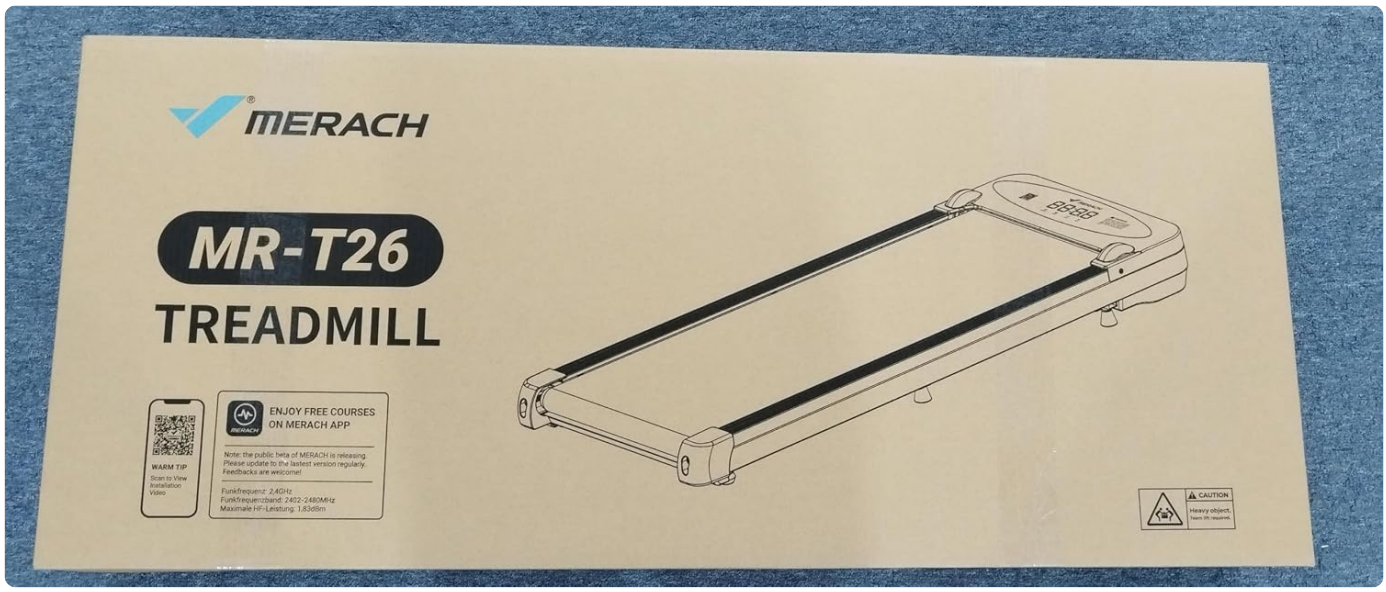


Figure 4.1: MERACH T26 Treadmill packaging.

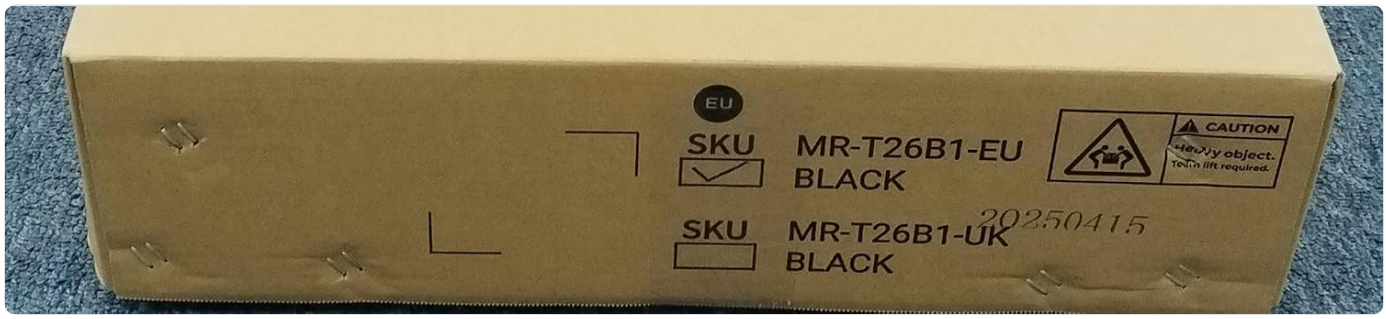


Figure 4.2: Product box with SKU information.



Figure 4.3: Handling instructions on the product box.

4.2 Placement

Choose a flat, stable surface for the walking pad. Ensure there is sufficient clear space around the unit for safe operation, as described in the Safety Information section.

4.3 Power Connection

Connect the power cord to the walking pad's power input port, then plug the other end into a grounded electrical outlet. The LED display should illuminate, indicating the unit is ready for use.

4.4 Remote Control Pairing

The remote control is typically pre-paired. If the remote control does not respond, follow these steps to re-pair it:

1. Ensure the walking pad is powered on.

2. Press and hold the pairing button on the remote control (refer to the remote control diagram for exact location, usually a small button or combination).
3. The walking pad's display should indicate successful pairing.

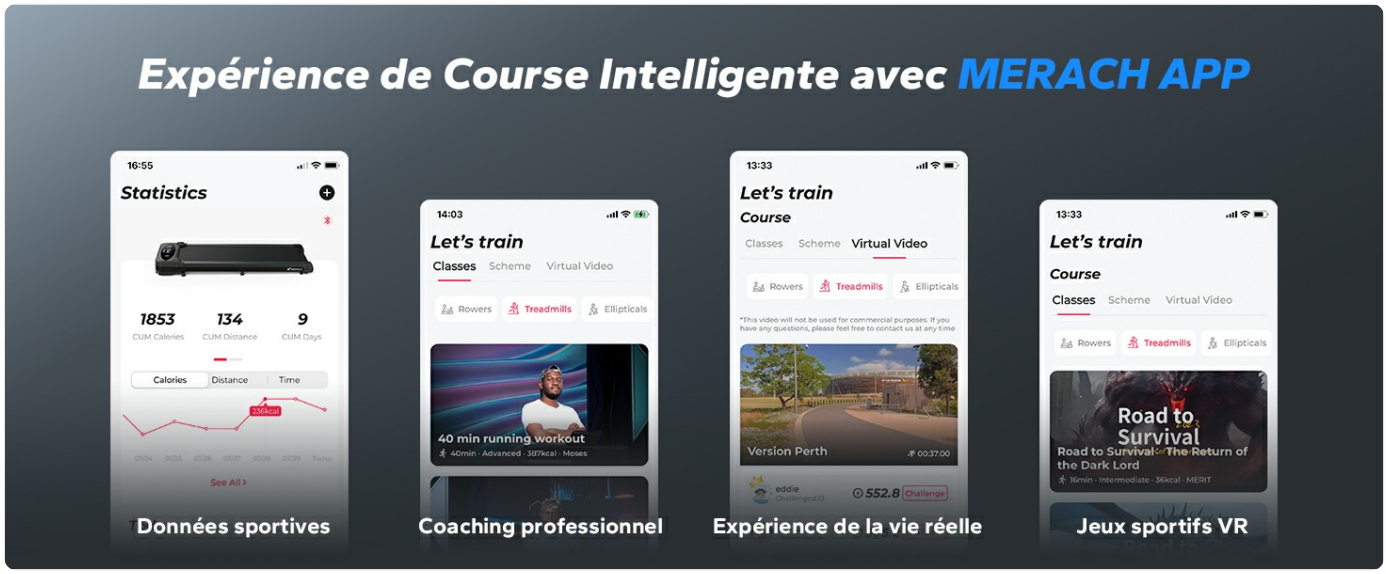


Figure 4.4: Remote control storage on the walking pad.

5. Operating Instructions

5.1 Starting and Stopping

- To start: Press the **Start** button on the remote control. The walking pad will typically start at a low speed (e.g., 1 KM/H).
- To stop: Press the **Stop** button on the remote control. The belt will gradually slow down and come to a complete stop.

5.2 Speed Adjustment

Use the **+** and **-** buttons on the remote control to adjust the speed. The speed range is 1 KM/H to 6 KM/H.

- **Work Mode:** 1-2 KM/H (Ideal for light activity while working).
- **Walk Mode:** 2-3 KM/H (Suitable for a brisk walk).
- **Jog Mode:** 3-6 KM/H (For light jogging).

5.3 LED Display

The integrated LED display shows real-time exercise data:

- **Speed:** Current walking/jogging speed.
- **Time:** Duration of your workout.
- **Distance:** Total distance covered.
- **Calories:** Estimated calories burned.

5.4 MERACH APP Integration

Enhance your workout experience by connecting your MERACH T26 to the MERACH APP. The app allows you to:

- Track detailed exercise statistics.
- Access professional coaching programs.
- Experience virtual real-life running scenarios.
- Participate in VR sports games.

Download the MERACH APP from your device's app store (available on iOS and Android).

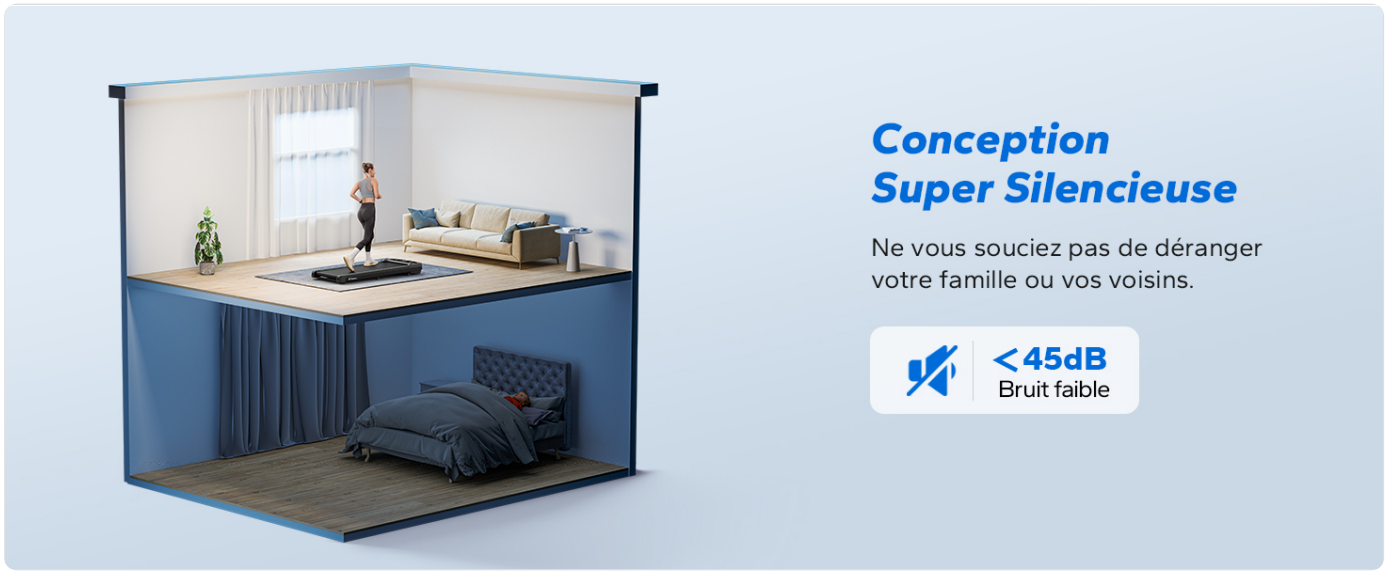


Figure 5.1: MERACH App interface for smart training.

6. Maintenance

Regular maintenance ensures the longevity and optimal performance of your MERACH T26 Walking Pad.

6.1 Cleaning

- Always unplug the walking pad before cleaning.
- Wipe down the unit with a soft, damp cloth after each use to remove sweat and dust.
- Do not use abrasive cleaners or solvents, as they may damage the surface.

6.2 Running Belt Maintenance

The running belt may require occasional lubrication and adjustment to ensure smooth operation. Refer to the specific instructions in the full user manual for detailed steps on lubrication and belt tensioning.

Note on Belt Junction: All foldable and inclinable walking pads, including the MERACH T26, feature a visible junction on the running belt. This is a normal design characteristic and does not affect the safety or performance of the unit.



Figure 6.1: Five-layer running belt construction for durability and comfort.

6.3 Storage

Thanks to its compact and lightweight design, the MERACH T26 is easy to store. You can store it vertically or horizontally in any confined space, such as under a bed or against a wall.



Figure 6.2: Easy storage under furniture.



Figure 6.3: Portability and space-saving storage options.

7. Troubleshooting

If you encounter issues with your MERACH T26 Walking Pad, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Walking pad does not start / Display shows "0.00" and is stuck.	Not powered on, remote control not paired, safety key not in place (if applicable, though not mentioned for this model).	Ensure the power cord is securely plugged into both the unit and a working outlet. Verify the power switch on the unit is in the "ON" position. Re-pair the remote control as described in Section 4.4.
Unusual noise during operation.	Loose components, belt misalignment, lack of lubrication.	Check for any loose screws or parts and tighten them. Inspect the running belt for proper alignment. Adjust if necessary (refer to full manual). Lubricate the running belt if it feels dry or sticky (refer to full manual).
Belt slips or hesitates.	Belt tension too loose, worn belt, insufficient lubrication.	Adjust the belt tension (refer to full manual). Apply lubrication to the running deck (refer to full manual). If the problem persists, contact customer support.

For issues not listed here or if the problem persists, please contact MERACH customer support.

8. Specifications

Feature	Detail
Brand	MERACH
Model Number	MR-T26
Color	Black

Feature	Detail
Dimensions (L x W x H)	116 x 47.6 x 13 cm (45.7 x 18.7 x 5.1 inches)
Item Weight	18 kg (39.7 lbs)
Material	Alloy Steel Frame, Acrylonitrile Butadiene Styrene (ABS)
Motor Horsepower	2.75 HP (Peak)
Speed Range	1 - 6 KM/H
Maximum Weight Capacity	120 kg (265 lbs)
Noise Level	< 45 dB
Display Type	LED
Power Source	Corded Electric
Special Features	Compact design, Silent motor, Remote control, Under-desk compatible
Assembly Required	No

9. Warranty and Support

9.1 Warranty Information

MERACH provides the following warranty for the T26 Walking Pad:

- **1-Year Warranty:** Covers the entire machine for manufacturing defects. This policy typically allows for exchange rather than repair.
- **3-Year Frame Warranty:** Covers the steel frame structure.

Please retain your proof of purchase for warranty claims.

9.2 Customer Support

For technical assistance, warranty claims, or any questions regarding your MERACH T26 Walking Pad, please contact MERACH customer support. Refer to the contact information provided on the product packaging or the official MERACH website.

MERACH is committed to providing excellent customer service and offers 24/7 technical support.

© 2025 MERACH. All rights reserved.
This manual is subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question