Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Tiny Land TLTG

Tiny Land Wooden Baby Walker (Model TLTG) Instruction Manual

Brand: Tiny Land

Model: TLTG

1. Product Overview

The Tiny Land Wooden Baby Walker is designed to support toddlers in their first steps while providing an engaging activity center. Crafted from natural wood with non-toxic finishes, it features adjustable speed control and a variety of interactive elements to promote early development.



Image: The Tiny Land Wooden Baby Walker in use, showcasing its design and key benefits.

2. Setup and Assembly

The Tiny Land Wooden Baby Walker requires assembly. Please follow the included instructions carefully. Ensure all components are securely fastened before use.

- Unpack all components and verify against the parts list in the manual.
- Attach the side panels to the base using the provided screws.
- Secure the activity panel to the front of the walker.
- Install the handle bar and ensure it is firmly in place.
- Attach the wheels, ensuring the rubber rings are correctly positioned for floor protection and traction.
- Test the adjustable speed mechanism to ensure proper function.

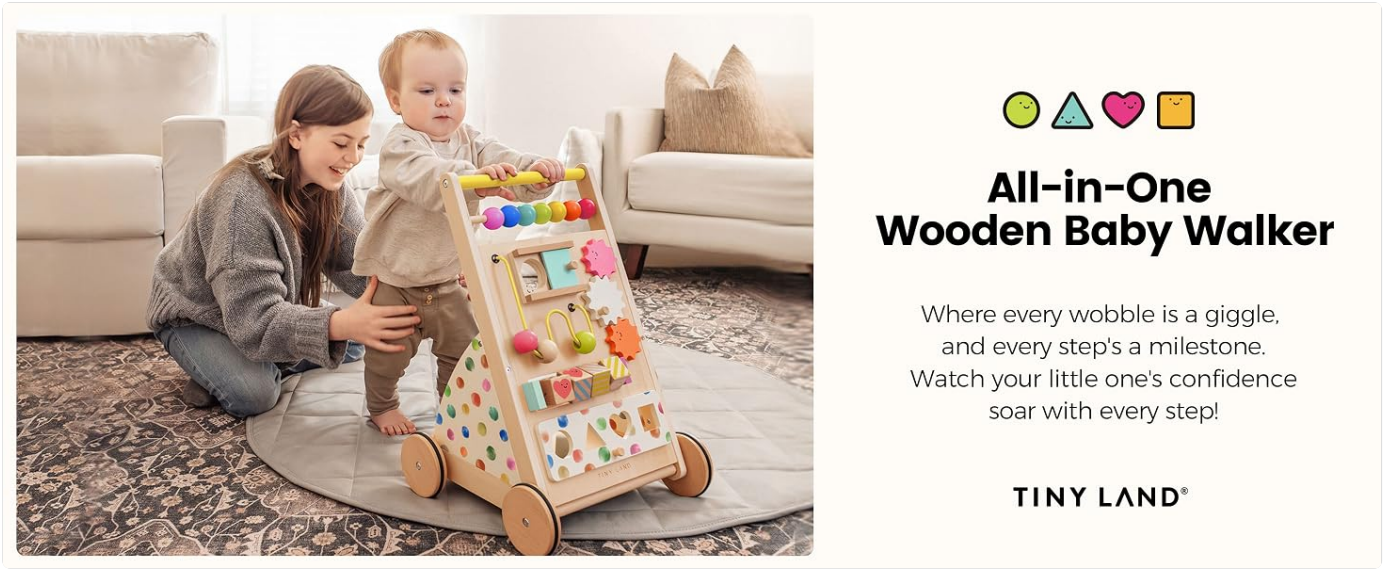

Image: Visual guide for assembling the wooden baby walker.

3. Operating Instructions

3.1. Walking Support

The walker is designed to assist toddlers in developing walking skills. Ensure the child can stand and reach the handle comfortably. Supervise the child at all times during use.

Adjustable Speed Control:

The rear wheels feature an adjustable speed mechanism. This allows you to control the resistance of the wheels, preventing the walker from moving too quickly for new walkers. Turn the knob located on the rear axle to increase or decrease resistance. A tighter setting provides more resistance, ideal for beginners, while a looser setting allows for faster movement as the child gains confidence.



Image: Detail of the adjustable speed function on the walker's wheels.

3.2. Activity Center

The front panel of the walker features a Montessori-inspired activity center with various interactive elements:

- **Colorful Beads:** Slide the beads along the bar to introduce colors and counting.
- **Peek-a-Boo Mirror:** Slide the panel to reveal a mirror, promoting self-awareness and visual tracking.
- **Bead Maze:** Guide the beads through the maze to boost fine motor skills.
- **Rotating Gears:** Turn the gears to develop hand-eye coordination.
- **Rotating Blocks:** Manipulate the blocks to promote sensory skills.
- **Shape Sorter:** Match the included wooden shapes (circle, triangle, heart, square) to their corresponding slots, enhancing shape recognition. The bottom panel opens for easy retrieval of shapes.



Image: The interactive activity panel with various developmental toys.

4. Safety Guidelines

This product is designed with safety in mind. It is crafted from solid natural wood with non-toxic finishes and smooth rounded edges. Always ensure the child is supervised during play. Regularly inspect the walker for any loose parts or damage. Do not use if any part is broken or missing.



Image: A baby interacting with the walker, highlighting the safe, non-toxic materials.

5. Maintenance

To maintain the quality and longevity of your Tiny Land Wooden Baby Walker:

- Wipe clean with a damp cloth and mild soap. Avoid harsh chemicals.
- Dry thoroughly after cleaning.
- Store in a dry place away from direct sunlight or extreme temperatures to prevent wood warping or cracking.
- Periodically check all screws and fasteners to ensure they are tight.
- The quiet rubber wheels are designed to roll gently without scratching floors; keep them free of debris.

6. Troubleshooting

If you encounter any issues with your Tiny Land Wooden Baby Walker, please refer to the following common solutions:

- **Wheels not moving smoothly:** Check for debris caught in the wheels or adjust the speed control knob to a looser setting.
- **Loose parts:** Tighten any loose screws or fasteners. If a part is broken or missing, contact customer support for replacement.
- **Activity panel elements not functioning:** Ensure no foreign objects are obstructing movement.

7. Specifications

Brand	Tiny Land
Model Number	TLTG
Color	Rainbow
Material Type	Wood
Age Range Description	Toddler
Item Dimensions (L x W x H)	13.78"L x 11.81"W x 21.26"H
Maximum Height	21.26 Inches
Unit Count	1.0 Count
Manufacturer	TINY LAND INC



Image: Key dimensions of the baby walker for reference.

8. Warranty and Support

Tiny Land is committed to providing high-quality products. For any questions, concerns, or assistance with your product, please contact Tiny Land customer service. While specific warranty details are not provided, the manufacturer is known for excellent customer support, including assistance with missing parts.

For support, please visit the official Tiny Land store or contact their customer service directly.

Official Tiny Land Store: Tiny Land Store on Amazon

© 2026 Tiny Land. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D8W43DJ6

More documents and user manuals: **https://manuals.plus/**