Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

CHKOSDA CH3396-RD

CHKOSDA CH3396-RD Double-Sided Digital Wall Clock Instruction Manual

Model: CH3396-RD

1. Introduction

Thank you for choosing the CHKOSDA CH3396-RD Double-Sided Digital Wall Clock. This manual provides essential information for the safe and efficient operation of your new device. Please read it thoroughly before installation and use, and retain it for future reference.

2. Safety Information

- Ensure the power supply voltage matches the requirements specified for the clock.
- Do not expose the clock to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the clock to strong impacts.
- Do not attempt to disassemble or repair the clock yourself. Contact qualified service personnel for assistance.
- Keep the remote control and its batteries out of reach of children.

3. Package Contents

Verify that all items are present in the package:

- CHKOSDA CH3396-RD Digital Wall Clock
- Remote Control
- USB Power Cable (10 ft)
- Power Adapter
- Hanging Chains (2)
- Telescopic Poles (2)
- Mounting Hardware (screws, anchors)
- User Manual



Image: Contents of the CHKOSDA CH3396-RD package.

4. Product Overview

The CHKOSDA CH3396-RD is a double-sided digital wall clock featuring a large LED display. It includes functions for time, date, temperature, alarm, countdown, and stopwatch. The display offers 8 levels of adjustable brightness and an automatic light sensing mode.



Image: CHKOSDA CH3396-RD Digital Wall Clock with remote control.



Image: Key features including double-sided display and adjustable brightness.

5. Setup

5.1 Mounting the Clock

The clock can be mounted using the provided hanging chains or telescopic poles. Choose a location with a stable ceiling or wall structure capable of supporting the clock's weight.

1. **For Hanging Chains:** Securely attach the hanging chains to the top of the clock and to a suitable ceiling hook or bracket. Ensure the hooks are rated for the clock's weight.
2. **For Telescopic Poles:** Attach the telescopic poles to the top of the clock and extend them to the desired length. Secure the other end of the poles to a stable surface, such as a ceiling or a sturdy frame, using appropriate mounting hardware.

5.2 Power Connection

Connect the USB power cable to the clock and then to the power adapter. Plug the power adapter into a standard

electrical outlet. The clock will power on automatically.

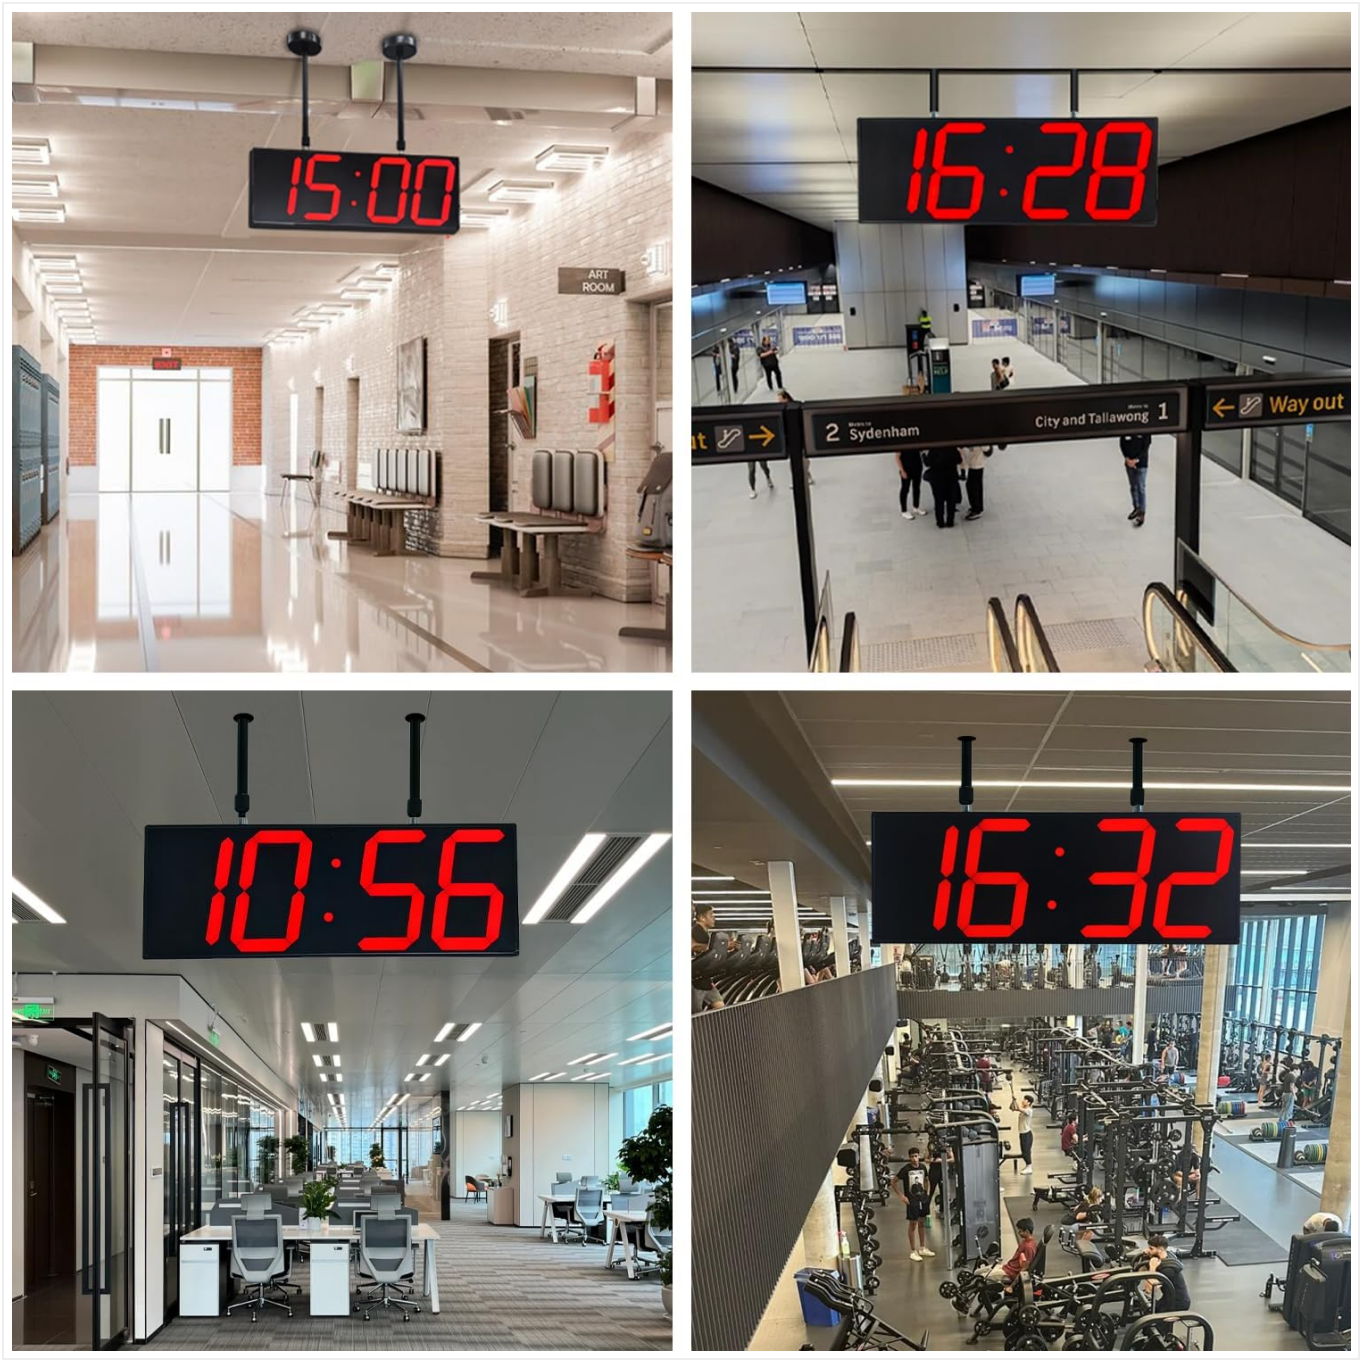

Image: Installation examples in different settings.

6. Operating Instructions

All functions are controlled via the included remote control.

6.1 Basic Time Setting

1. Press the **SET** button on the remote control. The hour digits will start flashing.
2. Use the **UP** or **DOWN** arrows to adjust the hour.
3. Press **SET** again to move to the minute digits. Use**UP** or **DOWN** to adjust minutes.
4. Press **SET** to confirm and exit time setting.

6.2 12/24 Hour Format

Press the **12/24H** button on the remote control to toggle between 12-hour and 24-hour display formats.



Image: 12-hour and 24-hour display modes.

6.3 Brightness Adjustment

The clock offers 8 fixed brightness levels and an automatic dimming mode.

- Press the **BRIGHTNESS** button repeatedly to cycle through the 8 manual brightness levels.
- Press the **AUTO DIMMER** button to activate the automatic light sensing mode. The clock will adjust its brightness based on ambient light conditions.



Image: Adjustable brightness settings.

6.4 Alarm Setting

The clock supports up to 16 alarm settings.

1. Press the **ALARM** button. The alarm number (e.g., AL:01) will appear.
2. Use **UP** or **DOWN** to select the desired alarm slot.
3. Press **SET** to enter alarm time setting. Adjust hours and minutes using**UP** or **DOWN**, pressing **SET** to confirm each.
4. Press **SET** again to save the alarm.

5. To enable/disable an alarm, select the alarm slot and press the**ON/OFF** button.



Image: Alarm settings feature.

6.5 Timer Functions (Countdown/Stopwatch)

The clock includes countdown and stopwatch capabilities.

- **Countdown:** Press the **COUNTDOWN** button. Use the number keys on the remote to input the desired countdown time (up to 999 days, 23 hours, 59 minutes, 59 seconds). Press **START/PAUSE** to begin or pause. Press **RESET** to clear.
- **Stopwatch:** Press the **STOPWATCH** button. Press **START/PAUSE** to begin or pause. Press **RESET** to clear.



Image: Countdown and Stopwatch functions.

6.6 Date and Temperature Display

The clock can display the current date and temperature.

- Press the **DATE** button to display the date. The format is typically MM-DD-YYYY.
- Press the **TEMP** button to display the temperature. The unit can be switched between Celsius and Fahrenheit using a dedicated button on the remote (if available) or by cycling through display modes.



Image: Time, Calendar, and Temperature display.

7. Maintenance

To ensure the longevity and optimal performance of your clock:

- Clean the display and casing with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- If the clock will not be used for an extended period, disconnect it from the power source.
- Replace remote control batteries when necessary.

8. Troubleshooting

Problem	Possible Cause	Solution
Clock does not power on.	No power supply or loose connection.	Check if the power adapter is securely plugged into the outlet and the USB cable is connected to the clock. Try a different outlet.
Remote control not working.	Dead batteries or obstruction.	Replace the remote control batteries. Ensure there is no obstruction between the remote and the clock's sensor.
Display is too dim/bright.	Incorrect brightness setting or auto-dimmer active.	Adjust brightness manually using the BRIGHTNESS button or toggle the AUTO DIMMER mode.
Time is incorrect.	Time not set or power interruption.	Reset the time using the instructions in Section 6.1. The clock has a backup memory chip to retain settings during brief power outages.

9. Specifications

Feature	Detail
Brand	CHKOSDA
Model Number	CH3396-RD
Display Type	Digital LED, Double-Sided
Digit Size	6 inches (approx. 15.24 cm)
Product Dimensions (L x W x H)	50.8 x 3.81 x 19.3 cm (20 x 1.5 x 7.6 inches)

Feature	Detail
Item Weight	2.14 Kilograms (4.72 lbs)
Power Source	Corded Electric (USB cable and adapter)
Special Features	LED Display, Temperature Display, Large Screen, Timer, Automatic Dimmer, Alarm, Countdown, Stopwatch, Date Display
Brightness Levels	8 manual levels + Auto-sensing mode
Time Format	12-hour / 24-hour selectable

10. Warranty and Support

This product is covered by a standard manufacturer's warranty. For detailed warranty information, technical support, or service inquiries, please refer to the warranty card included with your purchase or contact CHKOSDA customer service through your retailer or the official brand website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D99YZSJW

More documents and user manuals: **https://manuals.plus/**