Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

VEVOR USF00202

VEVOR Media Storage Cabinet Instruction Manual

Model: USF00202

1. Safety Information

Please read all safety instructions carefully before assembly and use. Keep this manual for future reference.

- Always assemble the cabinet on a stable, level surface to ensure proper alignment and stability.
- Do not overload shelves. The maximum weight capacity per compartment is 5.51 lbs (2.5 kg). Exceeding this limit may cause damage or instability.
- Ensure the cabinet is properly secured to the wall using the provided anti-tip device to prevent accidental tipping, especially in households with children or pets.
- Keep small parts away from children during assembly to avoid choking hazards.



Image: Anti-tip device installation and stability comparison. The anti-tip device secures the cabinet to the wall, preventing it from falling forward.

2. Product Overview

The VEVOR Media Storage Cabinet is designed for organizing and displaying various media collections and small items. Its adjustable shelves and stable construction provide a versatile storage solution.

- **Flexible Storage:** Adjustable shelves allow customization for items of different sizes, including CDs, DVDs, books, and decorative items.
- **Stable Design:** Features a widened base for enhanced stability and includes an anti-tip design for safety.
- **Efficient Organization:** Comes with kraft classification labels to help categorize and manage your collection.
- **Large Capacity:** Maximizes storage space for extensive media collections.

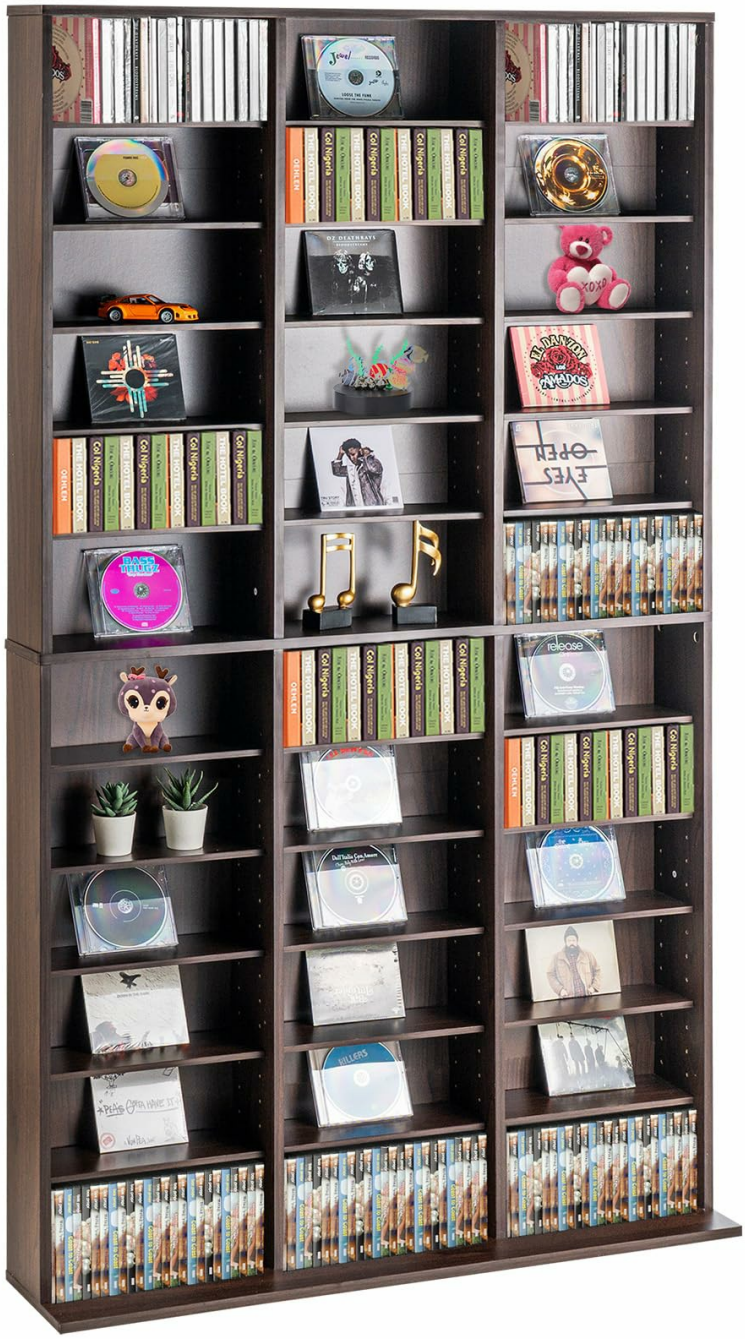

Image: The VEVOR Media Storage Cabinet, showcasing its capacity and design when filled with various media.

3. Specifications

Model Number	USF00202
Material	Wood
Color	Espresso
Product Dimensions (D x W x H)	40.08" x 9.09" x 71.26" (1018 x 231 x 1810 mm)
Number of Shelves	12 (Adjustable)
Number of Compartments	36
Overall Load Capacity	198.42 lbs (90 kg)

Load Capacity per Compartment	5.51 lbs (2.5 kg)
Product Weight	63.36 lbs (28.7 kg)
Mounting Type	Floor Mount
Assembly Required	Yes



Image: Detailed dimensions and a list of accessories included for assembly.

4. Parts List

Before beginning assembly, ensure all parts are present and undamaged. Refer to the diagram below for identification.

- 120 x Iron Dowel Pins
- 12 x Wooden Dowel Pins

- 43 x Iron Nails
- 12 x Two-in-One Screws
- 12 x Two-in-One Nuts
- 18 x 4*40 Self-Tapping Screws
- 2 x 5*12 Self-Tapping Screws
- 2 x Plastic Expansion Sleeves
- 2 x L-Shaped Metal Plates (for anti-tip device)
- 1 x Instruction Manual
- Kraft Classification Labels (120 pcs)



Image: Visual representation of the hardware components required for assembly.

5. Setup and Assembly

5.1. Before You Begin

- Clear a spacious, flat, and clean area for assembly.
- Gather necessary tools: Phillips head screwdriver, hammer (optional, for dowels), and a level.
- Unpack all components and verify against the parts list.

5.2. Assembly Steps

Follow the illustrated instructions provided in the included manual for detailed, step-by-step guidance. The general process involves:

1. **Identify Panels:** Match each wooden panel to its corresponding letter in the assembly diagram.
2. **Connect Side Panels:** Use dowel pins and screws to connect the main side panels to the base and top panels.
3. **Install Fixed Shelves:** Secure any fixed shelves as indicated in the instructions.
4. **Insert Shelf Pins:** Place the iron dowel pins into the desired holes for adjustable shelves.
5. **Install Back Panel:** Attach the back panel using the provided nails to square and stabilize the unit.
6. **Attach Anti-Tip Device:** Secure the L-shaped metal plates to the top rear of the cabinet and then to a wall stud using the appropriate screws and expansion sleeves. This step is crucial for safety.



Image: An overview of the cabinet's structure and how components fit together during assembly.

6. Operation

6.1. Adjusting Shelves

The VEVOR Media Storage Cabinet features adjustable shelves to accommodate various item heights. To adjust a shelf:

1. Remove all items from the shelf you wish to adjust.
2. Carefully lift the shelf and remove the four iron dowel pins supporting it.
3. Reinsert the dowel pins into the desired holes at the new height, ensuring they are level.
4. Place the shelf back onto the dowel pins, ensuring it is securely seated.



Image: Detail of the adjustable shelf mechanism, illustrating how to reposition shelves for different item sizes.

6.2. Organizing Media

Utilize the provided kraft classification labels to categorize and organize your media collection efficiently. Write the category (e.g., 'CDs', 'DVDs', 'Books') or specific content on the labels and apply them to the front edge of the shelves or directly to your media cases.



Image: Example of using kraft classification labels to organize media, making it easy to find specific items.

7. Maintenance

Proper maintenance will extend the life and appearance of your media storage cabinet.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Dusting:** Regularly dust the cabinet with a dry, soft cloth to prevent dust buildup.
- **Spills:** Immediately wipe up any spills to prevent staining or water damage.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Sunlight Exposure:** Avoid placing the cabinet in direct sunlight for prolonged periods, as this can cause fading or discoloration.

8. Troubleshooting

If you encounter any issues with your media storage cabinet, refer to the following common problems and solutions:

- **Cabinet feels wobbly:**
  Solution: Ensure all screws are tightened securely. Verify that the cabinet is placed on a level surface. If wobbling persists, ensure the anti-tip device is correctly installed and secured to a wall stud.
- **Shelves are not level:**
  Solution: Remove the shelf and check that all four dowel pins are fully inserted into their respective holes at the same height. Ensure the shelf itself is not warped.
- **Missing parts during assembly:**
  Solution: Carefully re-check all packaging materials. If parts are genuinely missing, contact VEVOR customer support with your model number and a description of the missing components.
- **Difficulty inserting screws/dowels:**
  Solution: Ensure you are using the correct hardware for each step. Do not force components; gently tap dowels with a rubber mallet if needed, and ensure screws are aligned with pilot holes.



Image: Visual guide to the cabinet's stability features, including load capacity and widened base, which help prevent wobbling.

9. Warranty and Support

VEVOR products are designed for quality and durability. This product comes with a standard manufacturer's warranty against defects in materials and workmanship.

- **Warranty Coverage:** Please refer to the warranty card included with your purchase or visit the official VEVOR website for detailed warranty terms and conditions.
- **Customer Support:** For technical assistance, missing parts, or warranty claims, please contact VEVOR customer service. Contact information can typically be found on the VEVOR website or on your purchase receipt.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question