Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

himaly Cordless Hair Trimmer Beard Grooming Kit

Himaly Professional Hair Clippers User Manual

Model: Cordless Hair Trimmer Beard Grooming Kit

Introduction

Thank you for choosing the Himaly Professional Hair Clippers. This cordless grooming kit is designed to provide precise and versatile hair trimming for men, women, and children. With its advanced features and complete accessory set, you can achieve professional-quality haircuts and grooming results at home. Please read this manual thoroughly before first use to ensure proper operation, maintenance, and safety.

Product Overview and Package Contents

Your Himaly Professional Hair Clippers package includes the following components:

- 1 x Himaly Hair Clipper
- 4 x Guide Combs (3mm, 6mm, 9mm, 12mm)
- 1 x USB Charging Cable
- 1 x Clipper Oil Bottle
- 1 x Cleaning Brush



Image: The complete Himaly Professional Hair Clippers kit, including the clipper unit, four guide combs (3mm, 6mm, 9mm, 12mm), a cleaning brush, clipper oil, and a USB charging cable.

Key Features

- **Cordless & USB Charging:** The clipper is equipped with a USB cable for convenient charging. A full charge takes approximately 1 hour and provides about 1.5 hours of cordless operation.



Image: Illustration showing the clipper with its USB charging cable, indicating 1 hour for full charge and 1.5 hours of running time.

- **Titanium Blade:** Features a detachable titanium blade designed for precise and efficient haircuts. The blade is durable and provides a smooth cutting experience.

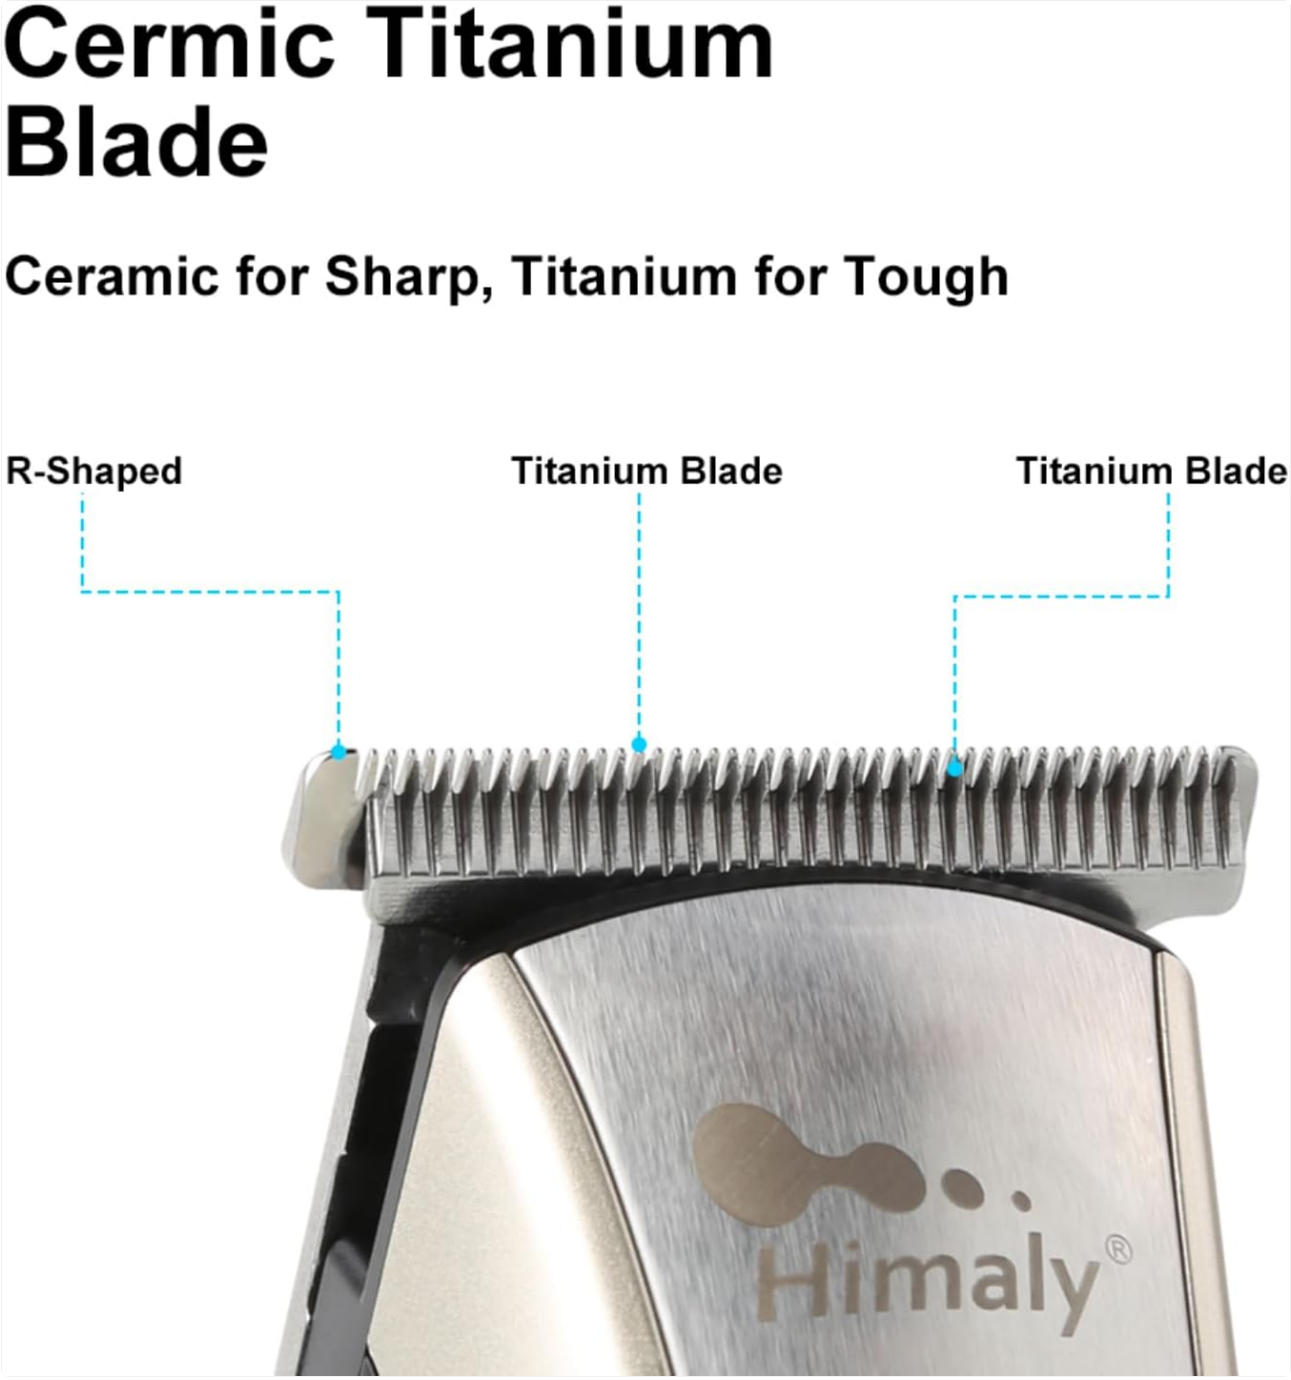

Image: A detailed view of the clipper's blade, highlighting its R-shaped, Ceramic, and Titanium components for sharpness and toughness.

- **Powerful Rotary Motor:** The clipper is powered by a robust rotary motor, ensuring high-speed performance without pulling hair, providing a comfortable grooming experience.



Image: An X-ray style illustration of the clipper's internal powerful rotary motor, emphasizing its high-speed and anti-pulling hair capabilities.

- **Adjustable Guide Combs:** Comes with four position-adjustable guide combs (3mm, 6mm, 9mm, 12mm) to easily achieve your desired hair length and style.



Image: The Himaly hair clipper displayed alongside its four guide combs, clearly labeled with their respective lengths: 3mm, 6mm, 9mm, and 12mm.

- **Low Noise Operation:** Designed to operate at a low noise level, typically below 60dB, for a more comfortable and less disruptive grooming experience.



Image: A child getting a haircut with the Himaly clipper, with an overlay indicating "Low Noise <60dB", demonstrating its quiet operation.

- **Versatile Usage:** Suitable for trimming hair for men, women, children, and even pets, making it a versatile tool for the entire family.



Image: A four-panel collage illustrating the versatility of the Himaly clipper, showing it being used for men's haircuts, women's hair styling, and pet grooming.

Setup

1. Charging the Clipper

1. Ensure the clipper is turned off before charging.
2. Connect the USB charging cable to the charging port on the clipper.
3. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a computer USB port.
4. The charging indicator light will illuminate (if present) to show that the clipper is charging.
5. A full charge typically takes approximately 1 hour. Do not overcharge the battery.
6. Once fully charged, disconnect the USB cable.

2. Attaching Guide Combs

1. Select the desired guide comb (3mm, 6mm, 9mm, or 12mm) based on the hair length you wish to achieve.
2. Align the guide comb with the clipper blade and slide it firmly into place until it clicks.
3. To remove a guide comb, gently push it upwards from the base of the blade until it detaches.

Operating Instructions

General Use

1. Ensure the clipper is fully charged before use.
2. Attach the appropriate guide comb for your desired hair length.
3. Turn on the clipper using the power switch.
4. For best results, use the clipper on clean, dry hair.
5. Move the clipper against the direction of hair growth, using smooth, even strokes.
6. Regularly clear accumulated hair from the blade and comb during use to maintain cutting efficiency.
7. After use, turn off the clipper and clean it as described in the Maintenance section.

Tips for Hair Cutting

- Start with a longer guide comb than you think you need, and gradually switch to shorter combs if desired.
- Comb the hair in the direction of growth before cutting to ensure all hairs are aligned.
- Use a mirror for self-grooming or have someone assist you for hard-to-reach areas.
- For beard trimming, use shorter combs for a closer trim and longer combs for shaping.

Maintenance and Cleaning

Proper maintenance ensures the longevity and optimal performance of your hair clipper.

Cleaning the Blade

1. Ensure the clipper is turned off and unplugged before cleaning.
2. Remove any attached guide comb.
3. Use the provided cleaning brush to brush away loose hairs from the blade and the clipper body.
4. The titanium blade is detachable for thorough cleaning. Gently push the blade assembly forward to detach it from the clipper body.
5. Brush away any remaining hair from both the detached blade and the clipper's internal mechanism.
6. Reattach the blade by aligning it and pushing it back until it clicks into place.

Oiling the Blade

1. After cleaning, apply 1-2 drops of the provided clipper oil onto the teeth of the blade.
2. Turn on the clipper for a few seconds to allow the oil to distribute evenly across the blade.
3. Wipe off any excess oil with a soft, dry cloth.
4. Regular oiling (after every few uses) helps maintain blade sharpness and prevents rust.

Troubleshooting

If you encounter any issues with your Himaly Hair Clippers, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Clipper does not turn on.	Battery is depleted.	Charge the clipper for at least 1 hour.
Clipper runs slowly or pulls hair.	Blade is dirty or not oiled. Battery is low.	Clean and oil the blade. Ensure the clipper is fully charged.
Blade gets hot during use.	Lack of lubrication. Prolonged use.	Apply clipper oil to the blade. Allow the clipper to cool down if used continuously for a long period.
Guide comb does not attach securely.	Incorrect alignment. Debris in attachment area.	Ensure the comb is aligned correctly and push firmly until it clicks. Check for and remove any debris.

Specifications

Attribute	Detail
Brand	himaly
Model	Professional Hair Clippers (Cordless Hair Trimmer Beard Grooming Kit)
Power Source	Cordless, USB Charging
Charging Time	Approx. 1 hour
Operating Time	Approx. 1.5 hours
Blade Material	Titanium
Guide Combs Included	3mm, 6mm, 9mm, 12mm

Attribute	Detail
Item Weight	11.2 ounces
Color	Gold and Black
Recommended Uses	Hair (for men, women, children, pets)

Warranty and Support

Specific warranty details are not provided in the product information. For any warranty claims, technical support, or inquiries regarding your Himaly Professional Hair Clippers, please contact the manufacturer directly through their official website or the retailer from whom you purchased the product.

Always retain your proof of purchase for any warranty-related matters.

© 2024 Himaly. All rights reserved.
This manual is for informational purposes only. Product specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D9H2SZXT

More documents and user manuals: **https://manuals.plus/**