**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



## Ultimate Ears 984-001876+Case

# Ultimate Ears WONDERBOOM 4 Wireless Portable Bluetooth Speaker Instruction Manual

Model: 984-001876+Case | Brand: Ultimate Ears (by Certified Brands)

## Introduction

The Ultimate Ears WONDERBOOM 4 is a compact, portable, and durable Bluetooth speaker designed for exceptional 360-degree sound. It features enhanced bass, specialized modes for outdoor listening and clear vocals, and robust water and dustproof capabilities. This manual provides comprehensive instructions for setting up, operating, and maintaining your WONDERBOOM 4 speaker.




Image: The Ultimate Ears WONDERBOOM 4 speaker in Active Black, shown alongside its dedicated shockproof, water-resistant carrying case. The speaker features large plus and minus volume buttons on its front.

## What's in the Box

- Ultimate Ears WONDERBOOM 4 Portable Bluetooth Speaker
- Signature Series Shockproof Water-Resistant Case
- USB-C Charging Cable
- Quick Start Guide
- Warranty Information

## Product Features




### Bigger 360-Degree Sound

The WONDERBOOM 4 delivers powerful, immersive 360-degree sound, ensuring your audio fills any space. Its boosted sound profile provides up to 14 hours of playtime on a single charge.




### Outdoor Boost and Podcast Mode

Activate Outdoor Boost for a fuller, louder sound profile optimized for open-air environments. The new Podcast Mode enhances vocal clarity, making spoken word content crisp and easy to understand. The speaker offers a Bluetooth range of up to 131 feet (40 meters).

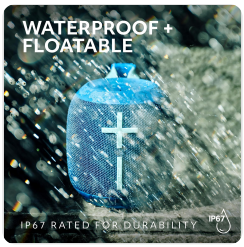


### Waterproof, Dustproof, and Floatable (IP67)

With an IP67 rating, the WONDERBOOM 4 is fully waterproof and dustproof. It can be submerged in up to 1 meter of water for 30 minutes and will float, making it ideal for poolside, beach, or shower use.




### Double Up for Stereo Sound

Pair two WONDERBOOM 4 speakers together for an even bigger sound experience. Press once to double up for synchronized audio, or press again for true stereo sound with distinct left and right channels.




### Sustainable Design

The WONDERBOOM 4's plastic components include a minimum of 31% post-consumer recycled plastic by weight, contributing to a more sustainable product.

## Setup

### 1. Charging Your Speaker

Before first use, fully charge your WONDERBOOM 4. The charging port is located on the bottom of the speaker, protected by a rubber flap. Lift the flap and connect the included USB-C cable to a power source (e.g., USB wall adapter, computer USB port).



Image: Detailed view of the WONDERBOOM 4's bottom, showing the USB-C charging port and the Outdoor Boost/Podcast Mode button.

### 2. Bluetooth Pairing

1. Turn on your WONDERBOOM 4 by pressing the power button located on the top of the speaker. A light indicator will illuminate.
2. Press and hold the Bluetooth button (small button with Bluetooth icon) on the top of the speaker until you hear a tone and the light indicator starts blinking rapidly. This indicates the speaker is in pairing mode.
3. On your device (smartphone, tablet, laptop), go to Bluetooth settings and select "WONDERBOOM 4" from the list of available devices.
4. Once connected, you will hear a confirmation tone from the speaker, and the light indicator will turn solid.

▶ **Watch video online**
Ultimate Ears Surprisingly Bigger 360 Sound

Video: An official product video demonstrating the surprisingly bigger 360-degree sound of the Ultimate Ears WONDERBOOM 4 speaker, showcasing its audio capabilities in various outdoor settings.

## Operating Instructions

### Basic Controls

**Power On/Off:** Press the small circular button on the top of the speaker.

**Volume Control:** Use the large '+' and '-' buttons on the front of the speaker to adjust volume.

**Play/Pause:** Press the central circular button on the top of the speaker once to play or pause audio.

**Skip Track:** Double-press the central circular button on the top of the speaker to skip to the next track.

### Outdoor Boost Mode

To activate Outdoor Boost mode, press the small button located on the bottom of the speaker (next to the charging port). This mode optimizes the sound profile for outdoor listening, providing increased loudness and clarity.

### Podcast Mode

For clearer vocals, activate Podcast Mode by double-pressing the small button on the bottom of the speaker. This mode is ideal for listening to podcasts, audiobooks, or any spoken word content.

### Double Up Mode (Pairing Two WONDERBOOM 4 Speakers)

1. Ensure both WONDERBOOM 4 speakers are powered on and not connected to any other Bluetooth devices.
2. On the first speaker, press the central circular button on the top twice. You will hear a tone indicating it's ready to pair with another speaker.
3. On the second speaker, press the central circular button on the top twice.
4. The speakers will automatically connect, and you will hear a confirmation tone. They will now play synchronized audio.
5. To switch to true stereo mode (left and right channels), double-press the central circular button on either speaker again.

## Maintenance

### Cleaning

To clean your WONDERBOOM 4, use a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the speaker's finish and waterproof coating. Ensure the charging port flap is securely closed before cleaning with water.

### Water and Dust Resistance Care

While the WONDERBOOM 4 is IP67 rated for water and dust resistance, proper care is essential to maintain its integrity:

- Always ensure the rubber flap covering the USB-C charging port is securely closed before exposing the speaker to water or dust.
- After exposure to chlorinated or saltwater, rinse the speaker with fresh water and allow it to air dry completely before charging.
- Do not charge the speaker if the charging port or cable is wet.
- Avoid prolonged submersion beyond the specified depth (1 meter) and duration (30 minutes).

## Troubleshooting

| Problem | Possible Solution |
|---|---|
| Speaker won't turn on. | Ensure the battery is charged. Connect the speaker to a power source using the USB-C cable. |
| Cannot pair with Bluetooth device. | • Ensure the speaker is in pairing mode (blinking Bluetooth light).<br>• Check that Bluetooth is enabled on your device.<br>• Move the speaker closer to your device.<br>• Forget "WONDERBOOM 4" from your device's Bluetooth list and try pairing again.<br>• Restart both the speaker and your device. |
| No sound or low volume. | • Increase volume on both the speaker and your connected device.<br>• Ensure the speaker is properly paired and connected.<br>• Check if the audio source is playing. |
| Audio cutting in/out. | • Move the speaker closer to your device.<br>• Avoid obstacles between the speaker and your device.<br>• Check for interference from other wireless devices.<br>• Ensure the speaker's battery is not critically low. |

## Specifications

| Feature | Detail |
|---|---|
| Model Name | Ultimate Ears 984-001876 Case Bundle |
| Dimensions (H x W x D) | 4.09" x 3.72" x 3.72" (104mm x 94.5mm x 94.5mm) |
| Item Weight | 0.93 Pounds (14.9 ounces) |
| Connectivity | Bluetooth (Wireless Communication Technology) |
| Wireless Range | Up to 131 feet (40 meters) |

| Feature | Detail |
|---|---|
| Battery Life | Up to 14 hours |
| Power Source | Battery Powered (1 Lithium Ion battery included) |
| Waterproof/Dustproof Rating | IP67 (Submersible up to 1m for 30 min, floats) |
| Audio Output Mode | Stereo (with Double Up feature) |
| Control Method | Push Button |
| Recycled Plastic Content | Minimum 31% post-consumer recycled plastic by weight (excluding packaging) |
| Manufacturer | Certified Brands |
| Country of Origin | China |

## Warranty and Support

### Limited Warranty

The Ultimate Ears WONDERBOOM 4 comes with a limited warranty. Please refer to the warranty information included in your product packaging for specific terms and conditions. Retain your proof of purchase for warranty claims.

### Customer Support

For further assistance, troubleshooting, or warranty inquiries, please visit the official Ultimate Ears support website or contact Certified Brands customer service. Contact details can typically be found on the product packaging or the brand's official website.


## Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

**Open the live page**

**https://manuals.plus/asin/B0D9KZ5NGY**

More documents and user manuals: **https://manuals.plus/**