Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ASHUAQI ZJD00133-4-BR

ASHUAQI 4-Light Gold Chandelier Instruction Manual

Model: ZJD00133-4-BR

1. Introduction

This manual provides detailed instructions for the installation, operation, and maintenance of your ASHUAQI 4-Light Gold Chandelier. This modern pendant light fixture is designed for kitchen islands, dining rooms, and similar spaces, featuring a durable metal frame and clear glass shades. Please read this manual thoroughly before beginning installation to ensure safe and proper use.



Image: The ASHUAQI 4-Light Gold Chandelier, showcasing its modern design with gold finish and clear glass shades, installed above a kitchen island.

2. Safety Information

WARNING: To reduce the risk of fire, electric shock, or personal injury, always follow these safety precautions:

- Always turn off the power at the main circuit breaker or fuse box before beginning installation or performing any maintenance.
- Consult a qualified electrician if you are not familiar with electrical installations.
- Use only bulbs of the specified type and wattage (E26, max 40W).
- Do not connect this fixture to an ungrounded electrical system.
- Handle glass components with care to prevent breakage and injury.
- Ensure all connections are secure and properly insulated.
- Keep flammable materials away from the light fixture.

3. Package Contents

Verify that all components are present before beginning installation. The package includes:

- Chandelier Frame (Gold Iron Craft)
- 4 x Clear Glass Shades
- Adjustable Downrods (various lengths for height adjustment)
- Mounting Hardware (including solid ceiling plate, screws, wire nuts)
- Installation Manual



Image: Close-up view of the chandelier's components, highlighting the durable iron construction, thick clear glass shades, E26 bulb sockets, and the adjustable downrods.

4. Setup and Installation

This gold kitchen island pendant light is designed for semi-flush mount installation and comes with an installation manual to guide you. Follow these steps carefully:

1. **Prepare for Installation:**
    - Turn off power at the circuit breaker.
    - Ensure the mounting surface is clean, dry, and structurally sound.
2. **Assemble the Fixture:**
    - Attach the adjustable downrods to the main fixture body. The fixture offers an adjustable height range of 22.8 inches to 42.5 inches using various rod lengths.
    - Secure the clear glass shades to the fixture.

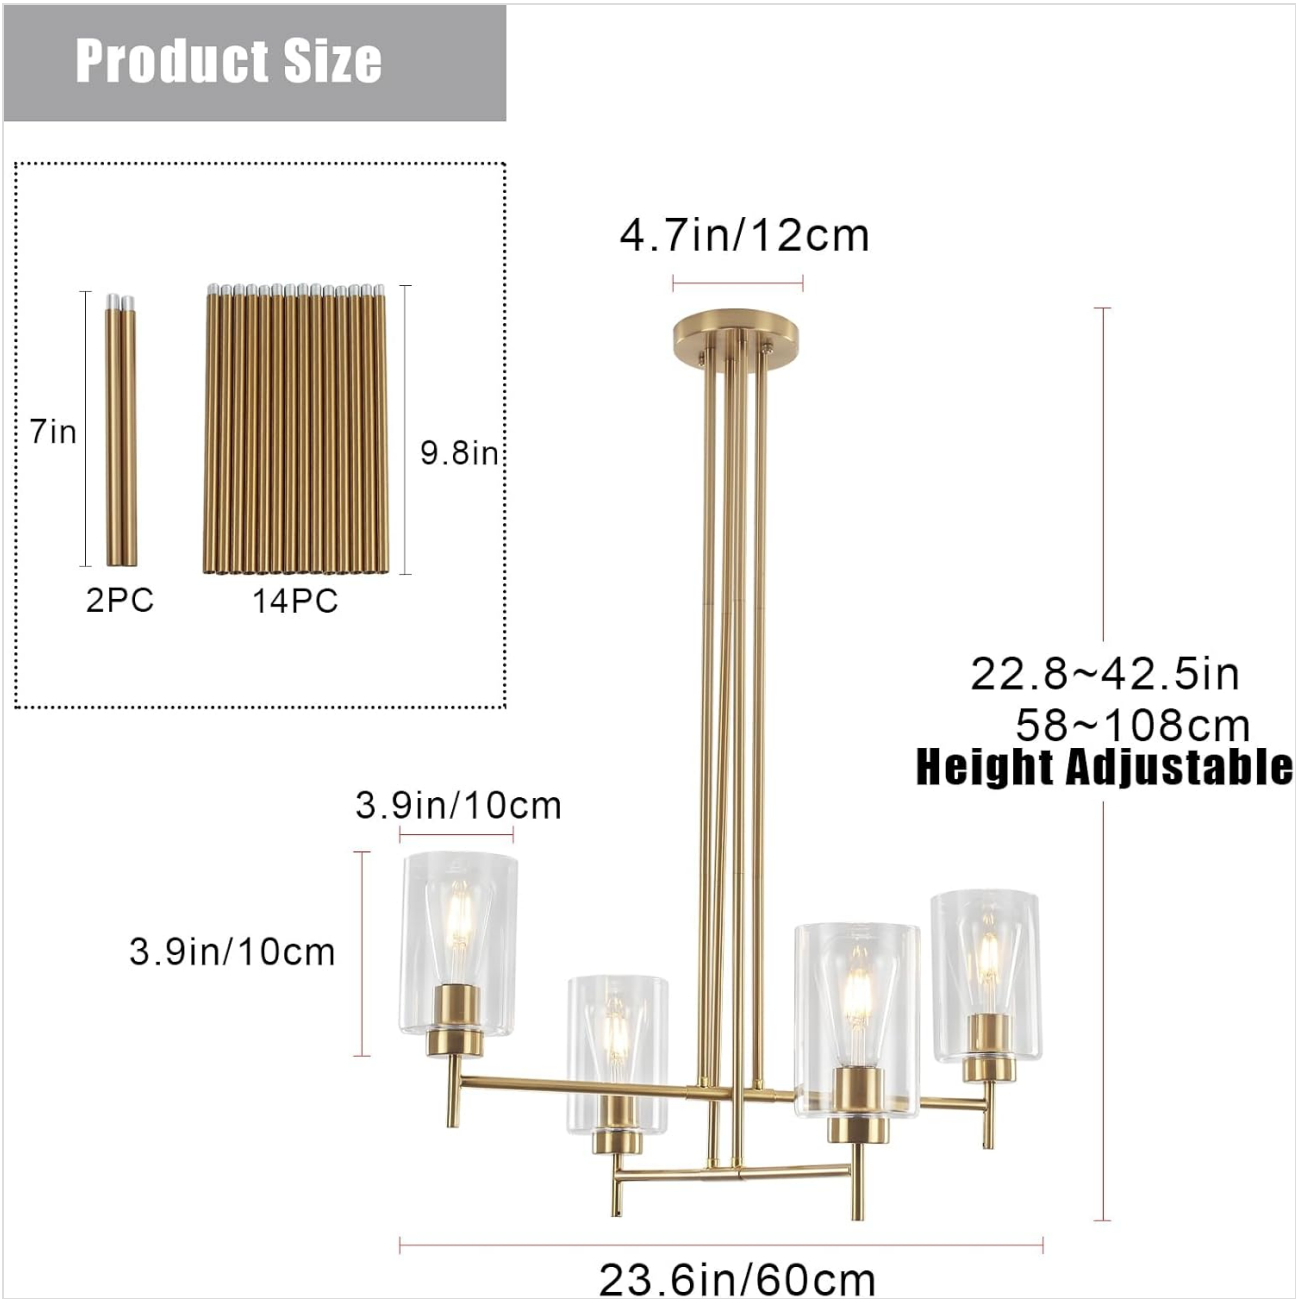


Image: A diagram illustrating the product dimensions and the adjustable height feature, showing various rod lengths for customization.

3. **Mount the Ceiling Plate:**
    - Attach the solid ceiling plate to the junction box using the provided mounting hardware.



Image: A detailed view of the solid ceiling plate, which provides stable support for the fixture.

4. **Wire the Fixture:**
    - Connect the fixture's wires to the house wires according to standard electrical codes (black to black, white to white, ground to ground). Use wire nuts to secure connections.
5. **Secure the Fixture:**
    - Carefully push the wired fixture up to the ceiling plate and secure it with the provided screws.
6. **Install Bulbs:**
    - Screw in four E26 base bulbs (not included) into the sockets. Ensure bulbs do not exceed the maximum wattage of 40W per bulb.



Image: A close-up view of the E26 bulb socket, indicating where compatible bulbs should be installed.



Image: A detailed view of one of the clear glass shades, showing its transparency and how it encases the bulb.

7. **Restore Power:**
    - Turn the power back on at the circuit breaker.

5. Operating Instructions

The ASHUAQI 4-Light Gold Chandelier is designed for straightforward operation.

- **Power On/Off:** Control the light fixture using a standard wall switch (Push Button type).
- **Bulb Compatibility:** The fixture is compatible with any type of E26 bulb, including LED, Edison, incandescent, CFL, and halogen bulbs, up to a maximum of 40W per bulb.
- **Light Color:** The fixture is designed to emit warm white light, depending on the bulbs installed.
- **Brightness:** With compatible bulbs, the fixture can provide approximately 450 lumens of brightness.
- **Control Method:** While primarily controlled by a wall switch, some advanced smart bulbs compatible with E26 sockets may allow for app control if the bulb itself supports it. The fixture itself does not have integrated app control.



Image: The chandelier providing illumination in a dining room setting, demonstrating its functional use.

6. Maintenance

Regular maintenance will help preserve the appearance and functionality of your chandelier.

- **Cleaning:**
  - Ensure power is off before cleaning.
  - Wipe the metal parts with a soft, dry cloth. Do not use abrasive cleaners or polishes, as they may damage the finish.
  - Clean the clear glass shades with a soft, damp cloth and a mild glass cleaner. Dry thoroughly to prevent water spots.
- **Bulb Replacement:**
  - Always turn off power before replacing bulbs.
  - Allow bulbs to cool completely before handling.
  - Replace with E26 base bulbs, not exceeding 40W.
- **Inspection:**
  - Periodically check all connections and mounting hardware to ensure they remain secure.
  - Inspect wires for any signs of wear or damage.

7. Troubleshooting

If you encounter issues with your chandelier, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	No power to the fixture. Loose wire connections. Faulty bulb. Faulty wall switch.	Check circuit breaker. Verify all wire connections are secure (ensure power is off first). Replace bulb with a known working one. Test or replace wall switch.
Lights flicker.	Loose bulb. Incorrect bulb type (e.g., non-dimmable bulb on a dimmer switch). Loose wiring.	Tighten bulbs. Ensure bulb compatibility with your switch type. Check wire connections (ensure power is off first).
Glass shade is loose or broken.	Improper installation. Accidental impact.	Re-secure shade according to installation steps. Contact customer support for replacement parts if available.

If problems persist after attempting these solutions, please contact ASHUAQI customer support.

8. Specifications

Attribute	Detail
Brand	ASHUAQI
Model Number	ZJD00133-4-BR
Product Dimensions	20"L x 8"W x 9"H (Fixture body)
Adjustable Height	22.8" to 42.5" (58cm to 108cm)
Item Weight	8.13 pounds
Material	Iron (Fixture), Glass (Shades)
Color	Gold (Fixture), Clear (Shades)
Light Fixture Form	Chandelier / Pendant Light
Number of Light Sources	4
Bulb Base	E26
Max Wattage per Bulb	40W
Voltage	120 Volts (AC)
Light Source Type	LED, Edison, Incandescent, CFL, Halogen compatible
Installation Type	Semi Flush Mount
Indoor/Outdoor Usage	Indoor
Special Feature	Adjustable Height
Included Components	Mounting Hardware

9. Warranty and Support

For any questions, concerns, or assistance with your ASHUAQI 4-Light Gold Chandelier, please contact ASHUAQI customer support. While specific warranty details are not provided in this manual, please retain your proof of purchase for any potential warranty claims.
You can typically find contact information on the product packaging or the manufacturer's official website.

© 2025 ASHUAQI. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DBQJVY73

More documents and user manuals: **https://manuals.plus/**