Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Biolomix HB3315

Biolomix Immersion Blender 5-in-1 Hand Blender

Model: HB3315 | Brand: Biolomix

1. Important Safety Instructions

Please read all instructions carefully before using your Biolomix Immersion Blender. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always unplug the appliance from the power supply before assembling, disassembling, or cleaning.
- Do not immerse the motor unit in water or any other liquid. Only the detachable blending shaft, whisk, milk frother, beaker, and chopper bowl are washable.
- Keep hands, hair, clothing, and utensils away from moving parts during operation to prevent injury and damage to the appliance.
- Avoid contact with moving parts.
- This appliance is not intended for use by children. Close supervision is necessary when any appliance is used near children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Use only attachments recommended or sold by the manufacturer.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Blades are sharp. Handle with care.

2. Product Components

Your Biolomix Immersion Blender comes with a versatile set of accessories to assist with various kitchen tasks.

- Blender Motor Unit (Main Unit)
- Blender Shaft (Immersion Blender Attachment)
- Whisk Attachment
- Milk Frother Wand
- 600ml Smoothie Cup (Beaker)
- 800ml Chopper Bowl with Blade and Lid



The complete Biolomix Immersion Blender set, showcasing all included components ready for use in a vibrant kitchen setting.





Detailed view of each accessory with their respective labels and approximate dimensions for easy identification.

3. Setup and Assembly

The Biolomix Immersion Blender is designed for easy assembly and disassembly, allowing you to switch between functions effortlessly.

Attaching and Detaching Accessories:

1. Align the desired attachment (blender shaft, whisk adapter, or chopper lid) with the motor unit.
2. Twist the attachment clockwise until it clicks securely into place.
3. To detach, press the release buttons on both sides of the motor unit and twist the attachment counter-clockwise.



Visual guide demonstrating the simple click-and-twist mechanism for attaching and detaching the various components.

4. Operating Instructions

Your Biolomix Immersion Blender features a powerful 1200W motor with infinitely variable speed control and a Turbo mode for optimal performance across all tasks.

Speed Control:

The blender offers variable speed settings. Turn the dial on top of the motor unit to adjust the speed from minimum to maximum. For an extra boost of power, press and hold the 'TURBO' button. The Turbo mode operates at maximum speed and cannot be adjusted by the speed controller.



Illustration of the speed control and Turbo button for precise blending.

Using the Immersion Blender:

Ideal for blending smoothies, soups, sauces, and baby food directly in pots, bowls, or the included beaker.

1. Attach the blender shaft to the motor unit.
2. Immerse the blade guard into the ingredients.
3. Press the power button to start blending. Move the blender up and down gently for even results.
4. The durable 304 stainless steel 4-leaf blades are designed for efficient blending and nutrient extraction, even capable of crushing ice.



The immersion blender in action, demonstrating its use for various liquid preparations like soups and smoothies.



The 5-in-1 immersion hand blender is a powerful tool for diverse kitchen needs, suitable for family meal preparation.



Easily prepare smooth and nutritious baby food with the immersion blender.



The durable 4-leaf stainless steel blade ensures efficient blending and can handle tough ingredients, including ice.



Equipped with a powerful 1200W pure copper motor for smooth and fast blending.



Use the 600ml smoothie cup for convenient preparation of smoothies and juices.

▶ **Watch video online**

Official product video demonstrating the versatility of the Biolomix Immersion Blender for various food preparations, including sauces.

Using the Chopper:

The 800ml chopper bowl is perfect for mincing, dicing, and shredding ingredients like vegetables, meat, and nuts.

1. Place the chopper blade onto the central pin inside the chopper bowl.
2. Add ingredients to the bowl. Do not overfill.
3. Place the chopper lid onto the bowl and attach the motor unit.
4. Press the power button to chop. Use short pulses for coarse chopping or hold for finer results.



The chopper attachment efficiently processes various ingredients, from nuts to meat and onions.



The multi-purpose food chopper is ideal for preparing seasoning meat sauce, spaghetti sauce, pizza toppings, and more.



The S-type whirlwind meat grinder blades ensure efficient and smooth food chopping.

Using the Whisk:

The stainless steel whisk is perfect for whipping egg whites, cream, and preparing cake batters.

1. Attach the whisk to the whisk adapter, then attach the adapter to the motor unit.
2. Place the whisk into the ingredients in a bowl.
3. Press the power button to start whisking until desired consistency is achieved.



The whisk attachment is excellent for achieving light and fluffy textures for egg whites, cream, and cake batter.

Easy to Switch Attachments With a Click

Press release button on both sides of blender shaft, attach hand blender, egg whisk, or chopper bowl to complete installation.



The whisk allows for quicker whipping of egg whites and creams, saving time in preparing ingredients for cakes, cookies, meringues, and other desserts.

Using the Milk Frother:

Create fluffy and creamy milk foam for lattes, cappuccinos, and hot cocoa with the milk frother wand.

1. Insert the milk frother wand into the motor unit.
2. Submerge the frother tip into milk in a cup.
3. Press the power button to froth until desired foam consistency is achieved.



Whisk

The milk frother wand is perfect for creating creamy foam for your favorite beverages.


Easy To Store

Wire with holes for easy hanging



S type whirlwind meat grinder blades

Make food Chopping more efficient, evenly and smoothly.

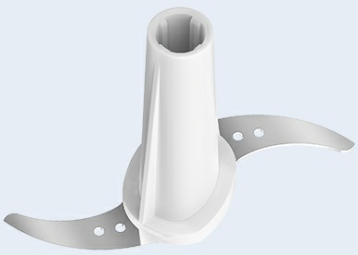

Achieve fluffy and creamy milk foam for lattes, cappuccinos, and flat whites.

5. Cleaning and Maintenance

Proper cleaning and maintenance will ensure the longevity and optimal performance of your Biolomix Immersion Blender.

- Always unplug the appliance before cleaning.
- The detachable blending shaft, whisk, milk frother, beaker, and chopper bowl are dishwasher safe.
- For manual cleaning, wash these parts with warm soapy water and rinse thoroughly.
- Wipe the motor unit with a damp cloth. Do not immerse the motor unit in water or any other liquid.
- Ensure all parts are completely dry before storing.



The detachable parts are made of professional-grade stainless steel and are easy to clean with warm soapy water or in a dishwasher.

Storage:

The motor unit features a convenient hanging loop for easy storage.



The integrated wire loop allows for easy hanging and storage.

6. Troubleshooting

If you encounter any issues with your Biolomix Immersion Blender, please refer to the following common

troubleshooting tips:

- **Appliance does not turn on:** Ensure the power cord is securely plugged into a working electrical outlet. Check if the power button is pressed correctly.
- **Attachments not working:** Verify that the attachment is correctly assembled and securely locked into the motor unit.
- **Motor overheating:** If the motor unit feels hot, unplug the appliance and let it cool down for at least 30 minutes before resuming use. Avoid continuous operation for extended periods.
- **Poor blending/chopping results:** Ensure ingredients are cut into appropriate sizes. Do not overfill the chopper bowl or beaker. Adjust speed settings as needed.

For persistent issues not resolved by these steps, please contact Biolomix customer support.

7. Specifications

Detailed technical specifications for the Biolomix Immersion Blender HB3315:

Feature	Specification
Brand	Biolomix
Model Number	HB3315
Power	1200W
Voltage	100-120V / 60Hz
Color	Black
Blade Material	304 Stainless Steel
Chopper Bowl Capacity	800ml
Smoothie Cup Capacity	600ml
Product Dimensions (D x W x H)	17.13" x 2.64" x 8.66"
Item Weight	4.36 pounds
Special Features	Portable, Adjustable Speed Control, Multiple Speeds, Multiple Attachments, Removable Blade

8. Warranty and Support

Biolomix is committed to providing high-quality products and customer satisfaction. For any questions, concerns, or warranty claims regarding your Immersion Blender, please contact Biolomix customer support through their official channels or the retailer where the product was purchased.
Please retain your proof of purchase for any warranty-related inquiries.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DBVM74W2

More documents and user manuals: **https://manuals.plus/**