Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

DeLUX M618mini

DeLUX Wireless Vertical Mouse User Manual

Model: M618mini-Black

Introduction

Thank you for choosing the DeLUX M618mini-Black Wireless Vertical Mouse. This ergonomic mouse is designed to provide a comfortable and natural hand position, reducing strain during prolonged use. Featuring dual-mode connectivity (2.4G wireless and Bluetooth 5.2), a rechargeable battery, and adjustable DPI settings, it offers versatility and precision for various computing needs.

This manual provides detailed instructions on setting up, operating, and maintaining your new mouse to ensure optimal performance and longevity.



Image: The DeLUX M618MINI Dual-mode Wireless Ergonomic Vertical Mouse, highlighting its key features such as ergonomic design, dual-mode, mini exquisite size, 500mAh rechargeable battery, and 4000 DPI.

Product Features

- **Ergonomic Design:** The natural handshake posture and skin-friendly material reduce hand fatigue and promote a comfortable grip. Includes a concave area for the thumb and an extended bottom edge for the pinky finger for smoother movement.
- **Rechargeable Battery:** Built-in 500mAh Li-ion battery provides up to 2 weeks of stable use on a 2-hour charge, with up to six months standby time. USB-C port allows charging during use.

- **Dual Mode Connectivity:** Seamlessly switch between 2.4G wireless mode (via USB receiver) and Bluetooth 5.2 mode for versatile device compatibility.
- **Adjustable DPI:** Five adjustable DPI levels (800/1200/1600/2400/4000) for precise cursor control, easily changed via the DPI button.
- **Quiet Clicks:** Designed with silent click buttons to minimize noise, providing a quieter working environment.
- **Wide Compatibility:** Compatible with Windows 7/8/10/Mac OS. Suitable for PC, laptop, computer, notebook, phone, and MacBook. Note: Backward and forward buttons may have limited functionality on Mac.

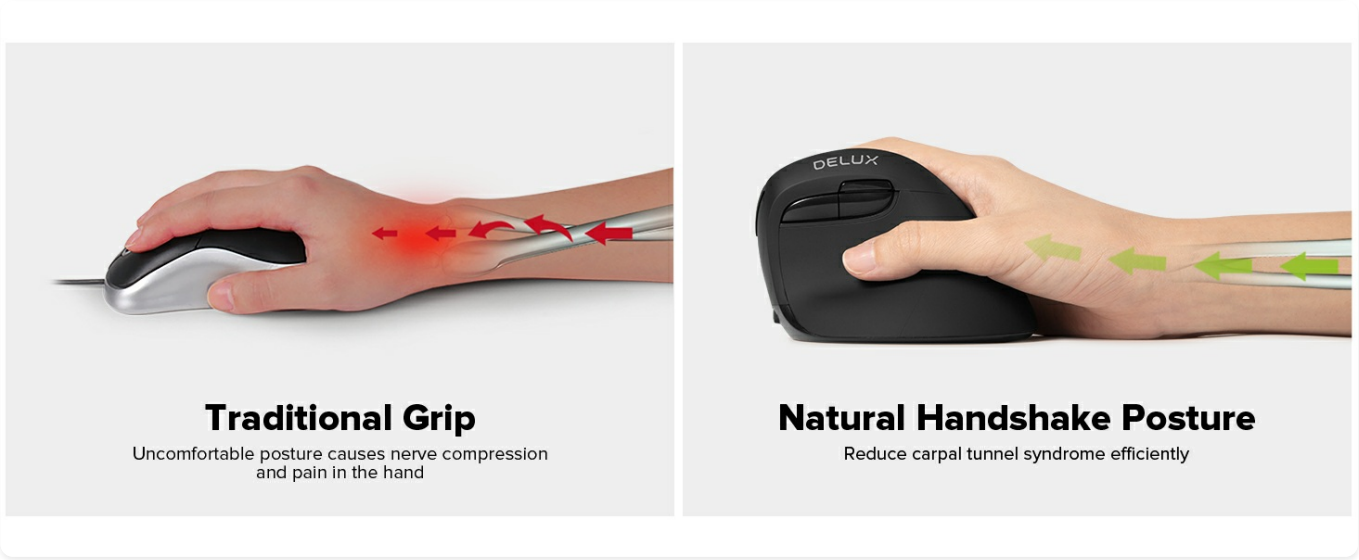


Image: Illustrates the difference between a traditional mouse grip, which can cause nerve compression, and the natural handshake posture promoted by the vertical mouse, designed to reduce carpal tunnel syndrome.

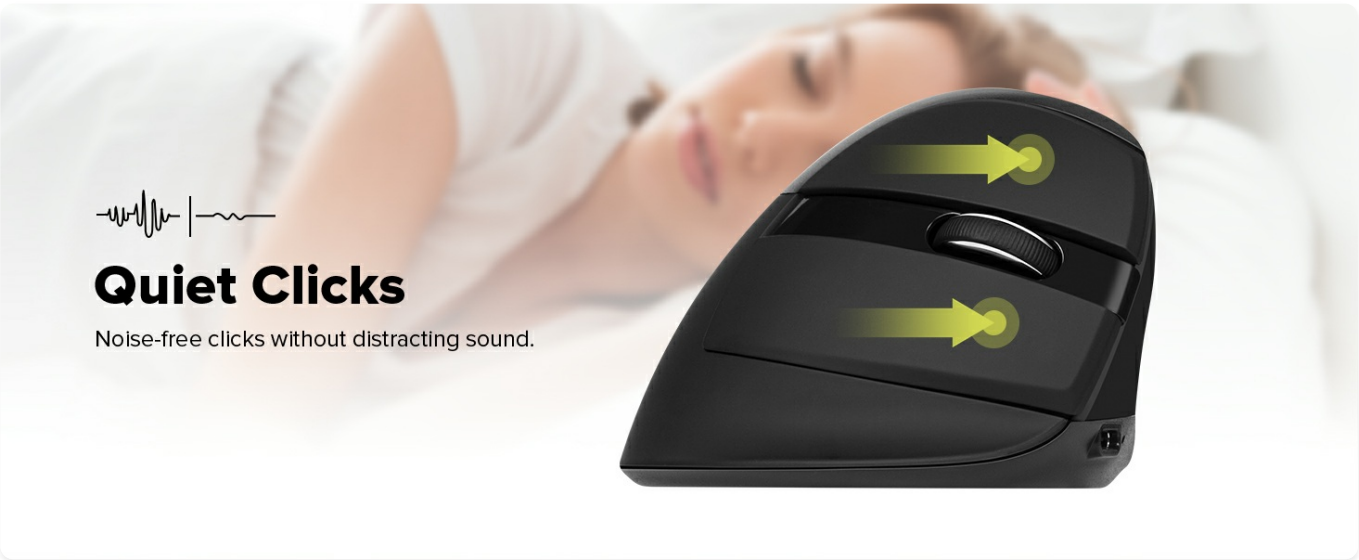


Image: Shows the DeLUX vertical mouse with an overlay indicating "Quiet Clicks," emphasizing its noise-free operation for a less distracting work environment.

Setup Guide

1. Charging the Mouse

Before first use, it is recommended to fully charge the mouse. Connect the included USB-C cable to the charging port on the front of the mouse and the other end to a USB power source (e.g., computer USB port, USB wall adapter).

- A full charge takes approximately 2 hours.

- The mouse can be used while charging.
- A low battery indicator (if present) will alert you when charging is needed.



Image: Depicts the DeLUX vertical mouse being charged via its USB-C port, highlighting the 500mAh rechargeable battery and its long operating time.

2. Connecting via 2.4G Wireless Mode

1. Locate the USB receiver, usually stored in a compartment on the bottom of the mouse.
2. Plug the USB receiver into an available USB port on your computer.
3. Turn on the mouse using the ON/OFF switch located on the bottom.
4. Switch the mode to 2.4G (indicated by '1' on the bottom of the mouse). The mouse should automatically connect.

3. Connecting via Bluetooth 5.2 Mode

1. Turn on the mouse using the ON/OFF switch located on the bottom.
2. Switch the mode to BT 5.2 (indicated by '2' on the bottom of the mouse).
3. Press and hold the mode switch button (labeled '3' on the bottom) for 3-5 seconds until the indicator light starts blinking, indicating pairing mode.
4. On your device (PC, laptop, phone), go to Bluetooth settings and search for new devices.
5. Select "DeLUX M618mini" (or similar) from the list of available devices to pair.
6. Once paired, the indicator light on the mouse will stop blinking and remain solid or turn off.

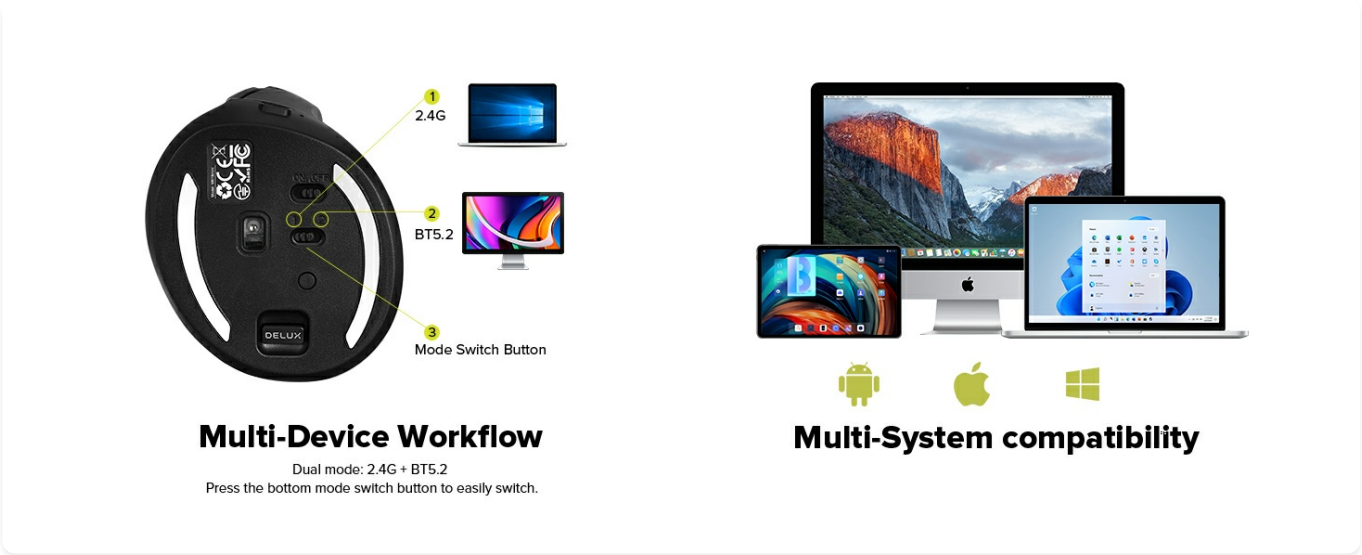


Image: Displays the bottom of the DeLUX vertical mouse with labels for 2.4G, BT 5.2, and the Mode Switch Button, illustrating its multi-device workflow and compatibility with Android, Apple, and Windows operating systems.

Operating Instructions

Button Functions

- **Left Click Button:** Standard primary click function.
- **Right Click Button:** Standard secondary click function.
- **Scroll Wheel:** Scroll up or down for navigation. Press for middle click function.
- **Forward Button:** Navigates forward in web browsers or file explorers.
- **Backward Button:** Navigates backward in web browsers or file explorers.
- **DPI Button:** Located above the backward button. Press to cycle through DPI settings.

Adjusting DPI (Sensitivity)

The mouse offers five adjustable DPI levels to suit your preference and task requirements. Press the DPI button to cycle through the settings:

- 800 DPI
- 1200 DPI (Default)
- 1600 DPI
- 2400 DPI
- 4000 DPI



Image: Illustrates the DeLUX vertical mouse with an arc showing the five adjustable DPI settings (800, 1200, 1600, 2400, 4000 DPI) and the location of the DPI button for easy adjustment.

Maintenance

To ensure the longevity and optimal performance of your DeLUX Wireless Vertical Mouse, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the mouse. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials.
- **Sensor Care:** Keep the optical sensor on the bottom of the mouse clean and free from dust or debris. Use a cotton swab or compressed air if necessary.
- **Storage:** When not in use for extended periods, store the mouse in a cool, dry place. If storing for a very long time, ensure the battery is partially charged (around 50%) to preserve battery health.
- **Avoid Extreme Conditions:** Do not expose the mouse to extreme temperatures, direct sunlight, high humidity, or liquids.

Troubleshooting

Problem	Possible Cause	Solution
Mouse not responding.	Low battery; Mouse is off; Incorrect connection mode; USB receiver not connected (2.4G).	Charge the mouse; Turn on the mouse; Ensure correct mode (2.4G or BT 5.2) is selected; Re-insert USB receiver.
Bluetooth connection issues.	Mouse not in pairing mode; Device Bluetooth is off; Interference.	Ensure mouse is in BT 5.2 mode and pairing mode (blinking light); Turn on Bluetooth on your device; Move closer to the device or away from other wireless devices.
Cursor movement is erratic or jumpy.	Dirty optical sensor; Unsuitable surface; Low battery.	Clean the optical sensor; Use on a clean, non-reflective mouse pad or surface; Charge the mouse.

Problem	Possible Cause	Solution
Buttons or scroll wheel not working.	Software conflict; Hardware issue.	Restart your computer; Re-pair the mouse; Check for driver updates (if applicable).
Limited functionality on Mac.	Specific buttons (forward/backward) are not fully supported by macOS without additional software.	This is a known limitation. Consider third-party software for button remapping if desired.

Specifications

Feature	Detail
Model Number	M618mini-Black
Connectivity Technology	Bluetooth 5.2, 2.4G Wireless
Movement Detection	Optical
DPI Levels	800 / 1200 / 1600 / 2400 / 4000
Buttons	6 (Left, Right, Scroll Wheel, Forward, Backward, DPI)
Battery Type	1 Lithium Ion (included)
Battery Capacity	500mAh
Item Weight	3.84 ounces (approx. 109g)
Package Dimensions	4.21 x 3.78 x 3.11 inches
Manufacturer	DELUX
Country of Origin	China



Vertical Mouse for Small Hands

Image: Technical drawing showing the dimensions of the DeLUX vertical mouse: 103mm length, 89mm width, and 69mm height, indicating its compact size for small hands.

Warranty and Support

DeLUX products are designed and manufactured to the highest quality standards. For warranty information and technical support, please refer to the official DeLUX website or contact their customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.

For further assistance, you may visit the DeLUX Store on Amazon.

© 2024 DeLUX. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DDT1L8JD

More documents and user manuals: **https://manuals.plus/**