Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Yalissey B0DDTN6Z5D

Yalissey 3-Seat Hanging Porch Swing Instruction Manual

Model: B0DDTN6Z5D

1. Important Safety Information

Please read and understand all safety instructions before assembly and use of the Yalissey 3-Seat Hanging Porch Swing. Failure to follow these instructions may result in injury or product damage.

- This product is for outdoor use only.
- Keep away from open flames or high heat sources.
- Supervise children and pets to avoid entrapment risks.
- Ensure the product is securely installed according to the assembly instructions.
- Do not exceed the maximum weight capacity of 800 pounds.
- Regularly inspect all components for wear or damage. Discontinue use if any part is compromised.

2. Package Contents

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Swing Seat Frame (Metal)
- Seat Cushion (3.9-inch thickened)
- Back Cushions (3 included)
- Roll Pillows (2 included)
- Hanging Chains (2 chains, 45.6 inches each)
- Cup Holders / Tea Trays (2 included)
- Assembly Hardware (Eye Bolts, Snap Hoops, etc.)
- Assembly Tools
- Instruction Manual

3. Setup and Assembly

The Yalissey Porch Swing is designed for quick and convenient assembly, typically taking around 15 minutes with two people. All necessary tools are included.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Compare with the package contents list to ensure everything is present.
2. **Assemble Swing Frame:** Follow the detailed, illustrated steps in the provided assembly instructions to connect the metal frame components. Ensure all bolts are securely tightened.
3. **Attach Chains:** Securely attach the hanging chains to the designated points on the swing frame using the provided eye bolts and snap hoops. Verify that the connections are firm and stable. Each chain is 45.6 inches long.
4. **Install Cup Holders:** Attach the two side cup holders/tea trays to the swing frame.
5. **Place Cushions:** Position the 3.9-inch thick seat cushion, three back cushions, and two roll pillows onto the swing seat.
6. **Hang the Swing:** With the assistance of another person, carefully lift and hang the assembled swing onto a sturdy, appropriate support structure (e.g., a porch beam, a robust swing stand, or a strong tree branch). Ensure the hanging points can safely support the swing and its maximum weight capacity of 800 lbs.



Figure 3.1: Product dimensions and key features for assembly.



Figure 3.2: Simplified assembly process overview.



Figure 3.3: Components for secure hanging and weight capacity.

▶ **Watch video online**
Yalissey 3 Seat Hanging Porch Swing

Video 3.1: Official product video demonstrating features and potentially assembly steps. (Source: XINSHENGA)

4. Operating Instructions

Your Yalissey Porch Swing is designed for comfortable outdoor leisure. Follow these guidelines for optimal use:

- **Seating:** The swing features an extra-wide 60-inch seat, comfortably accommodating up to 3 individuals (e.g., 2 adults and 1 child).
- **Cup Holders:** Utilize the upgraded 1.5-inch deep cup holders on each side to securely hold beverages, preventing spills.
- **Cushion Comfort:** Enjoy the plush comfort of the 3.9-inch thickened seat cushion and supportive back cushions.
- **Gentle Swinging:** Use the swing with a gentle, controlled motion. Avoid excessive force or sudden movements.
- **Placement:** The swing is suitable for various outdoor settings such as porches, gardens, backyards, or under sturdy trees.



Figure 4.1: The swing comfortably seats up to three individuals.



Figure 4.2: Secure and deep cup holders for beverages.



Figure 4.3: Cushion features for enhanced comfort and durability.

5. Maintenance

Proper maintenance will extend the life and appearance of your porch swing.

- **Frame Cleaning:** The metal frame features a powder-coated finish and a galvanized layer for rust and corrosion resistance. Clean the frame with a mild soap and water solution and a soft cloth. Rinse thoroughly and dry completely to prevent water spots.
- **Cushion Care:** The cushions are made from splash-proof, wrinkle-resistant polyester fabric with memory foam filling. The seat cushion cover is removable for easy cleaning. Spot clean minor spills with a damp cloth. For deeper cleaning, remove the seat cushion cover and follow the care instructions on the label. Allow cushions to air dry completely before re-use or storage.
- **Hardware Inspection:** Periodically check all bolts, chains, and connections to ensure they remain tight and

secure. Tighten any loose hardware as needed.

- **Winter Storage:** During harsh weather conditions or off-season, it is recommended to store the cushions indoors and cover the metal frame to protect it from extreme elements.

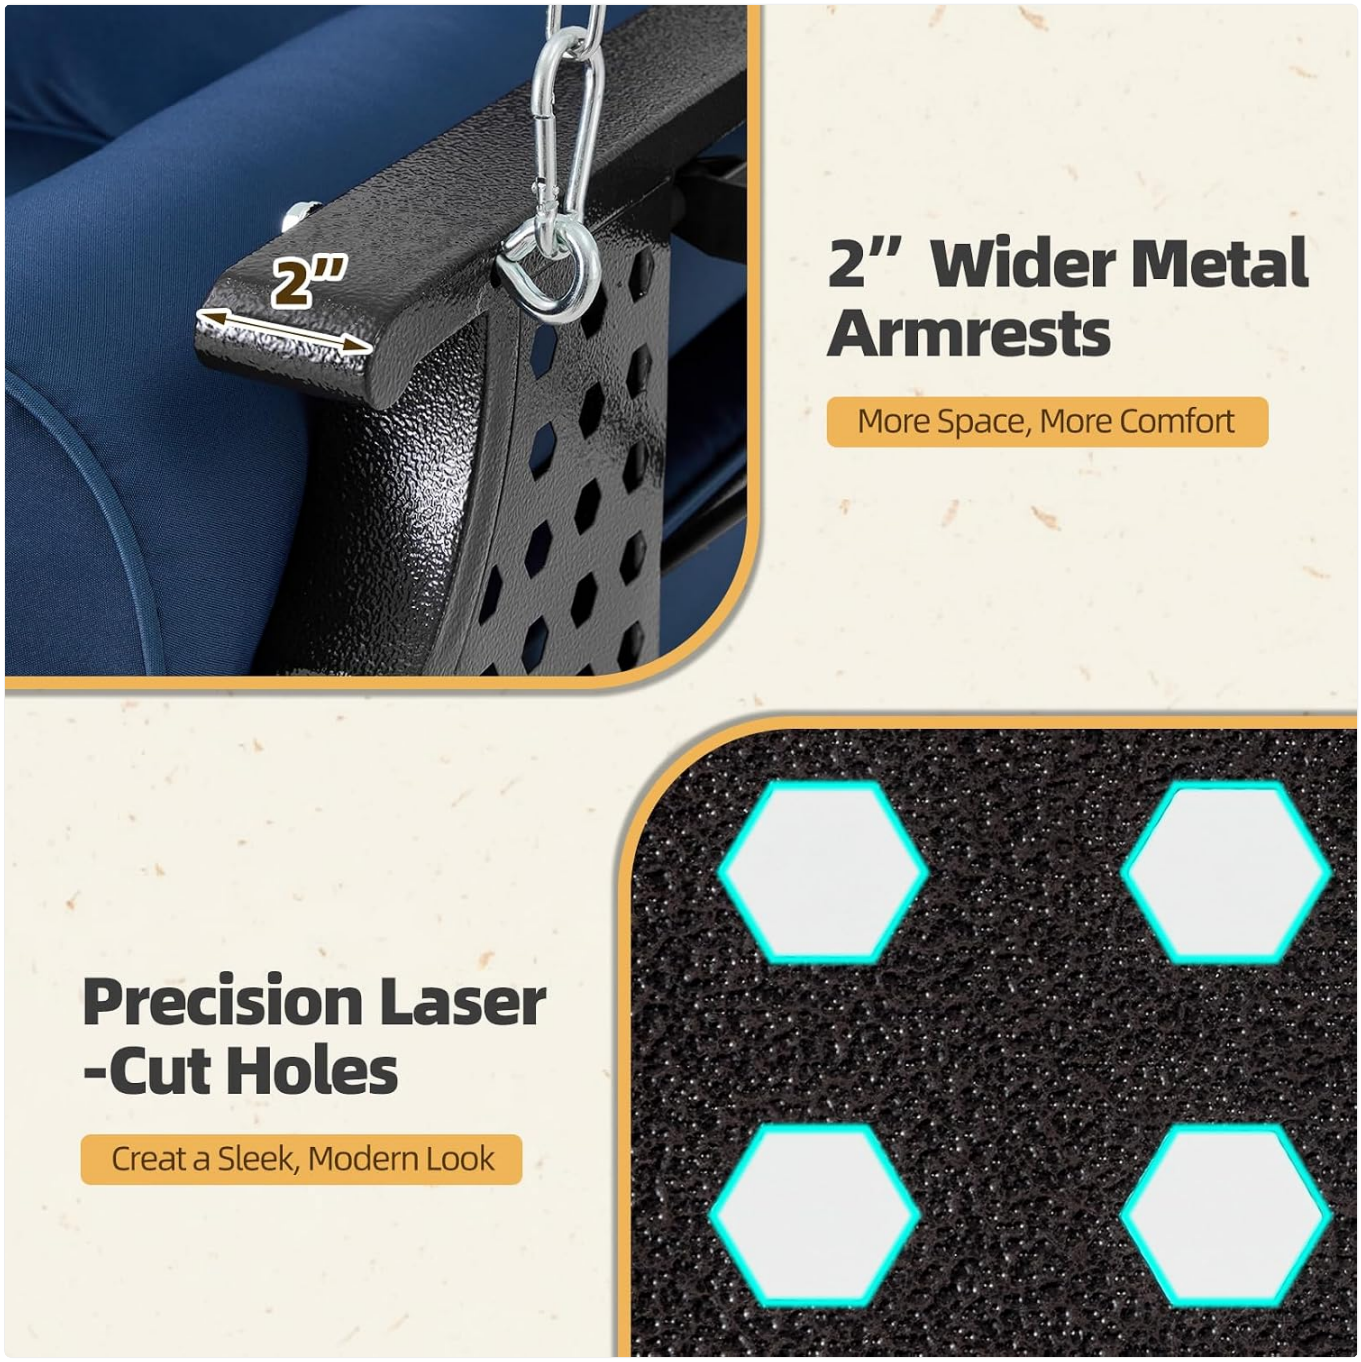


Figure 5.1: Triple-layer protection for enhanced durability and corrosion resistance.



Figure 5.2: Cushion material properties for easy maintenance.

6. Troubleshooting

If you encounter any issues with your Yalissey Porch Swing, refer to the following common solutions:

- **Swing feels unstable:** Ensure all assembly bolts are tightened. Verify that the hanging structure is secure and capable of supporting the swing's weight.
- **Squeaking noise during swinging:** Apply a silicone-based lubricant to the chain connections and any moving metal parts.
- **Cushions appear flat:** The cushions feature high-rebound memory foam. Allow them time to expand after unpacking. Fluffing them regularly can help maintain their shape.
- **Difficulty with assembly:** Review the detailed instruction manual and illustrations. Ensure you have the recommended number of people (2) for assembly. If issues persist, contact customer support.

7. Specifications

Feature	Detail
Brand	Yalissey
Model Number	B0DDTN6Z5D
Product Dimensions (D x W x H)	19"D x 60"W x 11.9"H
Item Weight	72 Pounds
Weight Limit	800 Pounds
Seating Capacity	3
Seat Depth	19 inches

Feature	Detail
Seat Height	20.3 Inches
Frame Material Type	Alloy Steel (Powder Coated, Galvanized)
Upholstery Fabric Type	Polyester
Fill Material	Memory Foam
Number of Cup Holders	2
Included Components	Tea Trays, 3 Thickened Back Cushions, Cushions, Cup-holders, Chains
Assembly Required	Yes (Recommended 2 people)
Includes All Assembly Tools	Yes

8. Warranty Information

The Yalissey 3-Seat Hanging Porch Swing comes with a **lifetime warranty** covering parts and labor. This warranty ensures your product is free from defects in materials and workmanship under normal use.

For warranty claims or further details, please retain your proof of purchase and contact Yalissey customer support.

9. Customer Support

If you have any questions, require assistance with assembly, or need to report a missing/damaged part, please contact Yalissey customer support through the retailer's platform or visit the official Yalissey brand store.

Online Support: Visit the Yalissey Store on Amazon

© 2026 Yalissey. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DDTN6Z5D

More documents and user manuals: **https://manuals.plus/**