Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

DREAME Z20

DREAME Z20 Cordless Vacuum Cleaner User Manual

MODEL: Z20

Brand: DREAME

Product Overview

The DREAME Z20 Cordless Vacuum Cleaner is a smart cleaning solution designed for versatile use across all surfaces. It features a high-speed motor delivering powerful suction and intelligent dirt detection for optimized cleaning efficiency.

- **Powerful Suction:** Equipped with a high-speed motor, the Z20 delivers an impressive 250AW suction power for deep cleaning on carpets and hardwood floors.
- **Extended Runtime:** Enjoy up to 90 minutes of cleaning time, ideal for larger homes without frequent interruptions.
- **Smart Cleaning Technology:** Infrared sensors detect dirt particles and automatically adjust suction power. A user-friendly LCD screen displays cleaning progress and results.
- **Illuminate Your Cleaning Experience:** CelesTect technology with integrated LED light and dual brushes (multi-surface and soft roller) reveals hidden dust on both carpets and hard floors.
- **Versatile and Effortless Cleaning:** A range of attachments allows for easy cleaning of pet hair, delicate surfaces, tight corners, and low angles.



Figure 1: The DREAME Z20's powerful 250AW suction for efficient cleaning.

What's in the Box

The DREAME Z20 Cordless Vacuum Cleaner comes with a comprehensive set of components to address various cleaning needs:

- Main Body
- Illumination Soft Roller Brush
- Illumination Multi-Surface Brush
- Motorized Mini-Brush
- Rotating Soft Dusting Brush
- Combination Tool
- Extension Rod

- Extension Hose
- Ground Base
- Flexible Adapter

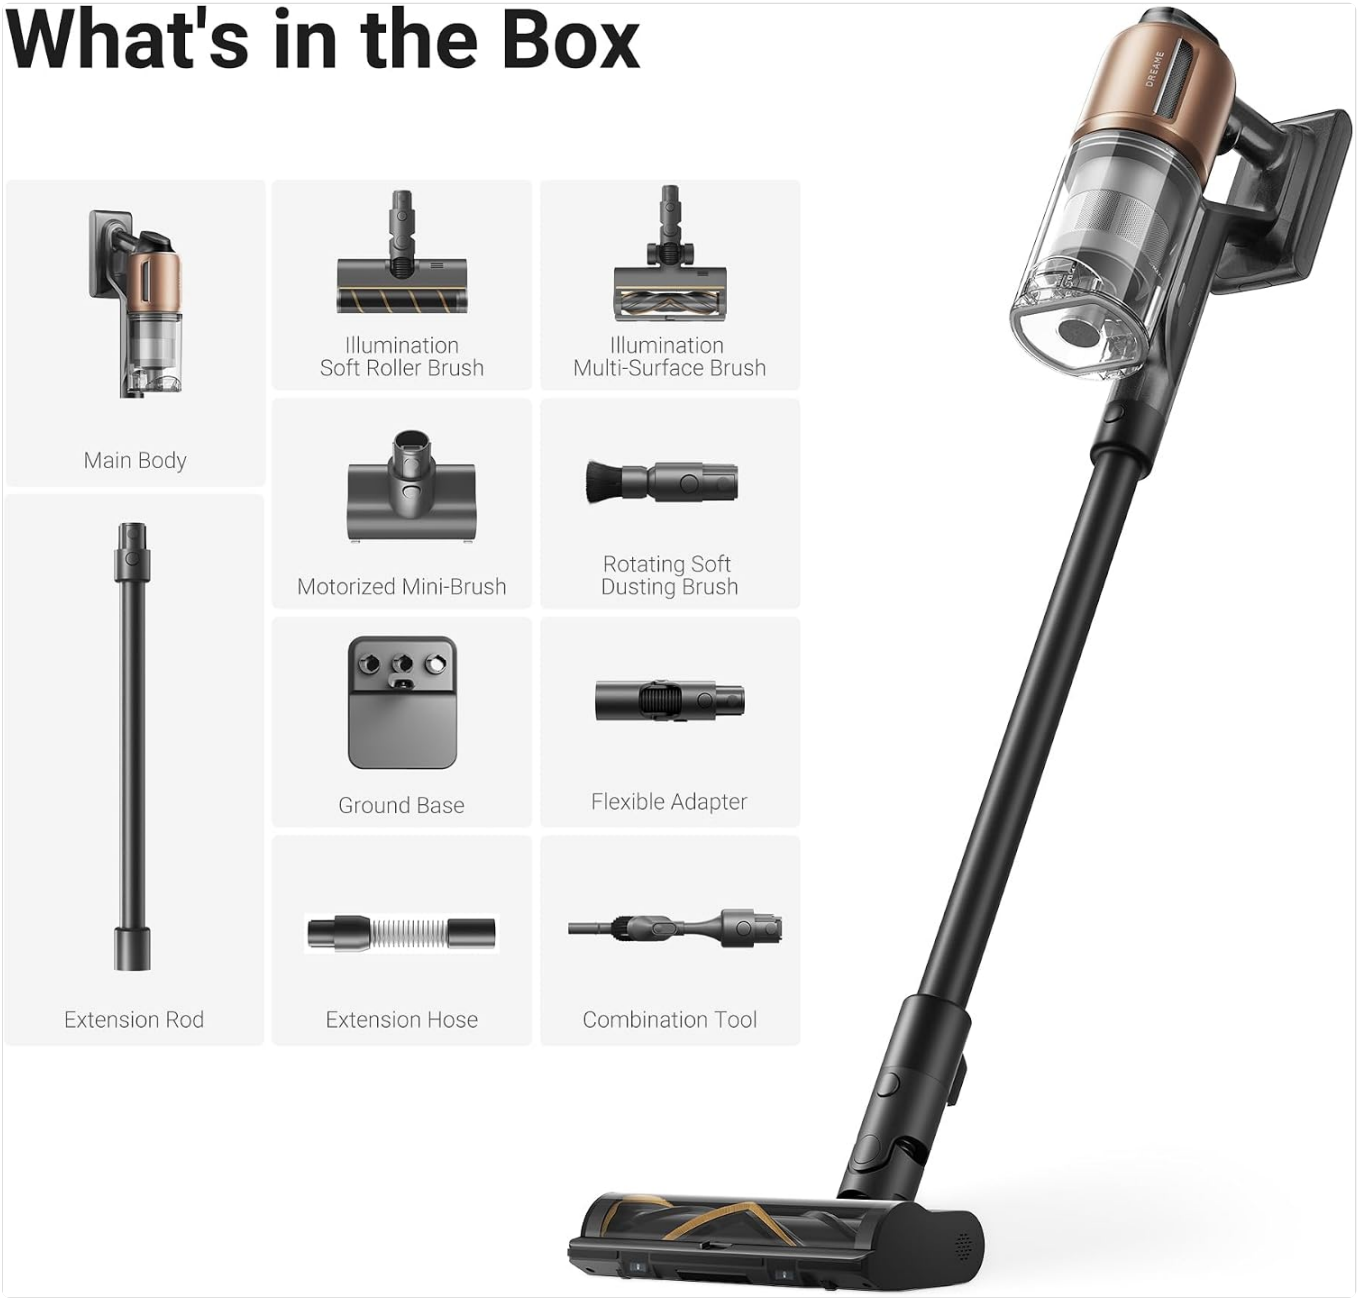

Figure 2: All components included with the DREAME Z20 Cordless Vacuum Cleaner.

Setup Guide

1. **Unpack Components:** Carefully remove all items from the packaging and verify against the "What's in the Box" list.
2. **Assemble the Main Unit:**
    - Attach the desired brush head (Illumination Soft Roller Brush for hard floors or Illumination Multi-Surface Brush for carpets) to the end of the Extension Rod.
    - Connect the other end of the Extension Rod to the Main Body of the vacuum cleaner. Ensure all connections click securely into place.

3. **Charge the Battery:**
    - Locate the charging port on the Main Body.
    - Connect the power adapter to the charging port and plug it into a wall outlet.
    - Allow the vacuum to fully charge before first use. The LCD screen will indicate charging status.
4. **Install Ground Base (Optional):** If using the ground base for storage and charging, assemble it according to the separate instructions provided in the packaging. This base helps organize accessories and provides a stable charging point.



Figure 3: Assembled DREAME Z20 Cordless Vacuum Cleaner.

Operating Instructions

Powering On and Mode Selection

Press the power button on the handle to turn on the vacuum. The LCD screen will display the current mode and battery level. Use the mode selection button to cycle through available cleaning modes:

- **Auto Mode:** The intelligent dirt detection system automatically adjusts suction power based on the amount and type of dirt detected. This optimizes cleaning efficiency and battery life.
- **Eco Mode:** Provides extended runtime for lighter cleaning tasks.
- **Max Mode:** Delivers maximum suction power for stubborn dirt and deep cleaning.



Figure 4: Smart Dirt Detection and Suction Adjustment on the LCD screen.

CelesTect™ Illumination

The Z20 features CelesTect™ technology with an integrated LED light on the brush head. This light illuminates hidden

dust and debris on both hard floors and carpets, ensuring no spot is missed during cleaning.

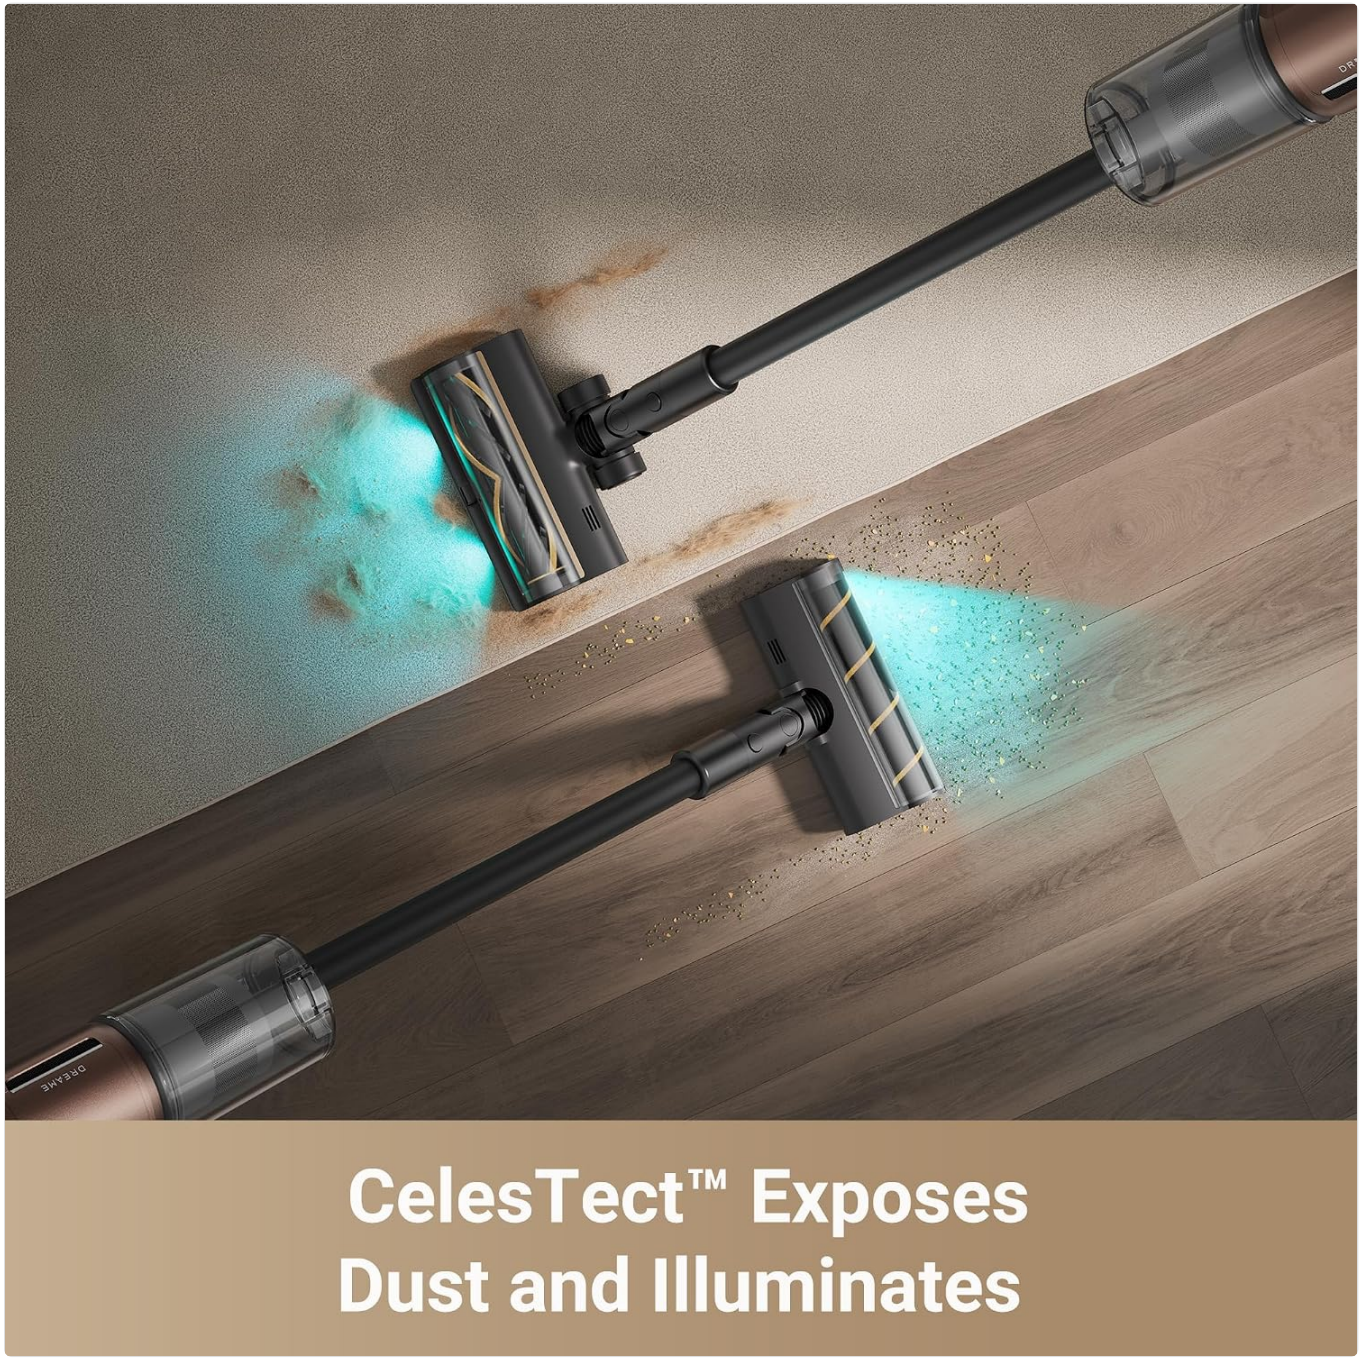

Figure 5: CelesTect™ Illumination in action, revealing hidden dust.

Using Attachments

The DREAME Z20 comes with several attachments for specialized cleaning:

- **Motorized Mini-Brush:** Ideal for removing pet hair and deep cleaning upholstery.
- **Rotating Soft Dusting Brush:** Perfect for delicate surfaces like keyboards, shelves, and blinds.
- **Combination Tool:** A versatile tool for crevices and dusting.
- **Flexible Adapter:** Allows the extension rod to bend, making it easy to clean under furniture and in low-clearance areas.



Figure 6: Using the Rotating Soft Dusting Brush for precise cleaning.



Figure 7: Flexible Adapter for reaching low corners and under furniture.

Maintenance

Emptying the Dust Cup

To maintain optimal suction and hygiene, empty the 0.6L dust cup regularly. The Z20 features a one-press dirt dump mechanism for easy and mess-free disposal.

1. Hold the main body of the vacuum over a trash bin.
2. Locate the dust cup release button (refer to the product diagram in the full manual if needed).
3. Press the button to open the dust cup and release collected debris.

Cleaning Filters and Components

The HEPA filter and other components are washable to ensure long-lasting performance and effective filtration. Refer

to the full manual for detailed instructions on disassembling and cleaning specific parts.

- Regularly check the HEPA filter for accumulated dust and rinse under cold water. Allow to air dry completely before reinserting.
- Inspect brush heads for tangled hair or debris and remove as necessary.

Troubleshooting

If you encounter issues with your DREAME Z20 Cordless Vacuum Cleaner, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is depleted or not properly installed.	Charge the battery fully. Ensure the battery pack is securely clicked into place.
Reduced suction power.	Dust cup is full, filter is clogged, or brush head is obstructed.	Empty the dust cup. Clean the HEPA filter. Remove any blockages from the brush head or extension rod.
Short runtime.	Operating in Max Mode frequently, or battery degradation over time.	Use Auto or Eco Mode for longer cleaning sessions. Ensure the battery is fully charged. Consider replacing the battery if it's old and performance has significantly degraded.
Brush head not rotating.	Obstruction in the brush roll or connection issue.	Clear any hair or debris from the brush roll. Ensure the brush head is correctly attached to the extension rod.

For more detailed troubleshooting or issues not listed here, please refer to the complete user manual or contact DREAME customer support.

Specifications

Feature	Detail
Brand	DREAME
Model Name	Z20
Special Feature	Multi-Surface Capabilities, Celes Tect™ Reveals Dust, Low Corner Cleaning, One-press Dirt Dump, 250AW Suction Power
Filter Type	HEPA Filter
Is Cordless?	Yes
Capacity	0.6 Liters

Feature	Detail
Runtime	Up to 90 minutes
Recommended Uses	Sofa, Carpet, Hardfloor
Form Factor	Handheld
Color	Gray
Product Dimensions	38.9"L x 14.5"W x 6.1"H
Item Weight	21.1 pounds
Batteries	1 Lithium Ion battery required (included)

Warranty and Support

DREAME products are designed for reliability and performance. For information regarding warranty coverage, product registration, or technical support, please refer to the warranty card included in your product packaging or visit the official DREAME website.

For direct assistance, you may contact DREAME customer service through their official channels.

© 2025 DREAME. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DFWB16HW

More documents and user manuals: **https://manuals.plus/**