Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Ulecoce WZ-U18L-S

Ulecoce WZ-U18L-S Keyless Entry Door Lock Deadbolt with Handle Set Instruction Manual

Model: WZ-U18L-S

1. Product Overview

The Ulecoce WZ-U18L-S is a smart keyless entry door lock deadbolt with a handle set, designed to enhance home security and convenience. It offers multiple access methods and smart features for managing your door access.

Key Features:

- Multiple Access Methods: Supports up to 100 user codes (97 users, 3 admin passcodes), one-time codes, and 2 backup physical keys.
- Smart Access Management: Generate and share temporary, permanent, or scheduled codes.
- Auto-Lock Convenience: Features a one-touch lock and an adjustable auto-lock timer (5s-60s).
- Enhanced Security: Includes anti-peeping code, low battery alert, and is built to withstand extreme temperatures (-4℉ to 140℉) and is IP54 waterproof.
- Easy Installation: Designed for simple installation with a screwdriver, compatible with left and right-hand doors.



Figure 1: Ulecoce WZ-U18L-S Keyless Entry Door Lock Deadbolt with Handle Set.

2. Package Contents

Please ensure all components are present before beginning installation.

Video: Ulecoce WZ-U18L-S Installation Video Guide. This video provides a visual overview of the package contents and the installation process.

For a detailed list of components, refer to the installation video guide. The video demonstrates the items included in the package, such as the exterior assembly, interior assembly, latch, strike plate, installation screws, and keys.

3. Installation Guide

Follow these steps for proper installation of your Ulecoce WZ-U18L-S door lock. A screwdriver is the only tool required.

3.1 Pre-Installation Checks

- **Door Thickness:** Ensure your door thickness is between 35mm and 55mm.
- **Backset:** Adjust the latch to fit either a 60mm or 70mm backset.

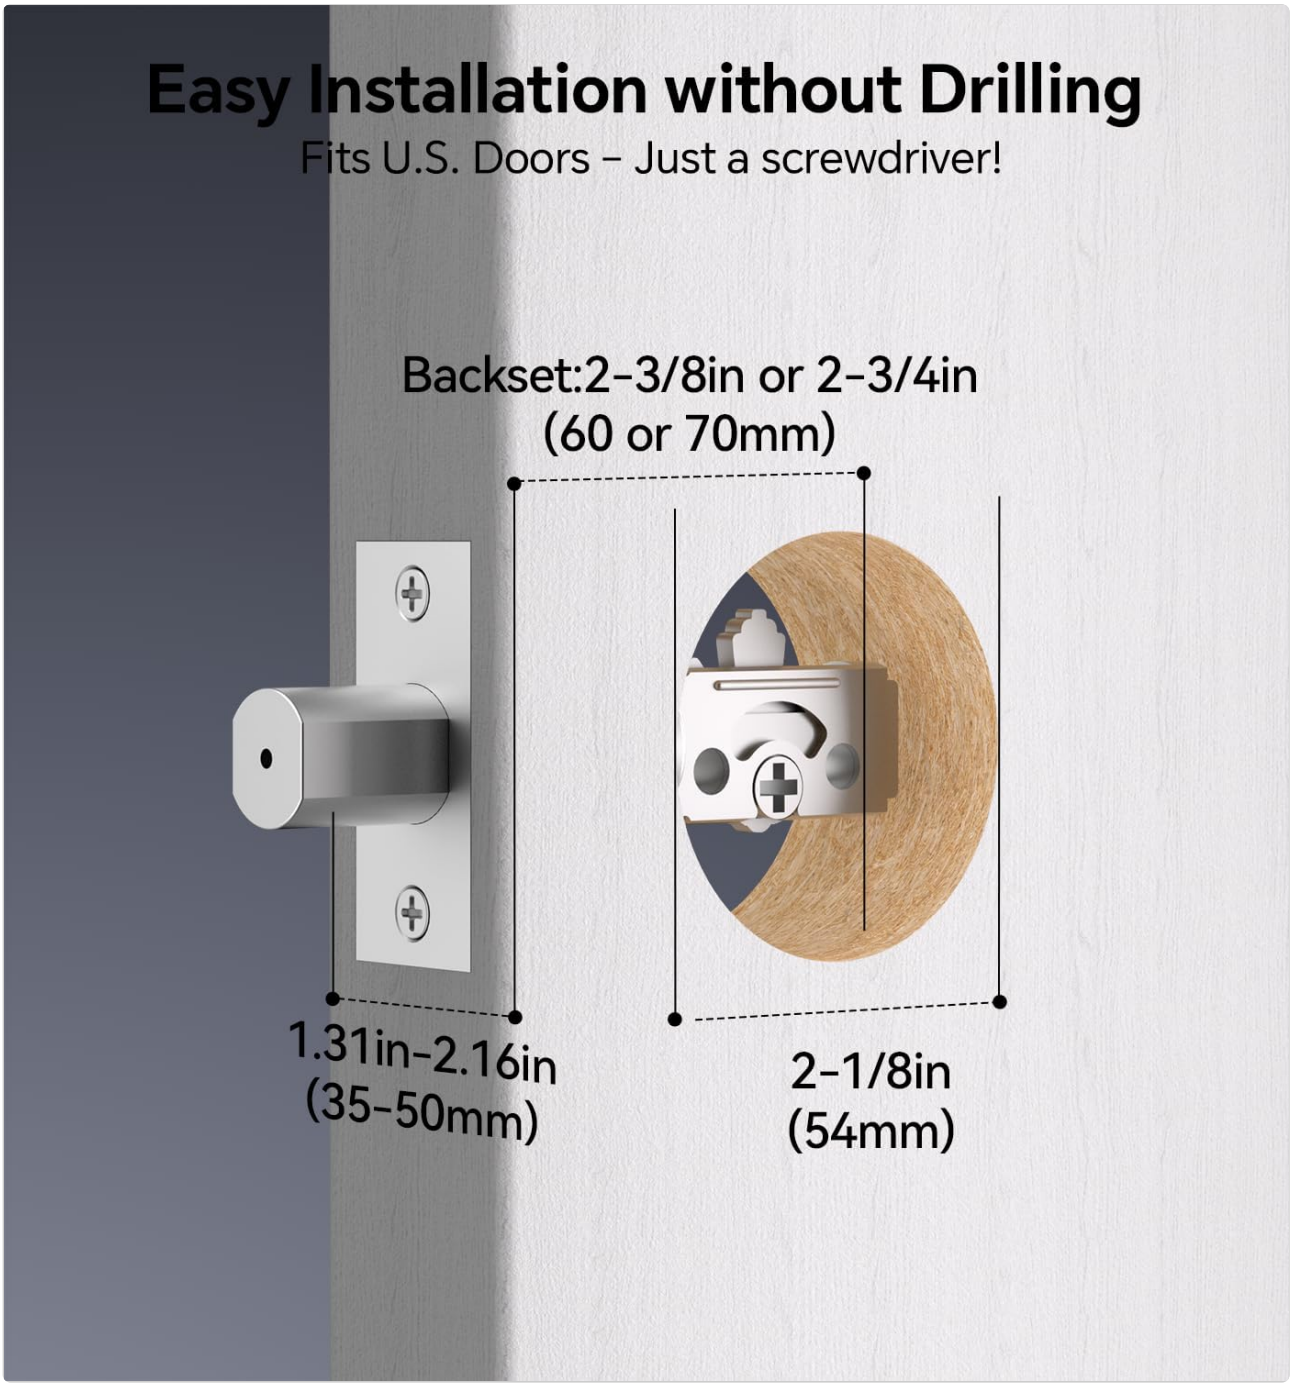


Figure 2: Door dimensions and backset measurement for installation.

3.2 Step-by-Step Installation

For a comprehensive visual guide, please refer to the official installation video below.

Video: Smart Door Lock Installation. This video provides a detailed walkthrough of the entire installation process.

1. **Prepare the Door:** Use the provided template to mark and drill holes if necessary.
2. **Install the Latch:** Insert the latch into the door edge, ensuring the 'UP' marking faces upwards. Secure with

screws.

3. **Install the Exterior Assembly:** Pass the connection wire through the deadbolt cylinder. Align the protruding position of the latch with the concave position of the lock body and insert.
4. **Install the Mounting Plate:** Thread the antenna and power cord through the bottom-right hole of the mounting plate. Secure the mounting plate to the door with the appropriate screws (40mm for 45-55mm door thickness, 30mm for 35-45mm door thickness).
5. **Connect Wires:** Connect the power communication link cables from the exterior assembly to the interior assembly.
6. **Install the Interior Assembly:** Align the interior assembly with the mounting plate and secure it with screws. Hide excess wires inside the door.
7. **Install Batteries:** Insert 4 AA batteries (not included) into the battery compartment.
8. **Attach Battery Cover:** Secure the battery cover.

4. Initial Setup

After physical installation, perform the initial setup to ensure proper functionality.

4.1 Initialization

To initialize the lock and restore factory settings:

1. Remove the battery cover.
2. Press and hold the Reset button for seven consecutive prompt tones.
3. The lock will announce "Restore factory setting, authentication administrator."
4. Enter the default administrator password (e.g., 123234345455#) and press #.
5. The lock will announce "Initialization succeeded."

Video: U18L-S, 2. Initialization Setup. This video demonstrates the initialization process.

4.2 Door Handing (Left/Right Opening)

Set the correct door opening direction for optimal performance.

1. Enter administrator password + #.
2. Press 4 for Door Opening Direction.
3. Press 1 for Left Door Opening or 2 for Right Door Opening.

Video: Language Left or Right Door Auto-Lock Factory Reset. This video includes instructions for setting the door opening direction.

5. Operating Instructions

5.1 Unlocking Methods

The Ulecoce WZ-U18L-S offers multiple convenient ways to unlock your door:

- **Keypad Code:** Enter your programmed user code on the keypad.
- **One-Touch Locking:** Press the lock button on the keypad to lock the door.

- **One-Time Codes:** Generate temporary codes for guests or service personnel.
- **Physical Key:** Use the provided backup keys for manual unlocking.



Figure 3: Multiple convenient unlocking methods for the smart door lock.

Video: Unlock + Auto-Lock. This video demonstrates the unlocking and auto-lock functions.

5.2 Auto-Lock Setting

The auto-lock feature automatically locks the door after a set period.

1. Enter administrator password + #.
2. Press 5 for Auto Lock Setting.
3. Select the desired auto-lock time: 1 (Close), 2 (10 seconds), 3 (20 seconds), 4 (30 seconds).

Video: U18L-S, 5.Auto Lock Setting. This video guides you through setting the auto-lock feature.

5.3 Constant Open Setting

The constant open setting allows the door to remain unlocked.

1. Enter administrator password + #.
2. Press 6 for Constant Open Setting.
3. Press 1 to activate normally open mode (door remains unlocked).
4. To cancel normally open mode: Press the lock button, enter administrator password + #, use the mechanical key, or press the switch on the rear lock.

Video: U18L-S, 6.Constant open setting. This video explains how to enable and disable the constant open feature.

5.4 Password Management

Manage administrator and user passwords.

1. **Add Administrator Password:** Remove battery cover, short press SET key. Enter new password + #. Re-enter new password + #.
2. **Add User Password:** Enter administrator password + #. Press 4 for User Settings. Press 1 to Add User. Enter new password + #. Re-enter new password + #.
3. **Delete Password:** Enter administrator password + #. Press 4 for User Settings. Press 2 to Delete User. Enter the password to delete + #.

Video: U18L-S, 4.Password settings. This video details how to add and delete passwords.

5.5 Volume Settings

Adjust the lock's volume level.

1. Enter administrator password + #.
2. Press 3 for System Setting.
3. Press 1 for Volume Adjustment.
4. Select volume level: 1 (Low), 2 (Medium), 3 (High).

Video: Volume Setting. This video demonstrates how to adjust the lock's volume.

6. Maintenance

6.1 Low Battery Alert

The lock will provide a low battery alert when the batteries need replacement. It is powered by 4 AA batteries (not included) and can last approximately 180 days.



Figure 4: Low battery indicator and backlit keypad for easy visibility.

6.2 Battery Replacement

When the low battery alert is active, replace all four AA batteries promptly. Battery consumption may increase in colder temperatures.

7. Troubleshooting

7.1 Factory Reset

If you forget your password or experience persistent issues, a factory reset can resolve many problems. Follow the initialization steps in Section 4.1 to perform a factory reset.

Video: Language Left or Right Door Auto-Lock Factory Reset. This video demonstrates the factory reset procedure.

7.2 Anti-Peeping Code

To prevent others from guessing your code, you can enter random digits before or after your actual code. The lock will still recognize the correct consecutive sequence.



Figure 5: Anti-peep tactile keypad functionality.

8. Product Specifications

Feature	Specification
Brand	Ulecoce
Model Name	WZ-U18L-S
Special Features	Anti-Peeping Password, Auto-Lock, Back-Lit Keypad, One-Touch Lock
Lock Type	Combination Lock, Key Lock, Keypad
Item Dimensions (L x W x H)	2.6 x 0.39 x 4.78 inches

Material	Zinc
Recommended Uses	Front door
Color	Satin Nickel
Finish Type	Brushed
Item Weight	3.4 Pounds
Control Method	Touch
Batteries Required	No (uses 4 AA batteries, not included)

9. Warranty and Support

For warranty information, technical support, or further assistance, please refer to the contact details provided with your product packaging or visit the official Ulecoce website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DG8CXJVN

More documents and user manuals: **https://manuals.plus/**