Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ANTEMPER D113

ANTEMPER 10.1-inch Android Tablet D113 User Manual

Model: D113

1. Introduction

This manual provides essential information for setting up, operating, and maintaining your ANTEMPER 10.1-inch Android Tablet D113. Please read it thoroughly to ensure optimal performance and longevity of your device.

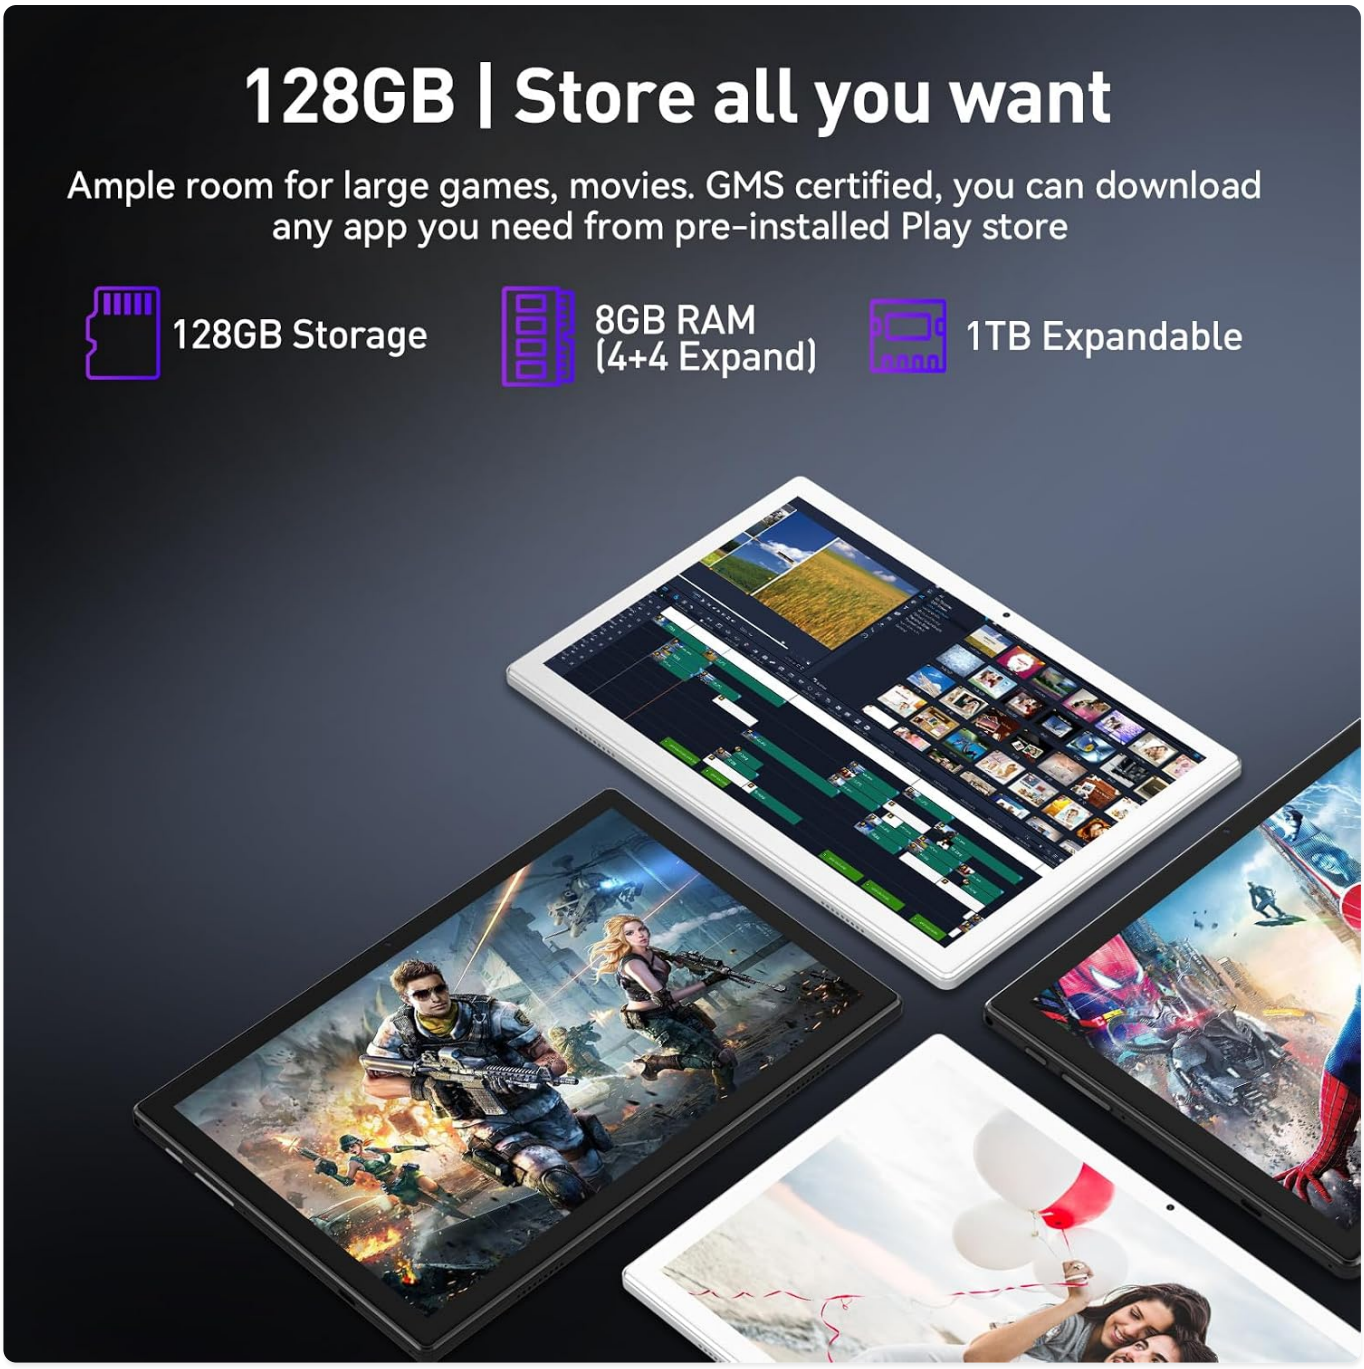


Image 1.1: The ANTEMPER 10.1-inch Android Tablet D113.

2. What's in the Box

Verify that all items listed below are included in your product package:

- 1 x ANTEMPER Android 14 Tablet
- 1 x Tablet Foldable Case
- 1 x Keyboard
- 1 x Mouse
- 1 x Stylus
- 1 x Protector Film
- 1 x OTG Adapter
- 1 x Type-C Cable
- 1 x Charger

- 1 x SD Card Tray Eject Pin
- 1 x User Manual (this document)

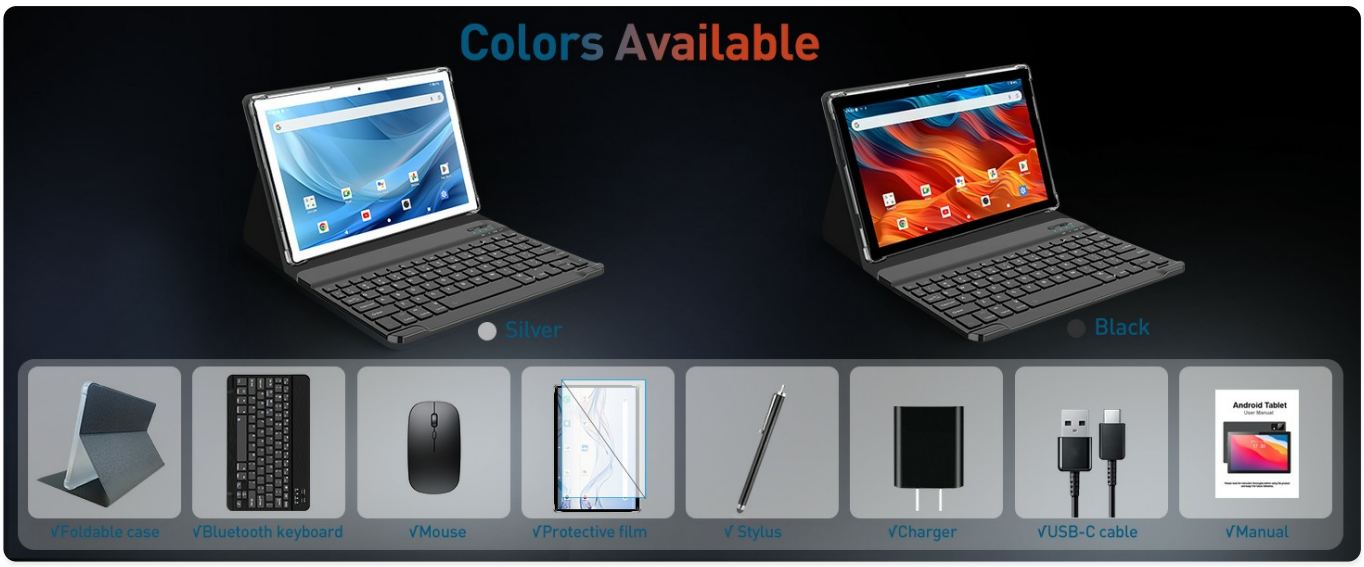


Image 2.1: All components included in the ANTEMPER Tablet D113 kit.

3. Setup

3.1 Initial Power On and Android Setup

1. Press and hold the power button located on the side of the tablet until the screen lights up.
2. Follow the on-screen prompts to select your language, connect to a Wi-Fi network, and set up your Google account.
3. Complete the initial Android 14 setup process.

3.2 Connecting the Keyboard and Mouse

The included keyboard and mouse connect wirelessly via Bluetooth.

Connecting the Mouse:

1. Install batteries (not included) into the mouse.
2. Insert the Bluetooth receiver into the tablet's USB-C port using the OTG adapter.
3. The mouse should automatically connect.

Connecting the Keyboard:

1. Turn on the keyboard and press the 'Connect' button (a blue light will flash).
2. On your tablet, go to **Settings** > **Connected devices** > **Pair new device**.
3. Select the keyboard (e.g., "Bluetooth Keyboard") from the list to connect.
4. Ensure the keyboard is charged regularly using the provided Type-C cable.



Image 3.1: Visual guide for connecting the included keyboard and mouse.

4. Operating Instructions

4.1 Basic Navigation

The tablet runs on Android 14, offering an intuitive user interface. Swipe up from the bottom to access the app drawer, swipe down from the top for quick settings and notifications.

4.2 Split Screen Functionality

Android 14 includes an enhanced split-screen feature, allowing you to use two applications simultaneously. This function supports various ratios (3:7, 5:5, 7:3) for flexible multitasking.

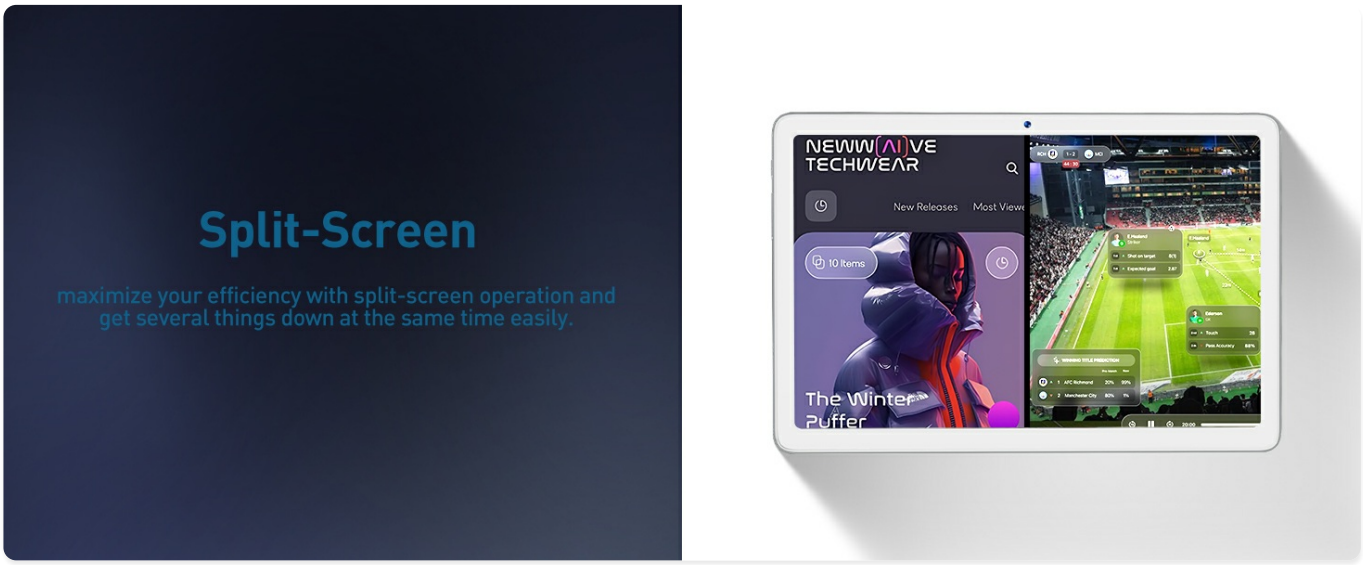


Image 4.1: Demonstrating the split-screen feature for enhanced productivity.

5. Key Features

5.1 Storage and Memory

The tablet comes with 128GB of internal storage, expandable up to 1TB via an SD card (sold separately). It features 8GB of RAM (4GB physical + 4GB expandable) for smooth application performance.



Image 5.1: Overview of the tablet's storage and memory capabilities.

5.2 Processor

Powered by the Unisoc T606 Octa-Core processor, featuring a 12nm chip architecture with 2x A75 and 6x A55 cores. This configuration ensures efficient multitasking and responsive performance.



Image 5.2: Visual representation of the tablet's Octa-Core processor.

5.3 Battery

Equipped with a 7000mAh battery, providing up to 10 hours of usage on a single charge. Supports 5V/2A charging.



Image 5.3: Information regarding the tablet's 7000mAh battery capacity.

5.4 Cameras

Features a 13MP rear camera and an 8MP front camera, suitable for video calls and capturing everyday moments.



Image 5.4: Details on the tablet's dual camera system.

5.5 Connectivity

Supports 5G WiFi for fast internet access and Bluetooth 5.0 for connecting peripherals. Integrated GPS functionality is also available.



Image 5.5: Tablet highlighting 5G WiFi connectivity.

5.6 Display

The tablet features a 10.1-inch LCD display with a resolution of 1280x800 pixels and a 16:10 aspect ratio, providing a clear viewing experience.



Image 5.6: The 10.1-inch display of the ANTEMPER Tablet D113.

6. Maintenance

6.1 Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials that could damage the surface.

6.2 Battery Care

To prolong battery life, avoid fully discharging the tablet frequently. Charge the device using the provided charger and cable. Do not expose the tablet to extreme temperatures.

6.3 Software Updates

Regularly check for and install system updates to ensure your tablet has the latest features, security patches, and performance improvements. Go to **Settings** > **System** > **System update**.

7. Troubleshooting

7.1 Tablet Not Turning On

- Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again.
- Press and hold the power button for 10-15 seconds to perform a forced restart.

7.2 Wi-Fi Connectivity Issues

- Restart your Wi-Fi router and the tablet.
- Go to **Settings** > **Network & internet** > **Internet** and forget the network, then reconnect.
- Ensure you are within range of the Wi-Fi signal.

7.3 Accessories Not Connecting

- For the keyboard, ensure it is powered on and in pairing mode. Re-attempt pairing via Bluetooth settings.
- For the mouse, ensure batteries are correctly installed and the USB receiver is properly inserted into the OTG adapter and tablet.
- Ensure Bluetooth is enabled on the tablet for both devices.

7.4 Slow Performance

- Close unnecessary background applications.
- Clear cache for frequently used apps (**Settings** > **Apps** > [App Name] > **Storage & cache** > **Clear cache**).
- Ensure sufficient free storage space.

8. Specifications

Feature	Specification
Brand	ANTEMPER
Model Name	D113A
Model Number	D113
Operating System	Android 14
Processor	Unisoc T606 Octa-Core
RAM Memory	8 GB (4GB physical + 4GB expandable)
Internal Storage	128 GB
Expandable Storage	Up to 1 TB (via SD card)
Screen Size	10.1 Inches
Display Resolution	1280 x 800 Pixels
Rear Camera	13 MP
Front Camera	8 MP
Battery Capacity	7000 mAh
Connectivity	5G WiFi, Bluetooth 5.0, GPS
Ports	USB-C, 3.5mm Headphone Jack
Dimensions (L x W x Th)	9"L x 6"W x 0.6"Th

9. Product Video Overview

Watch this video for a quick overview of the ANTEMPER Android 14 Tablet and its included accessories.

▶ **Watch video online**
Android 14 Tablet,128GB Storage Tablet W/ Multi Accessories

Video 9.1: An overview of the ANTEMPER Android 14 Tablet and its multi-accessory bundle.

10. Warranty and Support

10.1 Warranty Information

Warranty information is not explicitly detailed in this manual. Please refer to the product packaging, the manufacturer's official website, or your point of purchase for specific warranty terms and conditions.

10.2 Customer Support

If you encounter any issues or have questions regarding your ANTEMPER Tablet D113, please contact ANTEMPER customer support through the contact information provided on the product packaging or the official ANTEMPER website. Please have your model number (D113) and purchase details ready when contacting support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question