Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Metz MPE7000Z (MET032)

Metz MPE7000Z Portable TV User Manual

Model: MPE7000Z (MET032) | Brand: Metz

Introduction

The Metz MPE7000Z is a 24-inch portable television designed for versatile use, offering high visual quality and smart functionalities. Its integrated carrying handle and internal battery make it suitable for various environments, including recreational vehicles, trains, boats, and outdoor camping. The anti-glare screen ensures clear viewing even in bright conditions. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Metz MPE7000Z portable TV.

Setup

1. Unboxing and Contents

Carefully remove all components from the packaging. Ensure the following items are present:

- Metz MPE7000Z Portable TV
- Remote Control
- Power Adapter
- User Manual (this document)



Figure 1: Metz MPE7000Z Portable TV. This image shows the front view of the TV with its screen displaying a vibrant beach scene, highlighting its visual capabilities.

2. Initial Charging and Powering On

Before first use, fully charge the internal battery using the provided power adapter. Connect the adapter to the TV's power input and plug it into a wall outlet. The charging indicator will illuminate. Once charged, press the power button located on the TV or remote control to turn it on.

3. First-Time Setup (Google TV)

Upon first power-on, the TV will guide you through the initial setup process for Google TV. This includes:

- Language selection
- Connecting to a Wi-Fi network
- Signing in with your Google account (required for full smart TV functionality and app access)
- Accepting terms and conditions

4. Connecting External Devices

The Metz MPE7000Z offers multiple connectivity options:


- **HDMI:** Connect Blu-ray players, gaming consoles, or other HDMI-enabled devices.
- **USB:** Plug in USB drives for media playback.
- **Bluetooth:** Pair with Bluetooth headphones or speakers.



METZ 24MPE7000Y



17 kWh/1000h

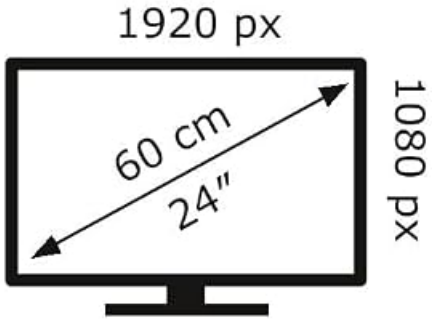

2019/2



Figure 2: Side view of the Metz MPE7000Z. This image illustrates the various input and output ports available on the side of the TV, including HDMI and USB, for connecting external devices.

Operating Instructions

1. Basic Controls

Use the remote control to navigate the TV. Common buttons include:

- **Power:** Turns the TV on/off.
- **Volume Up/Down:** Adjusts audio level.
- **Channel Up/Down:** Changes TV channels (if connected to an antenna).
- **Navigation (Arrow) Buttons:** Move through menus and selections.
- **OK/Enter:** Confirms selections.
- **Back/Home:** Returns to previous screen or home screen.

2. Navigating Google TV Interface

The Google TV interface organizes content from various streaming services and live TV. Use the navigation buttons to browse recommendations, access installed apps, and manage settings. The search function allows you to find specific content or apps quickly.

3. Using Smart Features


With Google TV, you can:

- Download and install apps from the Google Play Store.
- Cast content from your smartphone or tablet using Chromecast built-in.
- Use Google Assistant for voice commands (if supported by remote).

Fiche d'information sur le produit

RÈGLEMENT DÉLÉGUÉ (UE) 2019/2013 DE LA COMMISSION en ce qui concerne l'étiquetage énergétique des dispositifs d'affichage électronique

	Paramètre	Paramètre ou valeur et précision			Unité
1.	Nom ou marque commerciale du fournisseur.	METZ			
	Adresse du fournisseur.	METZ blue, Ohmstraße 55, 90513 Zirndorf, DE			
2.	Référence du modèle	24MPE7000Y			
3.	Classe d'efficacité énergétique pour la gamme dynamique standard (SDR)	E			
4.	Puissance appelée en mode marche en SDR			17,0	W
5.	Classe d'efficacité énergétique pour la haute gamme dynamique (HDR)	s.o.			
6.	Puissance appelée en mode marche pour la haute gamme dynamique (HDR), le cas échéant			s.o.	W
7.	Puissance appelée en mode arrêt, le cas échéant			s.o.	W
8.	Puissance appelée en mode veille, le cas échéant			0,5	W
9.	Puissance appelée en mode veille avec maintien de la connexion au réseau, le cas échéant			s.o.	W
10.	Catégorie de dispositif d'affichage électronique			Téléviseur	
11.	Rapport de taille	16	:	9	
12.	Résolution d'écran	1 920	x	1 080	pixels
13.	Diagonale de l'écran			60,0	cm
14.	Diagonale de l'écran			24	pouces
15.	Surface visible de l'écran			15,3	dm^2

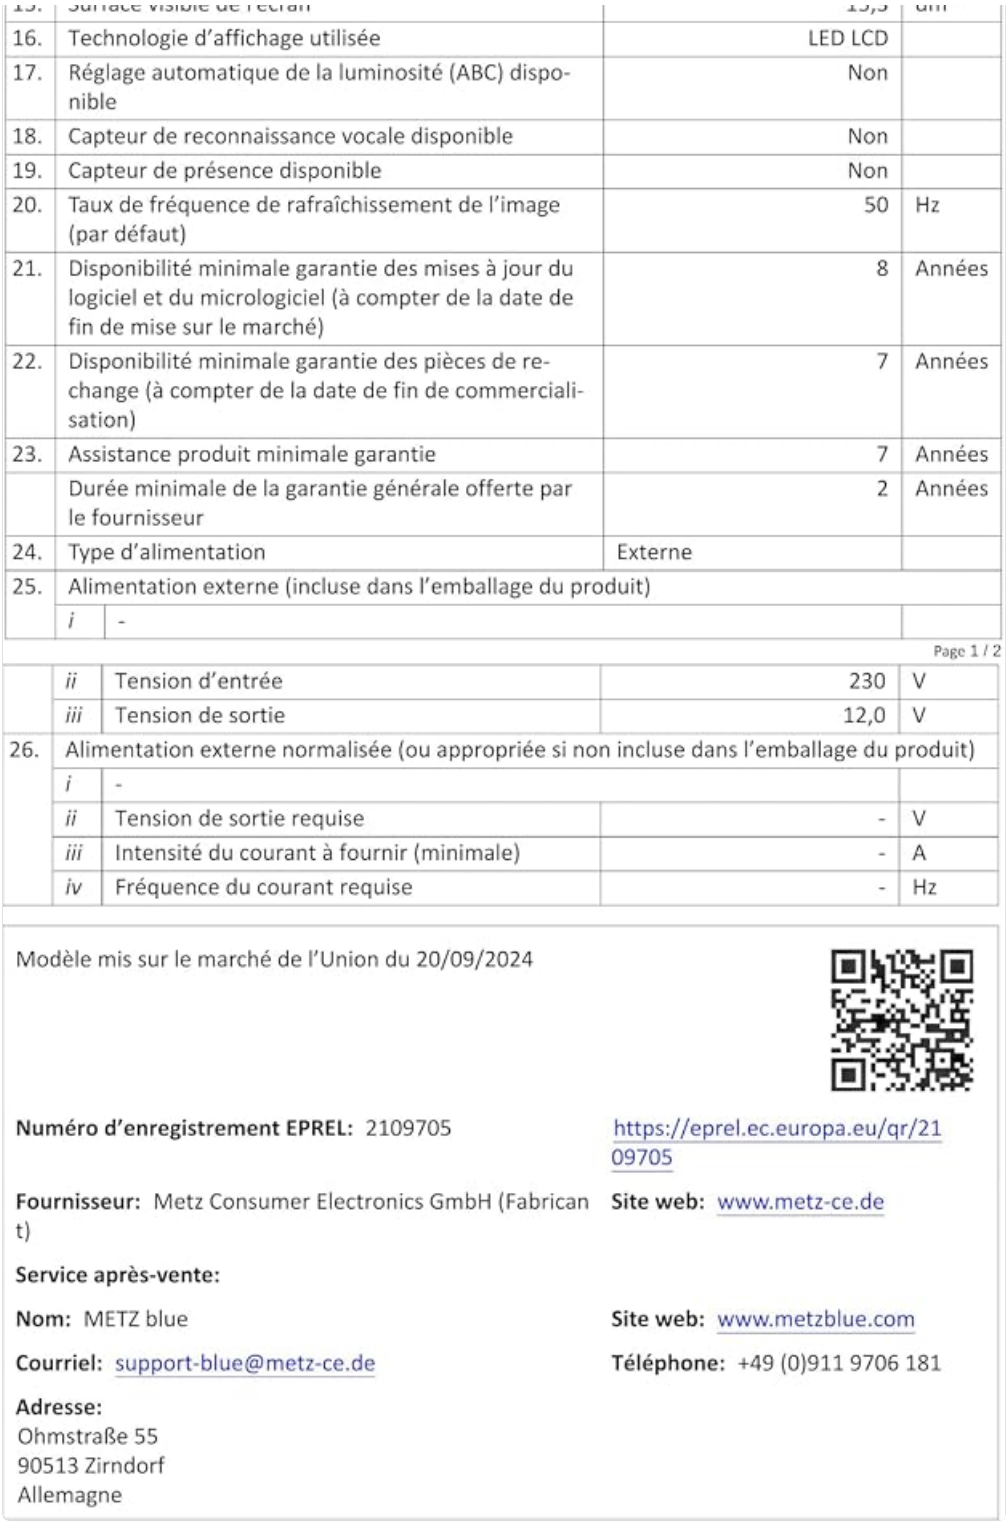

16.	Technologie d'affichage utilisée		LED LCD	
17.	Réglage automatique de la luminosité (ABC) disponible		Non	
18.	Capteur de reconnaissance vocale disponible		Non	
19.	Capteur de présence disponible		Non	
20.	Taux de fréquence de rafraîchissement de l'image (par défaut)		50	Hz
21.	Disponibilité minimale garantie des mises à jour du logiciel et du micrologiciel (à compter de la date de fin de mise sur le marché)		8	Années
22.	Disponibilité minimale garantie des pièces de rechange (à compter de la date de fin de commercialisation)		7	Années
23.	Assistance produit minimale garantie		7	Années
	Durée minimale de la garantie générale offerte par le fournisseur		2	Années
24.	Type d'alimentation		Externe	
25.	Alimentation externe (incluse dans l'emballage du produit)			
	i	-		

Page 1 / 2

	ii	Tension d'entrée	230	V
	iii	Tension de sortie	12,0	V
26.	Alimentation externe normalisée (ou appropriée si non incluse dans l'emballage du produit)			
	i	-		
	ii	Tension de sortie requise	-	V
	iii	Intensité du courant à fournir (minimale)	-	A
	iv	Fréquence du courant requise	-	Hz

Modèle mis sur le marché de l'Union du 20/09/2024

Numéro d'enregistrement EPREL: 2109705

https://eprel.ec.europa.eu/qr/2109705

Fournisseur: Metz Consumer Electronics GmbH (Fabricant)

Site web: www.metz-ce.de

Service après-vente:

Nom: METZ blue

Site web: www.metzblue.com

Courriel: support-blue@metz-ce.de

Téléphone: +49 (0)911 9706 181

Adresse:
Ohmstraße 55
90513 Zirndorf
Allemagne

Figure 3: Metz MPE7000Z in operation. This image highlights the TV's display quality, showing a bright and clear picture, indicative of its performance during use.

4. Anti-Glare Screen

The TV features an anti-glare screen designed to reduce reflections and improve visibility in bright environments, such as outdoors or near windows. Position the TV to minimize direct light sources for optimal viewing.

5. Battery Life and Charging

The integrated battery provides up to 3 hours of operation on a single charge. For extended use, connect the TV to a power source. The TV also supports 12V car charging for convenience during travel.

Maintenance

1. Cleaning

To clean the screen, gently wipe it with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a screen-cleaning solution. Avoid using harsh chemicals or abrasive materials. Clean the TV body with a dry, soft cloth.

2. Software Updates

Ensure your TV's software is up to date for optimal performance and security. The TV will typically notify you of available updates. You can also manually check for updates in the settings menu under "System" or "About".

3. Battery Care

To prolong battery life:

- Avoid fully discharging the battery frequently.
- Store the TV in a cool, dry place when not in use for extended periods.
- If storing for a long time, charge the battery to about 50% before storage.

Troubleshooting

This section addresses common issues you might encounter with your Metz MPE7000Z TV.

1. No Power / TV Does Not Turn On

- Ensure the power adapter is securely connected to the TV and a working power outlet.
- Check if the internal battery is charged. If not, charge it for at least 30 minutes before attempting to power on.
- Try pressing the power button directly on the TV, not just the remote.

2. Slow Menu Response / Lagging Performance

- Close any unused applications running in the background.
- Restart the TV by unplugging it from the power source for a few minutes, then plugging it back in.
- Ensure the TV's software is updated to the latest version.
- Consider performing a factory reset (note: this will erase all personal data and settings).

3. No Picture / Black Screen

- Verify the correct input source is selected (e.g., HDMI 1, TV).
- Check all cable connections to external devices.
- If using an antenna, ensure it is properly connected and positioned.

4. No Sound

- Increase the volume using the remote control.
- Check if the TV is muted.
- If using external audio devices, ensure they are properly connected and powered on.

5. Wi-Fi Connectivity Issues

- Ensure your Wi-Fi router is on and functioning correctly.
- Restart your router and the TV.
- Check the Wi-Fi password entered on the TV.
- Move the TV closer to the router if the signal is weak.

Specifications

Feature	Detail
Brand	Metz
Model Number	MET032 (MPE7000Z)
Screen Size	24 Inches (60 cm)
Display Technology	LED
Resolution	1080p (1920 x 1080 pixels)
Refresh Rate	60 Hz
Operating System	Google TV, Android
Connectivity	HDMI, USB, Bluetooth
Special Features	Integrated Speaker, Anti-glare screen
Total USB Ports	1
Compatible Devices	Headphones, Game Console, Speaker, Tablet, Laptop, Desktop Computer
Battery Type	Lithium-ion (included)
Battery Life	Up to 3 hours (portable use)
Product Dimensions	8D x 55W x 37H cm
Energy Efficiency Class	E

For detailed product information and energy efficiency data, please visit the official EPREL database: https://eprel.ec.europa.eu/qr/2042818

Warranty and Support

1. Warranty Information

The Metz MPE7000Z Portable TV comes with a minimum general warranty of 2 years provided by the supplier. Additionally, Metz guarantees:

- Minimum 8 years of software and firmware updates from the date of market placement.
- Minimum 7 years of spare parts availability from the date of market placement.
- Minimum 7 years of product support from the date of market placement.

2. Customer Support

For technical assistance, warranty claims, or any other inquiries, please contact Metz customer support:

- **Manufacturer:** Metz Consumer Electronics GmbH
- **Email:** support-blue@metz-ce.de
- **Website:** www.metzblue.com
- **Telephone:** +49 (0)911 9706 181
- **Address:** Ohmstraße 55, 90513 Zirndorf, Germany

For more information about Metz products and brand history, you can visit the official Metz brand store on Amazon Metz Brand Store.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DGXTQ5HW

More documents and user manuals: **https://manuals.plus/**