Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Paladone 13718

Paladone Disney Frozen Elsa Sleep Training Alarm Clock - Instruction Manual

Model: 13718

1. Introduction

This manual provides detailed instructions for the setup, operation, and maintenance of your Paladone Disney Frozen Elsa Sleep Training Alarm Clock. This device is designed to assist children in understanding sleep and wake times through visual cues and an alarm function.

The clock features magical snowflake projections—blue for bedtime and yellow for wake-up—to help children easily distinguish between rest and active periods. A star countdown on the display indicates remaining sleep time. The night light function and musical alarm enhance the user experience.



Image: Paladone Disney Frozen Elsa Sleep Training Alarm Clock displaying a yellow snowflake projection.

2. Package Contents

- Elsa Sleep Training Alarm Clock Unit

- USB Cable (for power)
- Instruction Manual (this document)

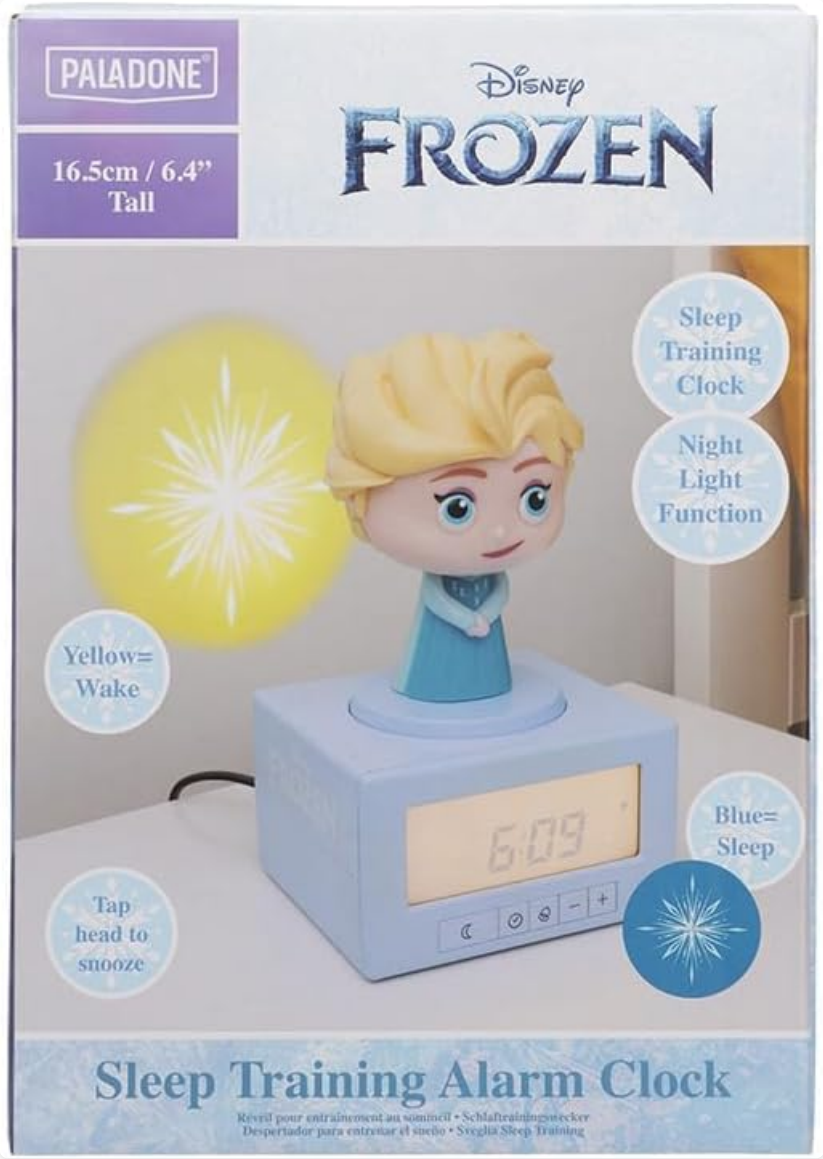

Image: Retail packaging of the Paladone Disney Frozen Elsa Sleep Training Alarm Clock.

3. Safety Information

- Keep the device away from water and excessive moisture.
- Do not attempt to disassemble or repair the device yourself. Refer to qualified personnel for service.
- Use only the provided USB cable or a compatible USB power source.
- This product is not a toy. Adult supervision is recommended for young children.

4. Setup

4.1 Powering the Device

1. Connect the included USB cable to the port on the back of the alarm clock.
2. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a powered USB port.
3. The clock display will illuminate, indicating it is powered on.

4.2 Setting the Time and Sleep/Wake Times

Refer to the buttons located on the front panel below the digital display for setting the clock and alarm functions.

- **Time Setting:** Use the 'Set' button to enter time setting mode. Use the '+' and '-' buttons to adjust hours and minutes. Press 'Set' again to confirm each step.
- **Bedtime (Blue Snowflake):** Set the desired bedtime. At this time, a blue snowflake image will project onto a nearby wall, signaling it's time to sleep.
- **Wake-up Time (Yellow Snowflake):** Set the desired wake-up time. At this time, a yellow snowflake image will appear, indicating it's time to wake up. The clock will also play music.
- **Star Countdown:** The clock's display includes a star countdown feature, visually showing how much sleep time remains.

5. Operating Instructions

5.1 Night Light Function

To activate the night light, gently press down on Elsa's head. This will provide a comforting glow in the room.



Image: The Elsa Sleep Training Alarm Clock with Elsa figure illuminated in blue, functioning as a night light.

5.2 Alarm and Snooze Function

- When the alarm sounds, tap Elsa's head to activate the snooze feature, providing a few extra minutes of rest.
- To fully turn off the alarm, refer to the specific alarm settings buttons on the clock's base.

5.3 Projection Feature

The clock projects snowflake images onto a nearby wall to indicate sleep and wake times:

- **Blue Snowflake:** Projects at bedtime.
- **Yellow Snowflake:** Projects at wake-up time.



Image: The Elsa Sleep Training Alarm Clock projecting a yellow snowflake onto a surface.



Image: The Elsa Sleep Training Alarm Clock projecting a blue snowflake onto a surface.

6. Maintenance

To ensure the longevity and proper functioning of your alarm clock:

- Clean the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Keep the projection lens clear of dust and debris for optimal image quality.

7. Troubleshooting

- **Clock not powering on:** Ensure the USB cable is securely connected to both the clock and a working power source.
- **Projection unclear:** Check if the projection lens is clean and free from obstructions. Ensure the clock is placed at an appropriate distance from the projection surface.
- **Alarm not sounding:** Verify that the alarm time is correctly set and the alarm function is activated.
- **Settings lost after unplugging:** This clock requires continuous USB power to retain settings. If unplugged, settings may need to be re-entered.

8. Specifications

Feature	Detail
Brand	Paladone
Model Number	13718
Color	Multicolor
Display Type	Digital
Style	Frozen
Special Features	Musical Alarm, Night Light, Projection
Product Dimensions	4.92"W x 4.72"H
Power Source	Corded Electric (USB)
Room Type	Kid's Room
Shape	Star (referring to countdown/projection)
Indoor/Outdoor Usage	Indoor
Material	Acrylic, Plastic
Theme	Fantasy
Are Batteries Included	No
Mounting Type	Tabletop
Item Weight	0.38 Kilograms (13.4 ounces)
Alarm Clock	Yes
Number of Items	1

Feature	Detail
Operation Mode	Electrical
Clock Form	Multi Display
Size	One Size
Connectivity Technology	USB

9. Warranty and Support

For warranty information and customer support, please refer to the product packaging or contact Paladone directly through their official website. Keep your purchase receipt as proof of purchase.

© 2024 Paladone. All rights reserved. Disney elements © Disney.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DHF1C44M

More documents and user manuals: **https://manuals.plus/**