Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Towallmark J4xUkePn3moVqKHW1Opg4QOYzLcM

Towallmark 24-inch Electric Single Wall Oven Instruction Manual

Model: J4xUkePn3moVqKHW1Opg4QOYzLcM

1. Important Safety Information

Read all instructions carefully before using the appliance. Keep this manual for future reference.

- **Electrical Safety:** Ensure the oven is properly grounded. Do not operate with a damaged power cord. This appliance requires a 240V, 3000W electrical supply.
- **Child Safety Lock:** The oven is equipped with a safety lock to prevent accidental operation by children. Refer to the operating section for activation and deactivation.
- **Anti-Scalding Features:** The double-layer glass door with built-in Low-E glass provides effective heat insulation to reduce the risk of burns. Exercise caution when opening the oven door during or after operation.
- **Automatic Power Off:** The oven features an automatic power-off function when the door is opened during operation for enhanced safety.
- **Installation:** Installation must be performed by a qualified technician in accordance with local electrical codes.

2. Product Overview

The Towallmark 24-inch Electric Single Wall Oven is designed for versatile cooking with advanced features and safety mechanisms.

Key Features:

- **Capacity:** 2.5 Cu.ft (70L) interior volume.
- **Heating Technology:** 3D Surround Heating with upper inner, upper outer, rear, and lower independent heating tubes for uniform heat distribution.
- **Cooking Modes:** 8 baking modes including Roast, Bake, Double Grill, Grill, Broil, Steam, and Combined Steam & Grill.
- **Air Frying Function:** Integrated air frying for crispy results.
- **Precise Temperature Control:** 1°C precise temperature control.
- **Control Panel:** Sensitive touch glass panel with digital display.

- **Safety:** Double-layer glass door, child safety lock, water shortage autochirp, open door automatic power off.
- **Interior:** Food-grade enamel inner cavity, easy to clean.
- **Additional Functions:** Heat/keep warm, reservation, clean and dry, ferment, defrost, sterilize, 108 smart menus.



Image 2.1: Front view of the Towallmark 24-inch Electric Single Wall Oven, showcasing its interior with food being cooked.

3. Setup and Installation

Proper installation is crucial for the safe and efficient operation of your oven. It is recommended that installation be performed by a qualified professional.

3.1 Unpacking

- Carefully remove all packaging materials from the oven.
- Inspect the oven for any shipping damage. Contact your retailer immediately if damage is found.
- Retain packaging materials for future transport if needed.

3.2 Included Components

Verify that all components are present:

- Stainless steel grill
- Enamel baking pan
- Absorbent sponge
- Instructions manual (this document)
- Cotton gloves
- Stainless steel air frying mesh
- Mounting screws

3.3 Dimensions and Electrical Requirements

Ensure your cabinet opening meets the specified dimensions for built-in installation.

- **Product Size (L*W*H):** 23.4 x 22.24 x 23.4 inches
- **Built-in Size (L*W*H):** 22.24 x 21.85 x 23.4 inches
- **Voltage:** 240V
- **Wattage:** 3000W



Image 3.1: Diagram showing the external and built-in dimensions of the oven for installation planning.

4. Operating Instructions

This section details how to operate your Towallmark electric oven using its touch control panel and various cooking modes.

4.1 Control Panel Overview

The oven features a sensitive touch glass panel for intuitive control.



Image 4.1: Detailed view of the oven's touch control panel, showing icons for various functions like Steam, Grill, Combined, Air Explosion, Recipes, Time/Temp, Decrease, Increase, and Start/Pause.

4.2 Basic Operation

1. **Power On:** Touch the **Power** icon to turn on the oven.
2. **Select Mode:** Choose your desired cooking mode (e.g., Steam mode, Grill mode, Combined mode, Air explosion) by touching the corresponding icon.
3. **Set Temperature/Time:** Use the **Time/Temp** icon, then adjust values with the **Decrease** and **Increase** icons.
4. **Start Cooking:** Press the **Start/Pause** icon to begin the cooking process.
5. **Pause/Stop:** Touch **Start/Pause** again to pause, or hold the **Power** icon to stop.

4.3 Cooking Modes

- **Convection Baking:** Utilizes 3D circulating hot air for even heat distribution, ideal for baking and roasting.
- **Air Frying:** Activates the air explosion function for crispy results with minimal oil.
- **Steaming Function:** Operates between 60-110°C for gentle cooking. The pull-out water tank door allows water addition without opening the main oven door.

- **Baking and Steaming Function:** Combines heat and steam, operating between 100-250°C.
- **Grill/Broil:** For browning and crisping the surface of food.

4.4 Automatic Programming Modes

The oven includes 5 automatic programming modes and 108 smart menus for common dishes. Simply select the desired menu, and the oven will set the temperature, time, and heating mode automatically.



Image 4.2: Example of preset cooking menus, showing default temperatures and times for various food items.

5. Maintenance and Cleaning

Regular maintenance ensures the longevity and optimal performance of your oven.

5.1 Interior Cleaning

- The food-grade enamel inner cavity is designed for easy cleaning. Wipe spills immediately after the oven has cooled.
- Use a soft cloth and mild detergent. Avoid abrasive cleaners or scouring pads that can damage the enamel.
- The oven features a steam cleaning function. Refer to the operating section for instructions on activating this mode.



Image 5.1: View of the oven's interior, highlighting the enamel coating and the rear fan for even heat distribution.

5.2 Exterior Cleaning

- Wipe the exterior surfaces with a soft, damp cloth and mild soap.
- Do not use harsh chemicals or abrasive materials.

5.3 Door Glass Cleaning

- The oven door glass is designed to be easily removed for thorough cleaning. Consult the detailed instructions in the full manual for removal and reinstallation.
- Clean with glass cleaner or a mixture of vinegar and water.



Image 5.2: Illustration of the double-layered glass door, emphasizing its heat insulation and anti-scalding properties.

5.4 Water Tank Maintenance (for Steam Functions)

- Regularly empty and clean the water tank to prevent mineral buildup.
- The oven will emit an autochirp if there is a water shortage during steam functions. Refill the tank promptly.

6. Troubleshooting

This section provides solutions to common issues you might encounter. If the problem persists, please contact customer support.

Problem	Possible Cause	Solution
Oven does not turn on	No power supply; Door not closed properly	Check circuit breaker; Ensure door is fully closed

Problem	Possible Cause	Solution
Uneven cooking	Improper rack position; Overcrowding oven	Use recommended rack positions; Avoid overcrowding to allow air circulation
Steam function not working	Water tank empty; Tank not inserted correctly	Refill water tank; Ensure tank is securely in place
Child lock engaged	Accidental activation	Refer to the operating instructions to deactivate the child lock.

7. Specifications

Detailed technical specifications for the Towallmark 24-inch Electric Single Wall Oven.

Specification	Value
Brand Name	Towallmark
Model Number	J4xUkePn3moVqKHW1Opg4QOYzLcM
Item Weight	88.9 pounds
Product Dimensions	26.85 x 25.91 x 25.98 inches
Built-in Dimensions (L*W*H)	22.24 x 21.85 x 23.4 inches
Capacity	2.5 Cubic Feet (70L)
Voltage	240V
Wattage	3000W
Annual Energy Consumption	1 Watts (Note: This value might be for standby, actual consumption varies with use)
Installation Type	Built-in
Oven Cooking Mode	Radiant, Convection, Steam
Burner Type	Ceramic (Heating elements)
Color	Black
Fuel Type	Electric
Defrost Method	Hot Air Defrost
Door Hinges	Downward
Material Type	Enamel-coated Steel, Glass

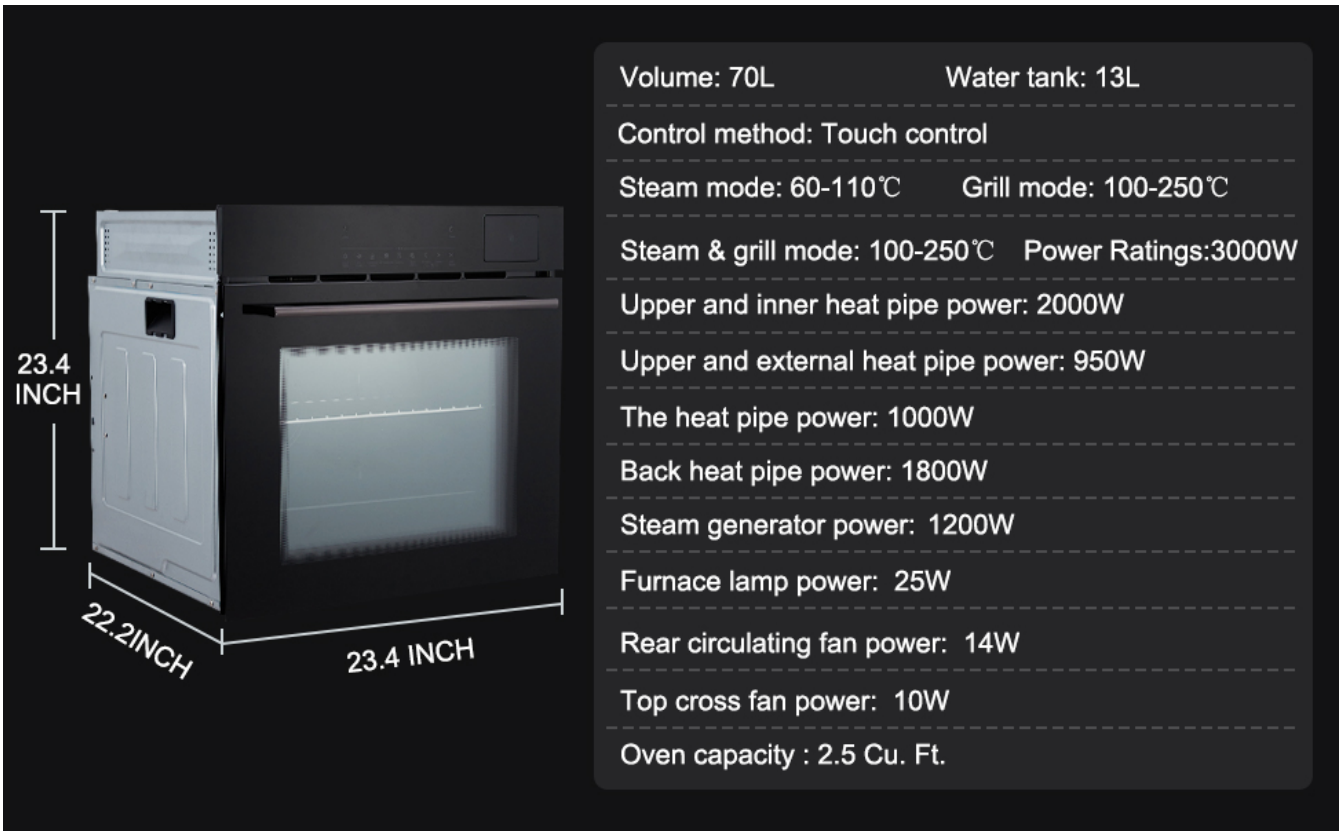

Image 7.1: Visual representation of key technical specifications including volume, power ratings, and dimensions.

8. Warranty and Support

For warranty information or technical support, please refer to the warranty card included with your product or contact Towallmark customer service directly.

Keep your purchase receipt as proof of purchase for any warranty claims.

Contact Information: Please visit the official Towallmark website or refer to the contact details provided in your product packaging for the most up-to-date support information.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DJ28JVNS

More documents and user manuals: **https://manuals.plus/**