BOBLOV W4

BOBLOV W4 64GB 4K Mini Body Camera User Manual

Model: W4 | Brand: BOBLOV

1. INTRODUCTION

This manual provides detailed instructions for the proper use, setup, and maintenance of your BOBLOV W4 64GB 4K Mini Body Camera. Please read this manual thoroughly before operating the device to ensure optimal performance and longevity.

Image: The BOBLOV W4 64GB 4K Mini Body Camera shown with its various accessories, including the rotatable clip,

magnetic neck strap, 64GB Micro SD card, USB-C adapter, and USB cable.

2. PRODUCT FEATURES

- **Stunning 2K Resolution:** Captures video in 2K resolution for clear and detailed recordings.
- **Lightweight Design:** Weighs approximately 50g, making it highly portable and comfortable for extended wear.
- **One-Click Recording:** Simplifies operation with a single button press to start and stop recording.
- **Hands-Free Operation:** Designed for first-person perspective recording, suitable for various activities.
- **Versatile Wearing Options:** Includes a 360° rotatable back clip for clothing attachment and an adjustable magnetic neck strap for hands-free use.
- **Long Battery Life:** Equipped with an 800mAh battery, providing approximately 1.5-2 hours of 2K recording.

Image: The BOBLOV W4 camera is designed to capture family moments in detail, as depicted by a family enjoying an outdoor activity.
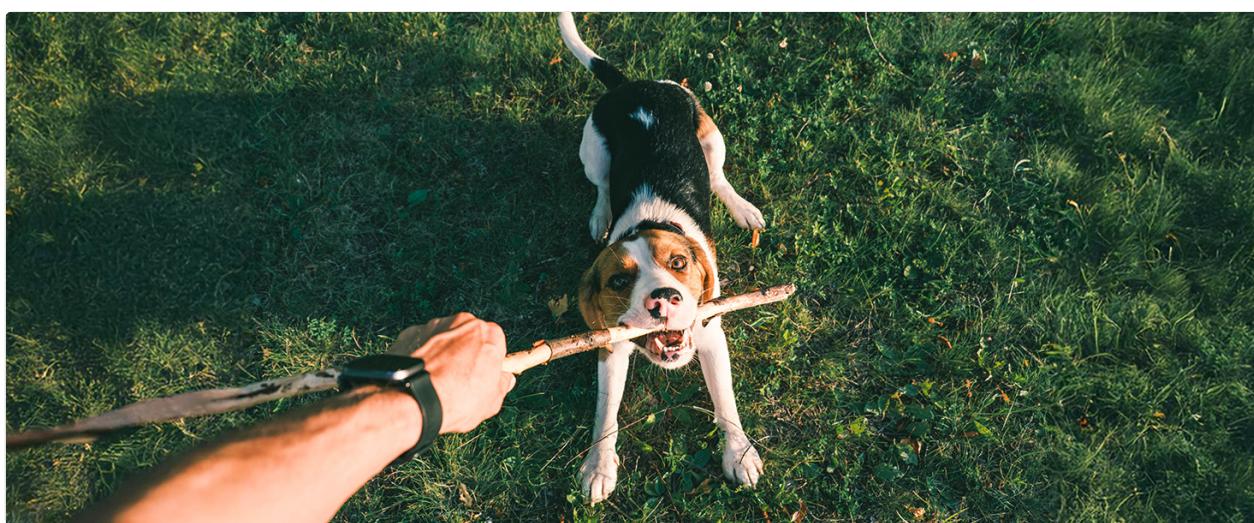
Image: The camera is shown floating above a hand, emphasizing its lightweight design at only 50g for maximum comfort and portability.

Image: Two individuals are shown in a meeting setting, with an overlay indicating the 800mAh battery design provides 1.5-2 hours of 2K recording.
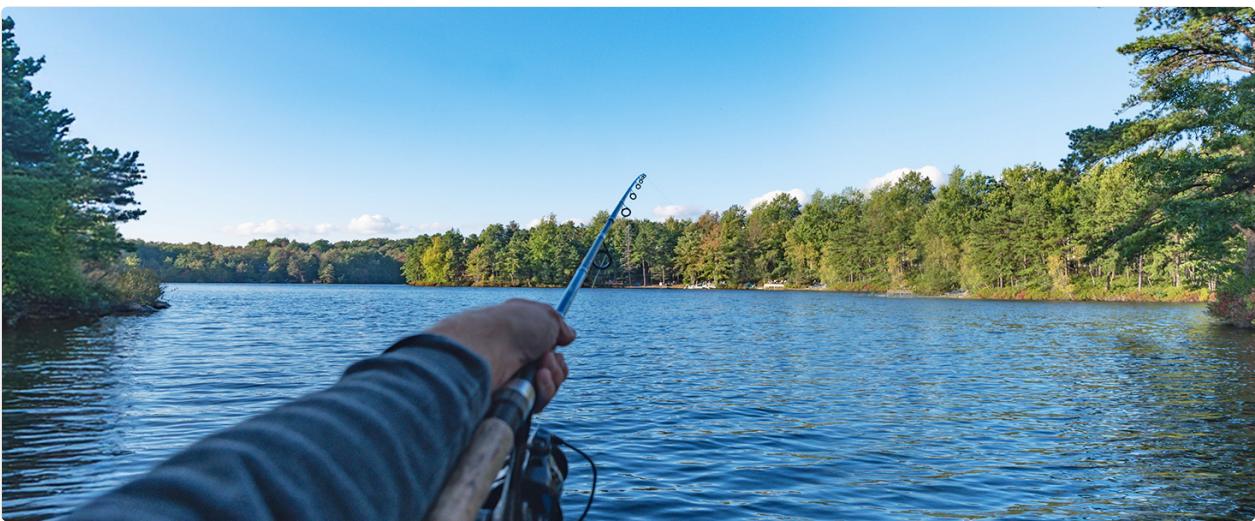
Image: A finger points towards the camera, highlighting its user-friendly design and one-click recording feature for instant capture.
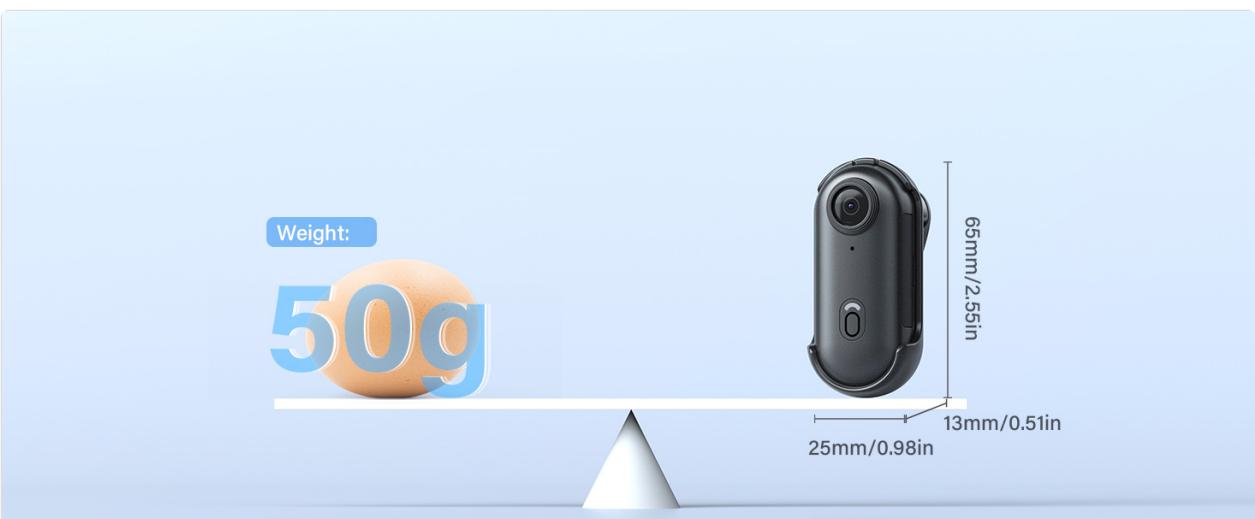
Image: Demonstrates the versatile wearing options of the camera, including attachment with the 360° rotatable back clip and the magnetic neck strap.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- BOBLOV W4 Body Camera

- Back Clip

- Magnetic Neck Strap

- USB Cable

- User Manual

- Adapter

Image: A visual representation of the complete package contents, including the camera, back clip, magnetic neck strap, USB cable, user manual, and adapter.

4. PRODUCT OVERVIEW

Familiarize yourself with the camera's buttons and indicators:

- **Video Button:** Used to start and stop recording. A short press in standby mode will initiate recording; the button vibrates and blinks blue.

- **Low Battery Warning:** When the battery life is less than 15 minutes, a low battery warning status is activated. The red flashing indicator will flash 5 times every 5 minutes.

Compatible with both Windows and Mac versions

Adapter included

Card Reader included

Image: An illustration detailing the camera's button functions, specifically the video button for recording and the low battery warning indicator.

5. SETUP

5.1 Charging the Camera

Before first use, fully charge the camera. Connect the camera to a power source using the provided USB cable

and adapter. The indicator light will show charging status.

5.2 Inserting the Memory Card

The camera supports Micro SD cards. Insert the Micro SD card into the designated slot until it clicks into place. Ensure the card is inserted correctly to avoid damage.

5.3 Connecting to Computer

The camera is compatible with both Windows and Mac operating systems. Use the provided USB cable and adapters (USB-C and standard USB) to connect the camera to your computer for file transfer.

What will you get?

* W4 Body Camera
* Back Clip
* Magnetic Neck Strap
* USB Cable
* User Manual
* Adapter

BOBLOV
Mini Body Camera User Manual
www.boblov.com | support@boblov.com
Model: W4
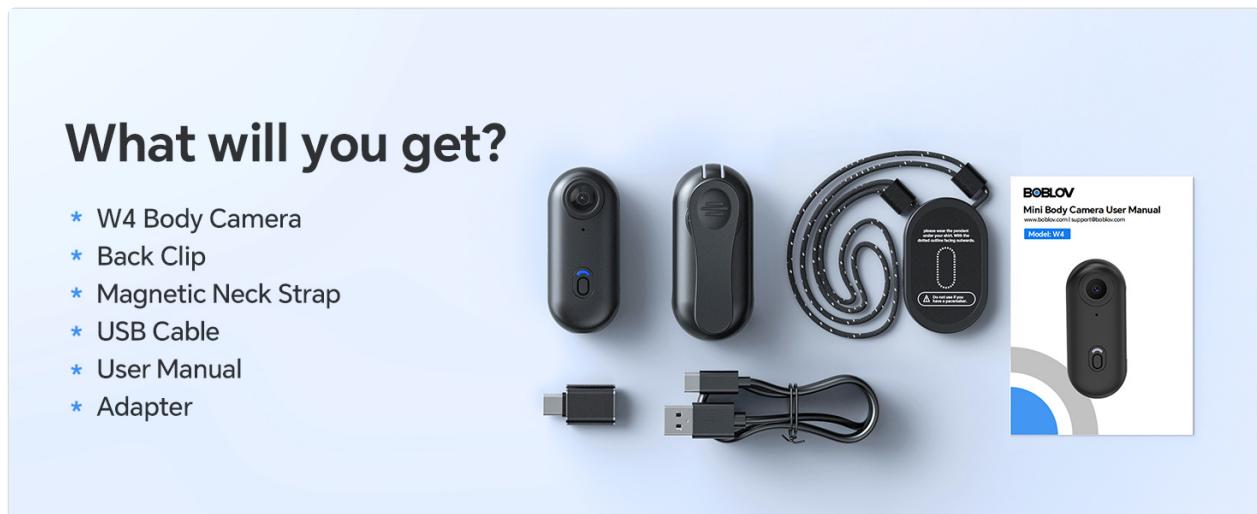
Image: Illustrates the camera's compatibility with both Windows and Mac versions, showing connections via included adapters to respective laptops.

6. OPERATING INSTRUCTIONS

6.1 Powering On/Off

To power on the camera, press and hold the Video Button until the indicator light illuminates. To power off, press and hold the Video Button again until the light turns off.

6.2 Recording Video

In standby mode, short press the Video Button to begin recording. The camera will vibrate and the blue indicator light will blink. To stop recording, short press the Video Button again. The camera will vibrate and the light will return to solid.

6.3 Accessing Files

Connect the camera to your computer using the USB cable. The camera will appear as a removable disk drive. You can then access and transfer your recorded video files.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution. Avoid harsh chemicals.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** For optimal battery life, avoid fully discharging the battery frequently. Charge the camera regularly, even if not in use for extended periods.

8. TROUBLESHOOTING

- **Camera not turning on:** Ensure the battery is charged. Connect to a power source and try again.
- **Cannot record:** Check if the Micro SD card is inserted correctly and has sufficient free space. Format the card if necessary (this will erase all data).
- **Computer not recognizing camera:** Try a different USB port or cable. Ensure the camera is powered on when connected.
- **Poor video quality:** Ensure the lens is clean. Check lighting conditions.

9. SPECIFICATIONS

Feature	Specification
Model	W4
Video Capture Resolution	1440p (2K)
Flash Memory Type	Micro SD
Battery Capacity	800mAh
Approx. Recording Time (2K)	1.5 - 2 Hours
Weight	50g
Connectivity Technology	USB
Photo Sensor Technology	CMOS
Maximum Focal Length	6.8 millimeters
Maximum Aperture	2 f
Video Capture Format	MP4
Supported Audio Format	MP3
Color	Black

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official BOBLOV website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

You can visit the official BOBLOV store for more information and support:BOBLOV Official Store

Related Documents - W4

	[Manual de utilizare cameră mini body BOBLOV A23](#) Manual de utilizare complet pentru camera mini body BOBLOV A23, acoperind configurarea, operarea, caracteristicile, specificațiile și depanarea.
	[BOBLOV 007 Mini DV Body Camera Instruction Manual](#) Comprehensive instruction manual for the BOBLOV 007 Mini DV body camera, covering features, operation, and specifications. Learn how to use your device effectively for recording and surveillance.
	[BOBLOV KJ23 Body Camera User Manual - Features, Specifications, and Troubleshooting](#) Comprehensive user manual for the BOBLOV KJ23 body camera, covering setup, operation, features, specifications, troubleshooting, and customer service information.
	[BOBLOV T5 Body Camera User Manual - Features, Operation, and Troubleshooting](#) Comprehensive user manual for the BOBLOV T5 Body Camera. Learn about its features, charging, button operations, recording modes, settings, troubleshooting, and customer support.
	[BOBLOV A22/A22P Mini Body Camera User Manual](#) User manual for the BOBLOV A22/A22P Mini Body Camera, covering its structure, basic operation, indicator lights, troubleshooting, and specifications.

BOBLOV

Body Camera User Manual

Official Website: www.boblov.com
Official Email Address: support@boblov.com

Model:C18

[BOBLOV C18 WiFi Body Camera User Manual and Support](#)

Comprehensive guide for the BOBLOV C18 WiFi Body Camera, including setup, features, and customer support information. Learn how to use your C18 camera with detailed instructions and access BOBLOV's official support channels.