Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Vibekio ZX-SS40B-X

Vibekio 40V 13.5 Inch Cordless Snow Shovel Instruction Manual

Model: ZX-SS40B-X

1. Important Safety Information

Always read and understand all safety warnings and instructions before operating this product. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- Use caution around rotating parts.
- Wear appropriate protective gear, including gloves and eye protection.
- Keep the snow blower out of reach of children and pets when not in use.
- Ensure the work area is clear of debris and obstacles before operation.
- Do not operate in wet conditions or rain.

2. Product Overview

The Vibekio 40V 13.5 Inch Cordless Snow Shovel is designed for efficient snow removal from sidewalks, patios, walkways, driveways, and entryways. It features a powerful 1000W brushless motor, a 13.5-inch clearing path, and an adjustable directional plate for precise snow control.



Image: Vibekio 40V 13.5-inch Cordless Snow Shovel with key features.

3. Package Contents

Verify that all items are included in your package:



Image: What's in the box for the Vibekio Cordless Snow Shovel.

- Vibekio 40V 13.5 Inch Cordless Snow Shovel
- 2 x 20-Volt 4.0 Ah Lithium-ion Battery Packs
- Dual-Port Quick Charger
- Instruction Manual

4. Assembly Instructions

The Vibekio Cordless Snow Shovel is designed for quick and easy assembly.



Image: Two-step quick assembly process.

1. **Connect the Handle:** Align the upper handle section with the lower unit. Push firmly until it clicks into place.
2. **Secure the Handle:** Twist the locking collar on the handle to secure the connection. Ensure it is tightened to

prevent wobbling during operation.

3. **Adjust Auxiliary Handle:** Loosen the knob on the auxiliary handle, adjust it to a comfortable height, and then tighten the knob securely.

5. Operating Instructions

5.1 Charging the Batteries

Before first use, fully charge both 20-Volt Lithium-ion battery packs using the provided dual-port quick charger. A clear battery level display on the unit allows you to check power at a glance.

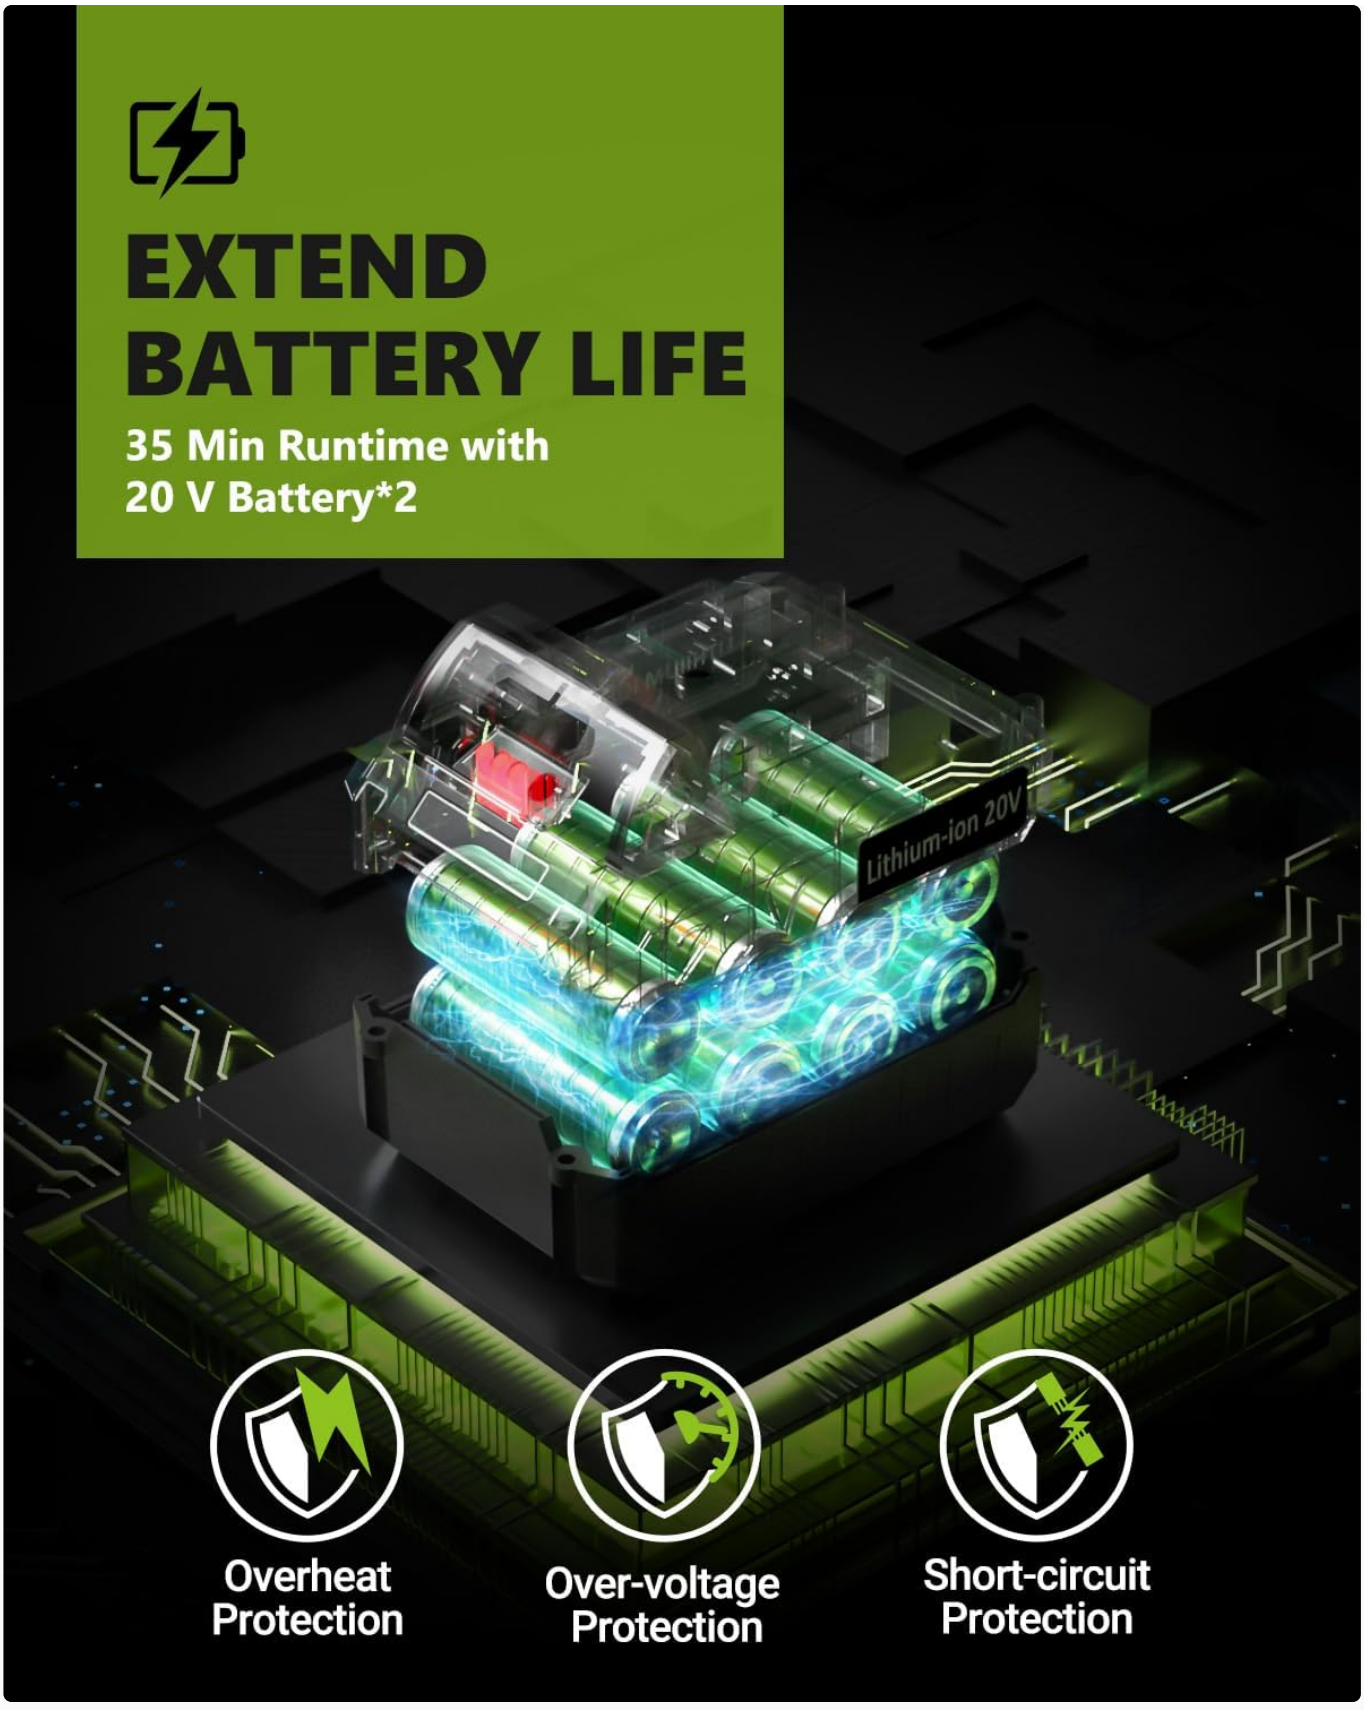


Image: Battery pack with protection features.

5.2 Starting the Snow Shovel

The snow shovel features a dual-safety start button to prevent accidental startups.



Image: Two-step safe start mechanism.

1. Insert the charged battery pack(s) into the designated slot(s).
2. Press and hold the safety button.
3. While holding the safety button, squeeze the On/Off trigger to start the motor.
4. Release the safety button once the motor is running.

5.3 Clearing Snow

The snow shovel clears a 13.5-inch wide and 6.5-inch deep path, throwing snow up to 22 feet.



Image: Cleaning path dimensions.



Image: Snow throwing distance demonstration.

- Push the snow shovel forward at a steady pace. Avoid forcing the unit through heavy snow.
- For deeper snow, clear in layers or take narrower passes.
- The ergonomic handle is designed to reduce back strain during use.

5.4 Adjustable Directional Plate

The snow shovel features a ±30° adjustable directional plate to control the snow discharge direction.



Image: Adjustable directional plate mechanism.

Adjust the plate manually to direct snow away from cleared areas or desired locations.

6. Maintenance

Regular maintenance ensures optimal performance and extends the life of your snow shovel.

- **Cleaning:** After each use, remove any snow, ice, or debris from the unit, especially around the auger and discharge chute. Use a damp cloth for cleaning. Do not use harsh chemicals.
- **Storage:** Store the snow shovel in a dry, protected area away from direct sunlight and moisture. The compact design allows for easy disassembly and storage in small spaces.



Image: Easy storage of the snow shovel.

- **Battery Care:** Store batteries in a cool, dry place. Do not store batteries in a discharged state for extended periods.

7. Troubleshooting

If you encounter issues with your snow shovel, refer to the following common problems and solutions:

- **Unit does not start:** Ensure batteries are fully charged and properly inserted. Check that the safety button is

pressed before squeezing the trigger.

- **Reduced snow throwing distance:** Clear any blockages from the auger or discharge chute. Ensure the snow is not too wet or heavy for the unit's capacity.
- **Short battery life:** Ensure batteries are fully charged before use. Operating in very cold temperatures can reduce battery performance.

For further assistance, please contact customer support.

8. Specifications

Feature	Specification
Brand	Vibekio
Model Number	ZX-SS40B-X
Material	Metal (Blade), Plastic (Handle)
Item Dimensions (L x W x H)	12.8 x 8.67 x 57.09 inches
Item Weight	20.5 pounds
Clearing Width	13.5 inches
Clearing Depth	6.5 inches
Motor Power	1000W Brushless (1900RPM)
Battery Type	2 x 20-Volt 4.0 Ah Lithium-ion
Snow Throwing Distance	Up to 22 feet
Directional Plate Adjustment	±30°
Grip Type	Ergonomic

9. Warranty and Support

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official Vibekio website. Keep your proof of purchase for warranty claims.

© 2024 Vibekio. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DK9G7569

More documents and user manuals: **https://manuals.plus/**