Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

HIROHRTV kitchen pantry cabinet

HIROHRTV 74" Freestanding Kitchen Pantry Cabinet with Charging Station User Manual

Model: kitchen pantry cabinet

1. Introduction

This manual provides detailed instructions for the assembly, operation, and maintenance of your HIROHRTV 74" Freestanding Kitchen Pantry Cabinet. Please read this manual thoroughly before assembly and use to ensure proper function and safety. Keep this manual for future reference.



Image 1.1: The HIROHRTV 74" Freestanding Kitchen Pantry Cabinet, showcasing its design and storage capabilities in a kitchen environment.

2. Safety Instructions

Adhere to the following safety guidelines to prevent injury or damage to the product:

- **Assembly:** Ensure all parts are present and undamaged before beginning assembly. Follow all assembly steps precisely. Do not overtighten screws.
- **Stability:** This cabinet is freestanding. For added stability and to prevent tipping, especially in households with children or pets, consider securing the cabinet to a wall using appropriate anti-tip hardware (not included).
- **Weight Capacity:** Do not exceed the recommended weight capacity for shelves and drawers. Distribute weight evenly.
- **Electrical Safety (Charging Station):** Only plug in appliances that meet the power specifications of the built-in charging station (3 AC outlets, 2 USB ports). Do not overload the outlets. Keep liquids away from the charging station.
- **Placement:** Place the cabinet on a level, stable surface. Avoid placing it in areas with excessive moisture or direct sunlight.

- **Moving:** When moving the cabinet, empty it first and lift it carefully. Do not drag the cabinet, as this may damage the base or floor.

3. Package Contents

Before assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, contact customer support.

- Cabinet Panels (various sizes for top, bottom, sides, shelves, doors, drawers)
- Hardware Pack (screws, dowels, cam locks, hinges, drawer slides, handles)
- Built-in Charging Station (with 3 AC outlets and 2 USB ports)
- Peg Board Panel
- Instruction Manual

4. Setup and Assembly

Assembly is required for this product. It is recommended to have two people for assembly. Clear a spacious area and lay out all components on a soft, clean surface to prevent scratches.

4.1 Tools Required (Not Included)

- Phillips Head Screwdriver
- Hammer (for dowels)
- Measuring Tape

4.2 Assembly Steps

1. **Unpack and Identify:** Carefully unpack all components and hardware. Refer to the parts list to identify each piece.
2. **Assemble Base Unit:** Connect the bottom and side panels of the lower cabinet section using the provided hardware (dowels, screws, cam locks).
3. **Install Drawer Slides:** Attach the drawer slides to the interior side panels of the lower cabinet and to the drawer boxes.
4. **Assemble Drawers:** Construct the drawer boxes and insert them into the installed slides.
5. **Attach Lower Cabinet Doors:** Secure hinges to the lower cabinet doors and then attach the doors to the cabinet frame.
6. **Assemble Upper Cabinet Unit:** Connect the top and side panels of the upper cabinet section.
7. **Install Peg Board and Charging Station:**Secure the peg board panel into its designated slot. Install the charging station into the pre-cut opening.
8. **Attach Upper Cabinet Doors:** Secure hinges to the upper cabinet doors and then attach the doors to the cabinet frame.
9. **Connect Upper and Lower Units:** Carefully lift the upper cabinet unit and align it with the lower cabinet unit. Secure them together using the provided connecting hardware.
10. **Install Shelves:** Insert the adjustable shelves into the desired positions using the shelf pins.
11. **Attach Handles:** Securely attach all door and drawer handles.
12. **Final Check:** Ensure all screws are tightened, and the cabinet is stable.



Image 4.1: Interior view of the cabinet with doors and drawers open, illustrating the storage compartments and adjustable shelves.

5. Operating Instructions

5.1 Storage Compartments

- **Shelves:** The cabinet features multiple adjustable shelves. To adjust, remove items, lift the shelf, reposition the shelf pins to the desired height, and reinsert the shelf.
- **Drawers:** The slide-out drawers are designed for easy access to smaller items. Pull gently to open and push firmly to close.
- **Doors:** The cabinet doors open and close smoothly. Ensure they are fully closed to keep contents secure and dust-free.

5.2 Built-in Charging Station

The cabinet includes a built-in charging station with 3 AC outlets and 2 USB ports, located in the open middle section.

1. **Power Connection:** Plug the cabinet's main power cord into a standard wall outlet.

2. **Using AC Outlets:** Insert appliance plugs into the 3 AC outlets. Ensure appliances do not exceed the total wattage capacity of the charging station.
3. **Using USB Ports:** Connect USB charging cables for devices like smartphones or tablets to the 2 USB ports.



Image 5.1: Detail of the built-in charging station, highlighting the 3 AC outlets and 2 USB ports for convenient power access.

5.3 Peg Board Functionality

The integrated peg board provides customizable storage options. Use compatible peg board hooks (not included) to hang utensils, small tools, or decorative items.



Image 5.2: The peg board section of the cabinet, demonstrating its versatility for hanging various kitchen items.

6. Maintenance

Regular cleaning and proper care will extend the life and appearance of your cabinet.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners, harsh chemicals, or excessive moisture, which can damage the finish.
- **Spills:** Clean spills immediately to prevent staining or damage to the material.
- **Hardware:** Periodically check all screws and fasteners to ensure they are tight. Retighten if necessary.
- **Charging Station:** Keep the charging station free of dust and debris. Do not attempt to disassemble or repair the electrical components.

7. Troubleshooting

If you encounter issues with your cabinet, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cabinet is wobbly or unstable.	Uneven floor; loose fasteners; improper assembly.	Ensure cabinet is on a level surface. Check and tighten all assembly screws. Re-verify assembly steps.
Doors do not close properly.	Misaligned hinges; obstruction.	Adjust hinge screws to align doors. Check for items blocking the door path.
Drawers stick or do not slide smoothly.	Improperly installed drawer slides; obstruction.	Ensure drawer slides are correctly installed and aligned. Check for items obstructing the drawer path.
Charging station not working.	Not plugged into wall outlet; overloaded circuit; faulty appliance.	Verify the cabinet's power cord is securely plugged into a functional wall outlet. Reduce the number of plugged-in devices. Test with a different appliance.

8. Specifications

Detailed product specifications for the HIROHRTV 74" Freestanding Kitchen Pantry Cabinet:

- **Brand:** HIROHRTV
- **Model Name:** kitchen pantry cabinet
- **Color:** White-no Light
- **Product Dimensions:** 15.75"D x 43.7"W x 74"H
- **Item Weight:** 134 Pounds
- **Material:** Engineered Wood (Frame and Back Material)
- **Top Material Type:** Grey-colored material
- **Handle Material:** Metal
- **Number of Shelves:** 3 (adjustable)
- **Number of Racks:** 4
- **Special Feature:** Built-In Charging Station (3 AC outlets, 2 USB ports), Peg Board
- **Mounting Type:** Floor Mount (Freestanding)

- **Assembly Required:** Yes
- **UPC:** 768057225653

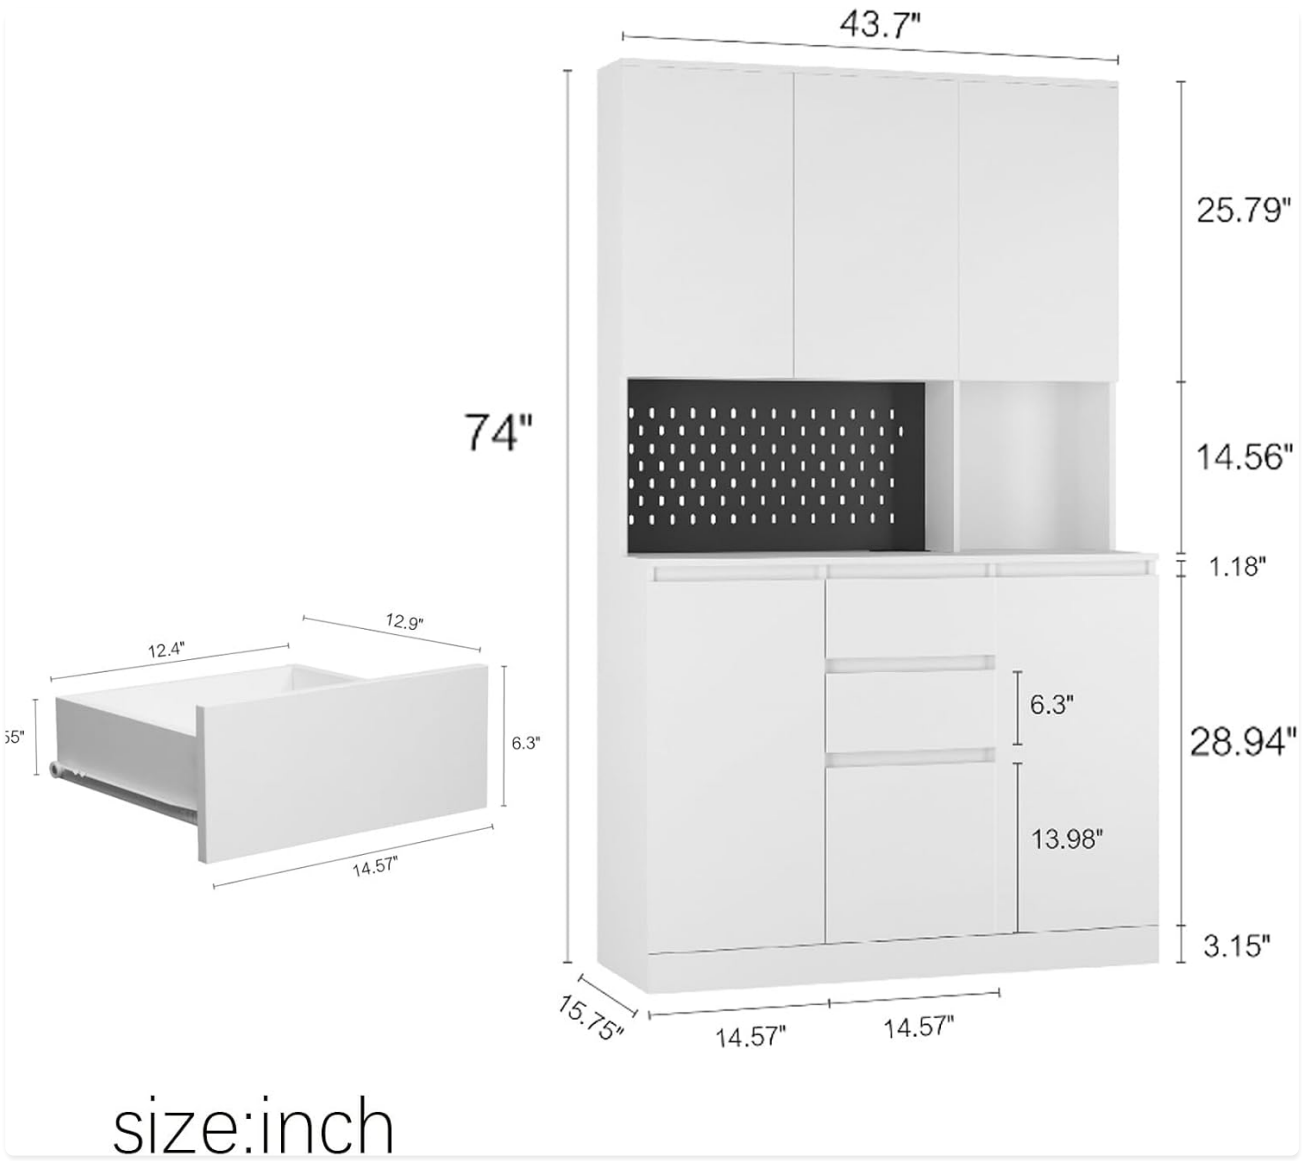


Image 8.1: Dimensional diagram of the cabinet, indicating height, width, and depth measurements.

9. Warranty and Support

For warranty information or technical support, please refer to the purchase documentation or contact HIROHRTV customer service through the retailer where the product was purchased. Please have your model number (kitchen pantry cabinet) and UPC (768057225653) available when contacting support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DKDYY9PZ

More documents and user manuals: **https://manuals.plus/**