Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Dpofirs Dpofirswzv4ont2xk-11

Dpofirs 2Pcs Scrolling Remote Control User Manual

Model: Dpofirswzv4ont2xk-11

1. Product Overview

The Dpofirs Scrolling Remote Control is a versatile Bluetooth device designed to enhance your experience with video and e-book applications on compatible smartphones and tablets. It allows for remote control of various functions, including scrolling, page turning, media playback, and camera operations.
This package includes two remote controllers.



Image: The Dpofirs Scrolling Remote Control units.

2. Package Contents

- 2 x Remote Controllers
- 1 x User Manual (this document)

3. Specifications

Feature	Detail
Brand	Dpofirs
Model Number	Dpofirswzv4ont2xk-11
System Compatibility	Android 8.0+ (including Hongmeng system), iOS
Bluetooth Version	V5.3
Wireless Distance	Approx. 10m / 32.8ft
Battery Capacity	180mAh battery x 2 (included)
Item Weight	0.847 ounces
Product Dimensions	4.72 x 3.15 x 0.39 inches
Compatible Devices	Smartphones, Tablets (Not compatible with dedicated e-reader devices like Kindle Paperwhite, Oasis)

4. Setup Instructions

1. **Power On:** Ensure the remote control has sufficient battery. The device comes with pre-installed 180mAh batteries.
2. **Enable Bluetooth:** On your smartphone or tablet, navigate to the settings menu and enable Bluetooth.
3. **Pairing Mode:** The remote control should automatically enter pairing mode when powered on. If not, refer to the device's specific instructions for manual pairing mode activation (usually a long press on a specific button).
4. **Connect:** On your smartphone or tablet, search for available Bluetooth devices. Select the Dpofirs remote control from the list to establish a connection. Once connected, the device is ready for use.



Image: The remote control ready to connect via Bluetooth to a smartphone.

5. Operating Instructions

The Dpofirs remote control offers a variety of functions for media consumption and content creation. Familiarize yourself with the button layout for optimal use.

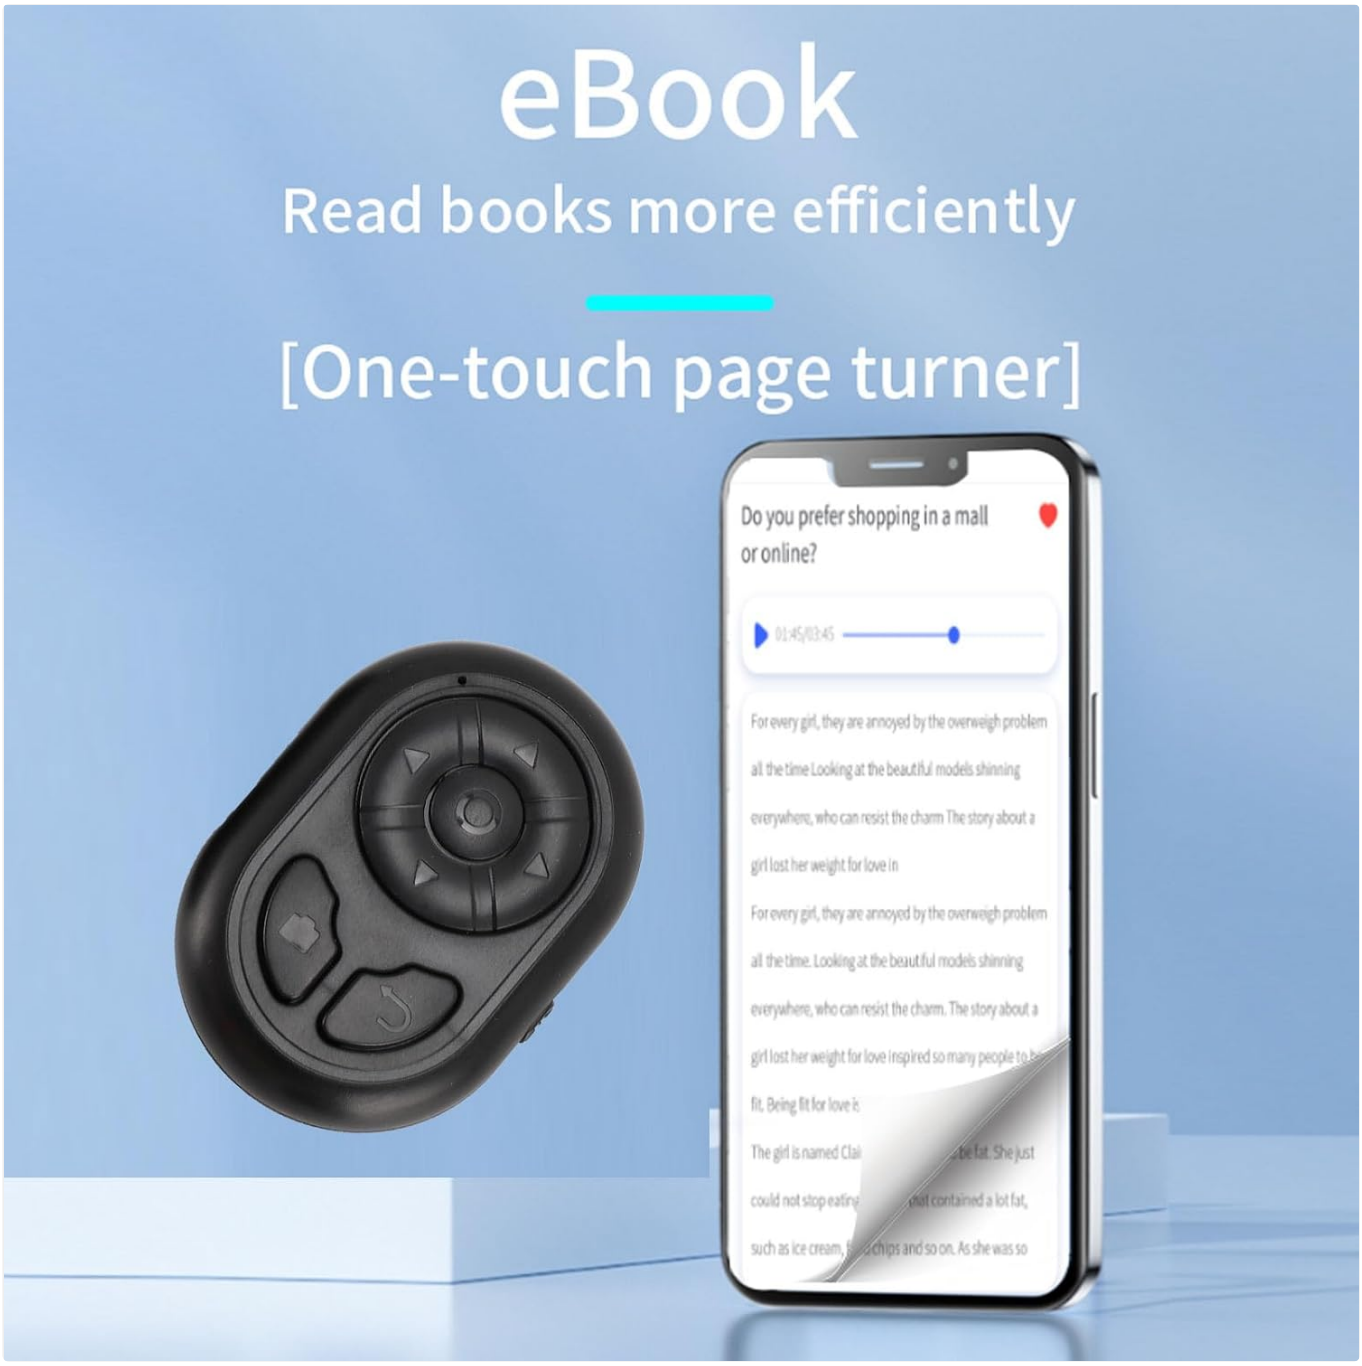


Image: Detailed view of the remote control's buttons.

5.1. Media Control

- **Scrolling/Page Turning:** Use the directional buttons (up, down, left, right) to scroll through content or turn pages in e-books and apps. This includes vertical scrolling for videos and horizontal swiping for certain applications.
- **Pause/Play:** A dedicated button allows you to pause or resume video playback.
- **Volume Control:** Adjust the volume of your media using the designated volume buttons (if present and supported by the device/app).



Image: The remote control facilitating e-book page turning.

5.2. Camera and Video Recording

- **Remote Photo Capture:** Activate your phone's camera app and use the remote to trigger photo capture from up to 10 meters away.
- **Video Recording:** Start and stop video recording remotely.



Image: Using the remote control for remote photo and video capture.

5.3. Additional Functions

- **Back Function:** Navigate back within applications.
- **Lock Screen:** Some devices/apps may support remote screen locking.

6. Maintenance

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** The remote uses internal batteries. If the device stops responding or its range decreases significantly, the batteries may need replacement. Refer to the product's design for battery access.



Image: Illustration of the remote control's internal battery access.

7. Troubleshooting

- **Device not connecting:**
  - Ensure Bluetooth is enabled on your smartphone/tablet.
  - Make sure the remote control is powered on and within the 10m range.
  - Check if the remote control has sufficient battery power.
  - Try unpairing and re-pairing the device from your phone's Bluetooth settings.
- **Functions not working in an app:**
  - Verify that the app supports external Bluetooth controls.
  - Some apps may require specific settings to be enabled for remote control functionality.
  - Ensure your device's operating system is compatible (Android 8.0+ or Hongmeng system).
- **Short battery life:**

- Ensure the remote is turned off when not in use to conserve battery.
- If the issue persists, the internal batteries may need replacement.

8. Important Notes

- This device is designed for use with smartphones and tablets running Android 8.0+ (including Hongmeng system) and iOS.
- It is **not** compatible with dedicated electronic reader devices such as Kindle Paperwhite or Kindle Oasis.
- Keep out of reach of children.
- Do not expose to water or extreme temperatures.

9. Warranty and Support

For warranty information or technical support, please refer to the retailer where the product was purchased or contact Dpofirs customer service directly. Contact details can typically be found on the product packaging or the official Dpofirs website.

© 2025 Dpofirs. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DLH9G5VW

More documents and user manuals: **https://manuals.plus/**