Manuals+
Q & A | Deep Search | Upload

DOVAMAN DCS08A

DOVAMAN DCS08A 18-inch Electric Chainsaw Instruction Manual

Model: DCS08A

Brand: DOVAMAN

1. Important Safety Information

Read and understand all safety warnings and instructions before operating this electric chainsaw. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- Always wear appropriate personal protective equipment (PPE), including eye protection, hearing protection, gloves, and sturdy footwear.
- Keep children and bystanders at a safe distance (at least 50 feet) from the operating area.
- Do not operate the chainsaw in wet conditions or in the presence of flammable liquids or gases.
- Ensure the chain brake is engaged when not actively cutting and during transport.
- Always maintain a firm grip with both hands on the chainsaw handles.
- Avoid cutting materials larger than 17 inches in diameter.
- Do not push the tip of the guide bar into the material to prevent kickback.
- Before first use, add lubricating oil and run the chainsaw unloaded for 30 seconds to ensure full lubrication.

2. Product Components

The DOVAMAN DCS08A Electric Chainsaw package includes the following items:

- 1x DOVAMAN DCS08A Electric Chainsaw Unit
- 1x 18-inch OREGON Guide Bar
- 2x Chains (OREGON)
- 1x Protective Cover for Guide Bar
- 1x User Manual (this document)

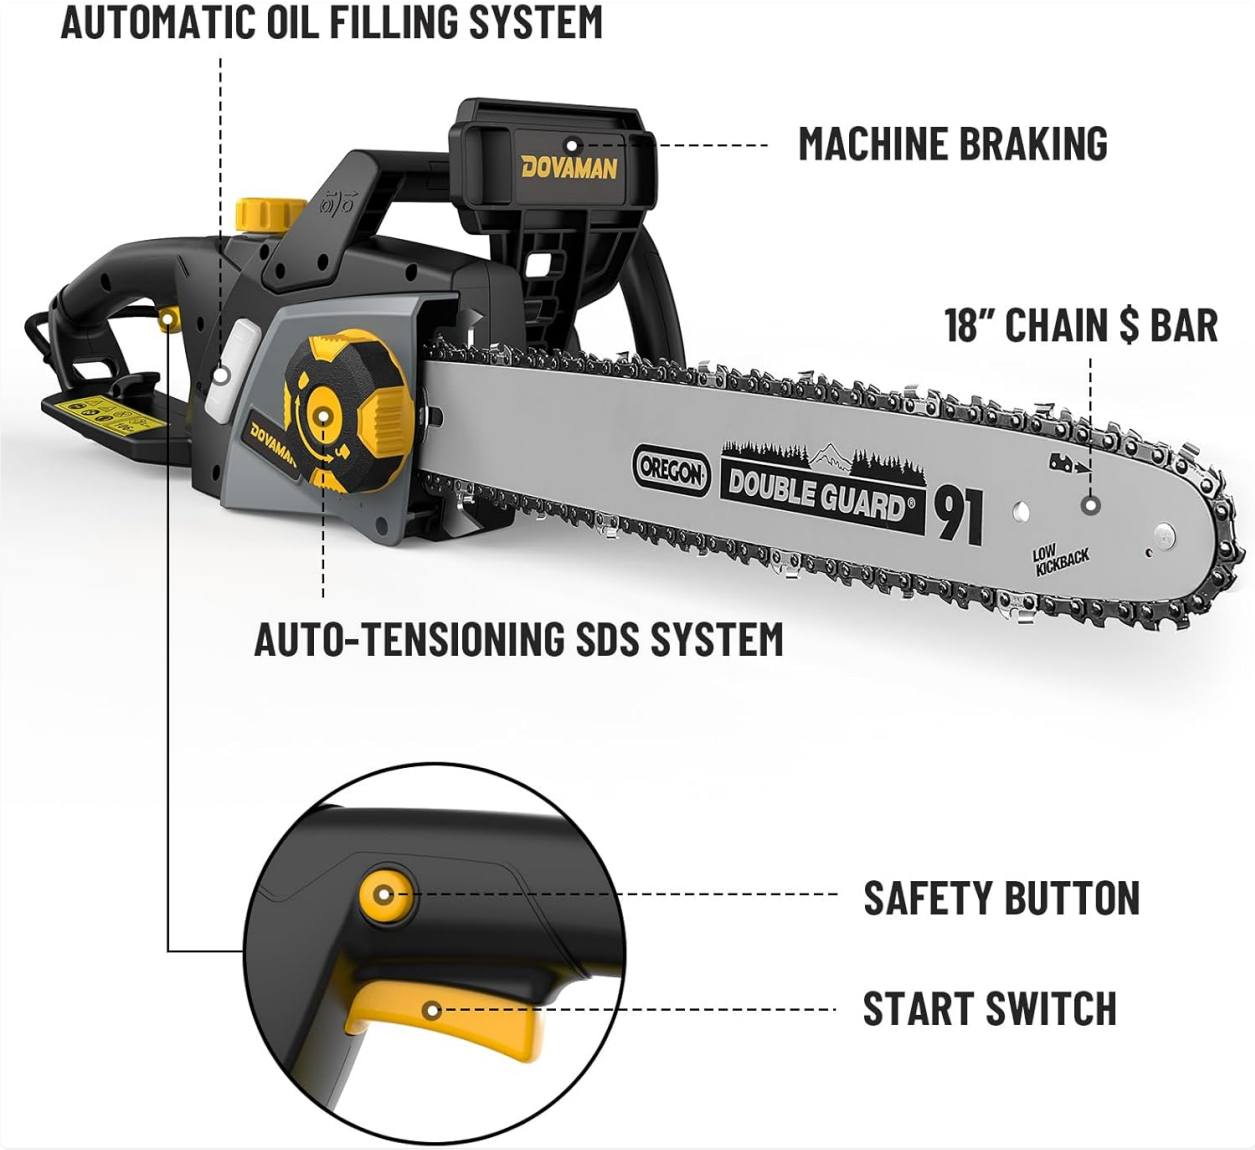

Figure 1: Overview of the DOVAMAN DCS08A Electric Chainsaw with key components labeled, including the safety button, start switch, auto-tensioning SDS system, 18-inch chain and bar, machine braking, and automatic oil filling system.

3. Setup Instructions

3.1. Chain and Guide Bar Installation

Proper installation of the chain and guide bar is crucial for safe and efficient operation.

1. Remove the side cover by rotating the SDS knob counter-clockwise and lifting it off.
2. Ensure the chain's cutting edges are oriented correctly. The cutting teeth along the top of the guide bar must point away from the chainsaw body.
3. Place the chain around the drive sprocket and then fit it into the groove of the guide bar.
4. Align the guide bar over the mounting studs and ensure the chain tensioner pin engages with the hole in the guide bar.
5. Replace the side cover.
6. **Tool-Free Tensioning:** Rotate the SDS knob clockwise to tighten the chain. Continue rotating until the chain is snug but can still be pulled slightly away from the guide bar (approximately 1/8 to 1/4 inch). The knob should be fully tightened for optimal chain tension.

Figure 2: The tool-less tension system allows for quick and easy chain adjustment by rotating the SDS knob. Ensure it is rotated to the tightest setting for optimal cutting performance.

Figure 3: The chainsaw is equipped with a high-quality 18-inch OREGON guide bar and chain, designed for better wear resistance and reduced vibration.

Your browser does not support the video tag.

Video 1: This video demonstrates the correct procedure for tightening the SDS knob to ensure proper chain tension on the DOVAMAN DCS08A Electric Chainsaw.

3.2. Adding Chain Oil

The chainsaw features an automatic oiling system. Ensure the oil tank is filled with appropriate chain and bar oil before each use.

1. Unscrew the oil tank cap located on the top of the chainsaw.
2. Fill the tank with high-quality chain and bar lubricant. The transparent oil tank allows for easy monitoring of the oil level.
3. Replace the oil tank cap securely.
4. Run the chainsaw unloaded for approximately 30 seconds to allow the automatic oiling system to lubricate the bar and chain fully.

Figure 4: The automatic oiling system ensures continuous lubrication of the bar and chain, reducing friction and extending their lifespan. The transparent tank allows for easy oil level checks.

4. Operating Instructions

4.1. Starting the Chainsaw

1. Ensure the chainsaw is plugged into a suitable power outlet with an appropriate extension cord.
2. Verify that the chain brake is disengaged (pulled back towards the front handle).
3. Press the safety switch (usually a button or lever) and then squeeze the trigger switch to start the motor.

4.2. Cutting Techniques

Always maintain a stable stance and a firm grip on the chainsaw. Let the saw do the work; do not force it.

- For optimal performance and safety, avoid cutting wood thicker than 17 inches in diameter.
- Never use the tip of the guide bar for cutting, as this can lead to dangerous kickback.
- When cutting, allow the chainsaw's weight and the chain's speed to perform the cut. Apply steady, moderate pressure.
- Be aware of the wood's tension and compression to prevent pinching the guide bar or unexpected

movement of the log.

Figure 5: The 15-amp motor and 49.21 ft/sec chain speed provide efficient cutting for various types of hardwood.

Your browser does not support the video tag.

Video 2: This video provides a general demonstration on how to use the DOVAMAN DCS08A Electric Chainsaw for cutting logs.

Your browser does not support the video tag.

Video 3: A detailed overview of the DOVAMAN DCS08A Chain Saw in action, showcasing its cutting capabilities on various wood types.

5. Maintenance

Regular maintenance ensures the longevity and safe operation of your chainsaw.

- **Chain Lubrication:** The automatic oiling system continuously lubricates the chain. Regularly check the transparent oil tank and refill with chain and bar oil as needed.
- **Chain Tension:** Periodically check the chain tension. If the chain appears loose, re-tighten it using the SDS knob until it is snug but still allows for slight movement.

- **Chain Sharpening/Replacement:** The OREGON chain is designed for durability. Sharpen the chain regularly to maintain cutting efficiency. An extra chain is included for convenience when replacement is necessary.
- **Cleaning:** After each use, disconnect the power and clean sawdust and debris from the guide bar, chain, and motor housing.

6. Troubleshooting

If you encounter issues with your chainsaw, refer to the following common troubleshooting steps:

- **Chainsaw does not start:**
  - Ensure the power cord is securely plugged into a functional outlet.
  - Check that the chain brake is fully disengaged. The chainsaw will not operate if the brake is engaged.
  - Verify that the safety switch is pressed before squeezing the trigger.
- **Chain is loose or jumps off the bar:**
  - Re-tension the chain using the SDS knob. Ensure it is tightened to the maximum setting.
  - Inspect the chain and guide bar for damage or wear. Replace if necessary.
- **Motor feels hot during operation:**
  - This can occur during prolonged heavy use. Allow the chainsaw to cool down.
  - Ensure the chain is sharp and properly tensioned, as a dull or loose chain can increase motor strain.

7. Specifications

Feature	Specification
Brand	DOVAMAN
Model Number	DCS08A
Power Source	Corded Electric
Motor Power	15-Amp (1800 Watts)
Guide Bar Length	18 Inches
Chain Speed	49.21 ft/sec (47.2FT/S)
Item Weight	13 Pounds
Product Dimensions	9"L x 10"W x 19"H
Material	Plastic & Metal
UPC	602835079000

8. Warranty and Support

DOVAMAN is committed to providing excellent customer service. If you have any questions or require assistance with your DCS08A Electric Chainsaw, please contact our support team.

We aim to provide comprehensive after-sales service within 24 hours of your inquiry.

© 2025 DOVAMAN. All rights reserved.