Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Eremolz Learnt Remote Control

Universal Big Button Backlight TV Remote for Seniors User Manual

Model: Learnt Remote Control | Brand: Eremolz

Introduction

This manual provides comprehensive instructions for the Eremolz Universal Big Button Backlight TV Remote, designed for simple and easy use, especially for seniors. It is compatible with major TV brands and offers essential functions for controlling your television.

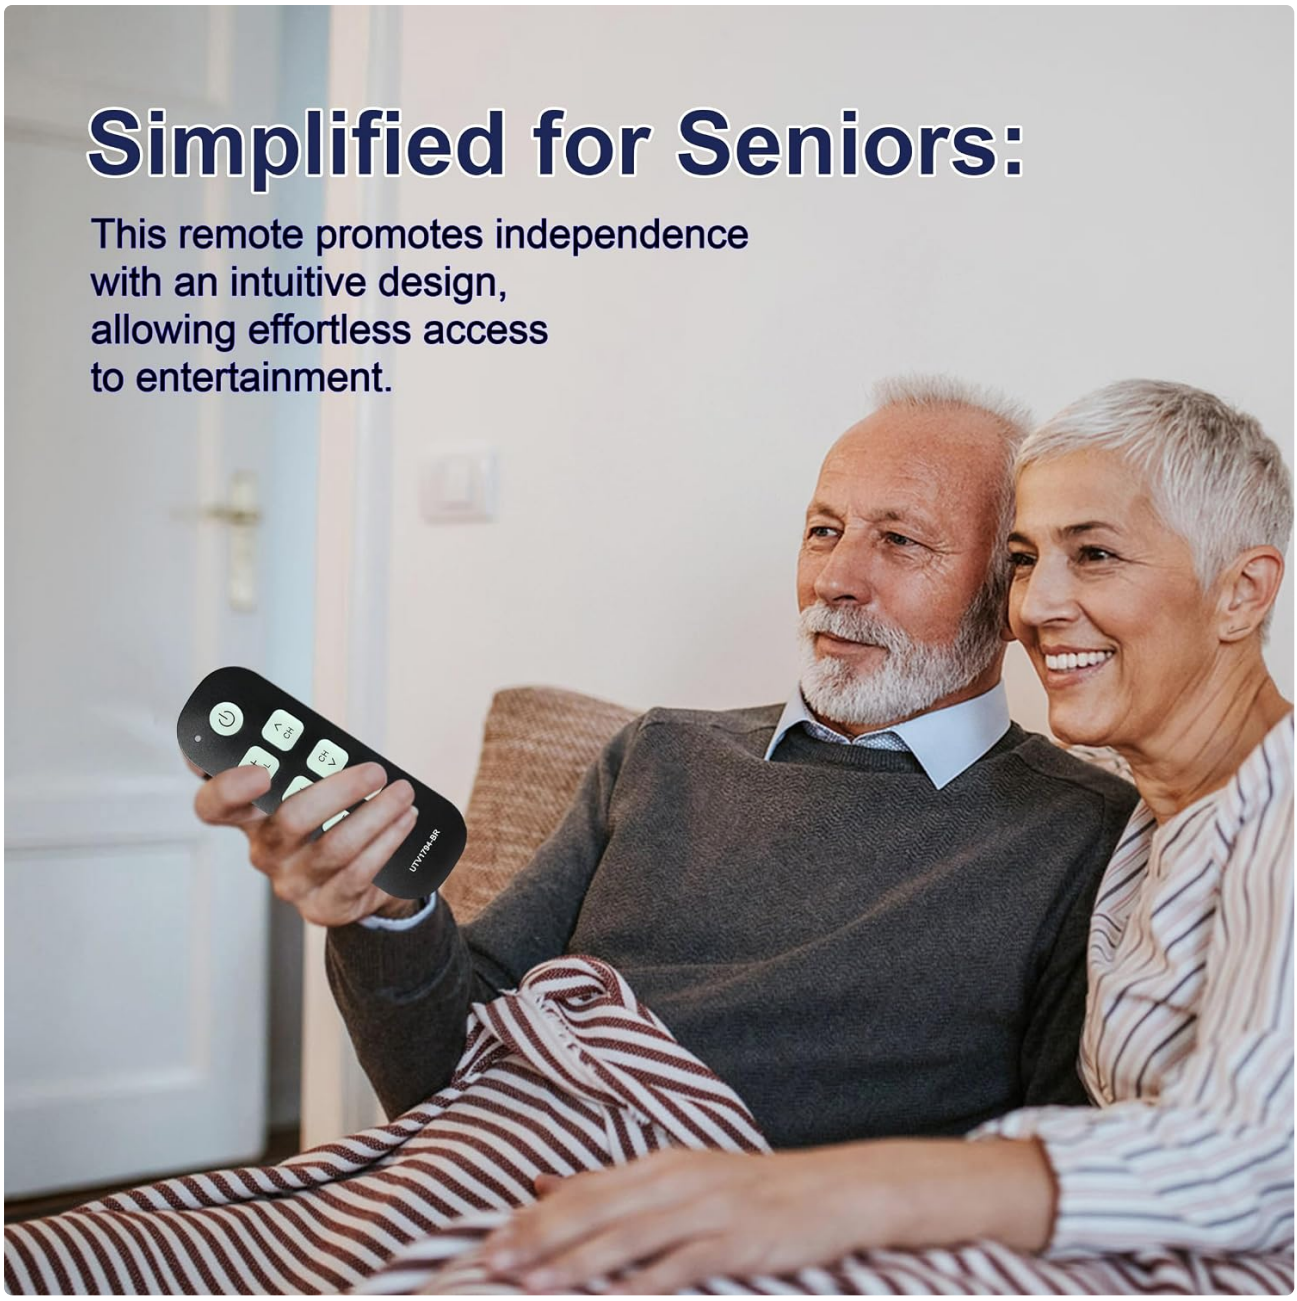

The Eremolz remote is designed with an intuitive layout and large buttons to promote independence and effortless access to entertainment for seniors.



This remote offers universal compatibility with many major TV brands, including LG, Samsung, Panasonic, RCA, Dynex, Element, Hisense, Insignia, JVC, Magnavox, Philips, Sanyo, Sharp, Sony, TCL, Toshiba, Vizio, and Westinghouse. Please note it is not compatible with Cable Box, Fire Stick, Ro-ku Stick, or DVD/Blue-Ray players.

Setup

Battery Installation

Insert two AAA batteries (not included) into the battery compartment, ensuring correct polarity. For LG, Samsung, Panasonic, and RCA TVs, the remote may function directly for channel and volume control. For other brands, the learning function is required.

Learning Function

The Eremolz remote can learn infrared (IR) signals from your original TV remote. It cannot learn Bluetooth or wireless remote control functions. Ensure your original remote has working batteries.

Learning function: If some buttons don't work after learning, follow the same steps to re-learn the non-working buttons until all necessary functions are successfully learned.

Please make sure you have our remote and your original tv remote controls in hand and they do have working batteries inside. It can only learn Infrared remote control function, can not learn Bluetooth and wireless remote control function.

In the following learning instruction diagram:
The remote sending the signal is A (your original remote),
and the one receiving the signal is B (UTV-1794 remote).

- Press B remote's [MUTE] key and [VOL+] together to make B remote's LED light stay on, it will enter the learning mode.



- Align A and B remotes head-to-head within 1~3CM. Start to learn the buttons one by one.

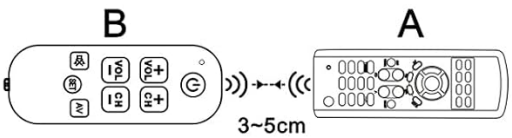

- Press the button on A remote, move A remote slowly in all directions to find the position where B remote's LED flashes. Keep the position still during learning.
- Press the function key on A remote(e.g., power key), and B remote's LED will flash. Press B remote's power key to make the LED stay on.
- Repeat the above steps to learn all or part of A remote's functions onto B remote.
- When B remote's LED is on, press B remote's [MUTE] key and [VOL-] key together to save and exit, the LED turn off, and the learning is complete.

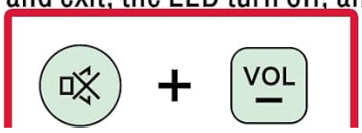

Visual guide for the learning process, showing the new remote (B) receiving signals from the original remote (A).

1. **Step 1:** Press the Eremolz remote's [MUTE] key and [VOL+] key together. The remote's LED light will stay on, indicating it has entered learning mode.
2. **Step 2:** Align your original remote and the Eremolz remote head-to-head within 1 to 3 cm.
3. **Step 3:** Press the button on your original remote. Move your original remote slowly in all directions to find the position where the Eremolz remote's LED flashes. Keep the position still during learning.
4. **Step 4:** Press the function key on your original remote (e.g., power key). The Eremolz remote's LED will flash. Then, press the corresponding key on the Eremolz remote (e.g., power key) to make its LED stay on.
5. **Step 5:** Repeat the above steps to learn all or part of your original remote's functions onto the Eremolz remote.
6. **Step 6:** When the Eremolz remote's LED is on, press the [MUTE] key and [VOL-] key together to save and exit. The LED will turn off, and the learning process is complete.

Note: If some buttons do not work after learning, follow the same steps to relearn the non-working buttons until all necessary functions are successfully learned.



Detailed text instructions for the simple repairing process before using the remote.

▶ **Watch video online**

How to set up this remote control

Official product video demonstrating how to set up the Eremolz Universal Big Button Backlight TV Remote, including the learning function.

Operating Your Remote

Once set up, the Eremolz remote provides straightforward control over your television. Use the large, clearly labeled buttons for common functions:

- **Power Button:** Turns your TV on or off.
- **VOL+** / **VOL-:** Adjusts the volume up or down.
- **CH^** / **CHv:** Changes channels up or down.
- **INPUT:** Selects the input source (e.g., HDMI 1, AV).
- **CC:** Activates or deactivates Closed Captions.
- **MUTE:** Mutes or unmutes the TV audio.



The remote features large, backlit buttons for improved visibility and ease of use, particularly beneficial for the elderly.

Maintenance

To ensure the longevity and optimal performance of your Eremolz remote:

- Keep the remote clean by wiping it with a soft, dry cloth.
- Avoid exposing the remote to extreme temperatures, moisture, or direct sunlight.
- If the remote's performance degrades, replace the batteries with fresh ones.
- Do not attempt to disassemble the remote, as this may void the warranty.

Troubleshooting

- **Remote not responding:** Ensure batteries are correctly installed and have sufficient charge. Replace if necessary.
- **Buttons not working after learning:** If specific buttons do not function as expected after the learning process, repeat the learning steps for those particular buttons. Ensure proper alignment and proximity between the original and Eremolz remotes during learning.

- **Remote not controlling TV:** Verify that your TV uses infrared (IR) technology. This remote is not compatible with RF, Bluetooth, or Magic Link remote controls. Ensure there are no obstructions between the remote and the TV's IR receiver.
- **LED light not staying on during learning:** Ensure you are pressing the [MUTE] and [VOL+] keys simultaneously and holding them until the LED light remains solid.

If you encounter any difficulties in setting up or using the remote control that are not resolved by the above steps, please contact customer service.

Specifications

Feature	Detail
Product Dimensions	3 x 3 x 2 inches
Item Weight	2.39 ounces
Item Model Number	Learnt Remote Control
Brand	Eremolz
Special Feature	Universal
Color	black
Max Number of Supported Devices	1
Compatible Devices	Television

Warranty and Support

Eremolz provides premium customer service, including a 360-day warranty return service. All customer service responses are provided within 12 hours.

For support or inquiries, please contact Eremolz US directly through the retailer's platform or their official website.

© 2025 Eremolz. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DPLZNJ2K

More documents and user manuals: **https://manuals.plus/**