Manuals+
Q & A | Deep Search | Upload

Greadio GB-X9C

Greadio CD Boombox Player User Manual

Model: GB-X9C

Brand: Greadio

Introduction

Thank you for choosing the Greadio CD Boombox Player. This manual provides essential information for setting up, operating, and maintaining your new device. Please read it thoroughly before use to ensure optimal performance and longevity.

This portable boombox offers versatile audio playback with CD/CD-R/CD-RW compatibility and AUX input, featuring dual stereo speakers for enhanced sound quality. It is designed for ease of use, making it suitable for all ages and various environments.

Image: The Greadio CD Boombox Player being carried by a person, emphasizing its compact and portable design for music on the go.

What's in the Box

- CD Player Boombox x1
- Type-C Charging Cord x1
- AUX Cable x1
- User Manual x1

Product Features

The Greadio CD Boombox Player is equipped with several features designed for a superior audio experience:

- **CD Compatibility:** Supports CD, CD-R, and CD-RW formats.

- **EQ Modes:** Five equalizer modes (classical, rock, pop, jazz, flat) to customize your listening experience.
- **Programmable Playback:** Customize your song list with repeat and programmable functions.
- **High-Quality Sound:** Built-in 3W dual stereo speakers with MAT and DSP technology for reduced noise and distortion.
- **AUX-in:** 3.5mm AUX input for connecting external audio devices like cell phones, MP3 players, and computers.
- **Dual Power Options:** Can be powered via USB Type-C cable (adapter not included) or 4 C-batteries (not included) for portable use.
- **Compact and Portable:** Lightweight design with a sturdy carry handle for easy transport.

Setup

Powering the Device

Your Greadio CD Boombox Player can be powered in two ways:

1. **Using Type-C Cable (Recommended for Home Use):**
   Connect the provided Type-C charging cord to the Type-C port on the boombox. Plug the other end into a DC 5V/1A USB power adapter (not included) and then into a wall outlet. The unit will power on.

Image: The Greadio CD Boombox Player connected to a wall outlet via a USB Type-C cable. This illustrates the Type-C power option.

2. **Using C-Batteries (For Portable Use):**
   For outdoor or portable use, you can power the boombox with 4 C-size batteries (not included). Open the battery compartment located on the bottom of the unit. Insert the batteries, ensuring correct polarity (+/-). Close the battery compartment securely.

Image: The Greadio CD Boombox Player with four C-size batteries displayed, indicating the battery power option.

Initial Power On

Press the /**FUNC.** button to turn on the boombox. The digital display will light up.

Image: A close-up of the Greadio CD Boombox Player's front panel, showing the power/function button, volume controls, track navigation, EQ/play/pause, and repeat/program buttons, along with the digital display.

Operating Instructions

Playing a CD

1. Ensure the boombox is powered on.
2. Gently lift the CD compartment lid located on the top of the unit.
3. Place a CD (CD/CD-R/CD-RW compatible) onto the spindle with the label side facing up.
4. Close the CD compartment lid securely.
5. The boombox will automatically detect the CD and begin playback. If not, press the**EQ**/►▮▮ button to start playing.

Image: The Greadio CD Boombox Player with its top-loading CD compartment open, illustrating how to insert a CD. Text indicates compatibility with CD/CD-R/CD-RW formats.

Volume Control

Use the **VOL-** and **VOL+** buttons to adjust the playback volume.

Track Navigation

- Press the ◀◀ button to go to the beginning of the current track or to the previous track.
- Press the ►► button to skip to the next track.

EQ Modes

Press the **EQ**/►▮▮ button repeatedly to cycle through the five available EQ modes: Classical, Rock, Pop, Jazz, and Flat. Select the mode that best suits your music genre or personal preference.

Image: The Greadio CD Boombox Player with visual effects indicating sound output, emphasizing its lossless Hi-Fi sound quality, MAT technology, and DSP control for enhanced audio.

Repeat and Program Functions

The boombox supports customizable playback options:

- Press the **REP/PROG.** button once for Single Cycle (repeats current track).
- Press it again for Repeat All (repeats all tracks on the CD).
- Press it a third time for Random Play (plays tracks in a random order).
- To program a custom playlist:

  a. In CD mode, press **REP/PROG.** to enter programming mode. "P01" will blink on the display.
  b. Use the ◀◀ or ►► buttons to select the desired track.
  c. Press **REP/PROG.** again to confirm the track and move to the next program slot (e.g., "P02").
  d. Repeat steps b and c to add more tracks to your program.
  e. Once programming is complete, press the **EQ/►▮▮** button twice to start playing your programmed

list.

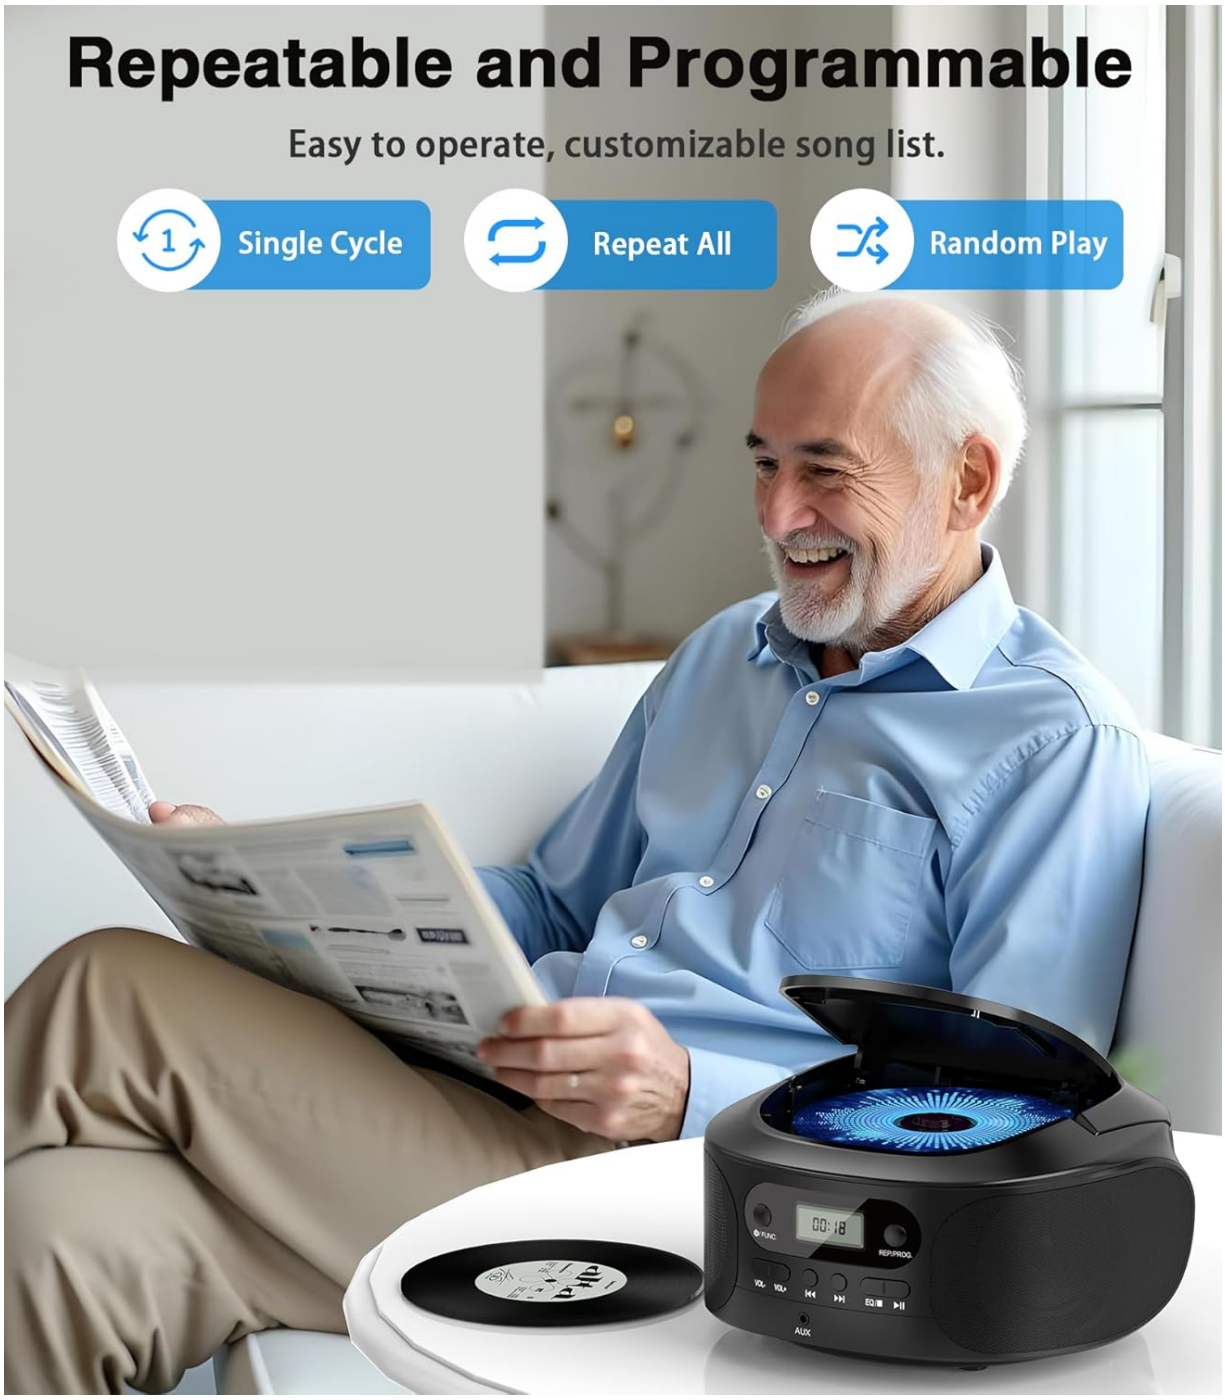

Image: The Greadio CD Boombox Player on a table next to an elderly man reading, highlighting its repeatable and programmable functions for a customizable song list.

Using AUX Input

The 3.5mm AUX input allows you to connect external audio devices:

1. Connect one end of the provided 3.5mm AUX cable to the AUX port on the boombox.
2. Connect the other end to the headphone jack or audio output of your external device (e.g., smartphone, MP3 player, computer).
3. Press the /**FUNC.** button to switch to AUX mode. The display may indicate "AUX".
4. Play audio from your external device. The sound will be amplified through the boombox speakers.

Image: The Greadio CD Boombox Player connected to a laptop via a 3.5mm AUX cable, demonstrating its ability to play music from multiple external devices like cell phones, tablets, computers, MP3 players, and TVs.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the boombox. Do not use abrasive cleaners or solvents.
- **CD Care:** Handle CDs by their edges. Keep them clean and free of scratches to ensure optimal playback.
- **Storage:** When not in use for extended periods, remove batteries and store the unit in a cool, dry place away from direct sunlight and extreme temperatures.
- **Ventilation:** Ensure the boombox has adequate ventilation during operation to prevent overheating.

Troubleshooting

Problem	Possible Cause	Solution
Unit does not power on.	No power connection or dead batteries.	Check Type-C cable connection and power adapter. Replace C-batteries if using battery power.
CD does not play or skips.	CD is dirty, scratched, or inserted incorrectly. Incompatible CD format.	Clean the CD with a soft cloth. Ensure the CD is placed correctly. Verify it's a CD/CD-R/CD-RW, not MP3.
No sound from speakers.	Volume is too low. AUX cable not fully inserted. Incorrect mode selected.	Increase volume. Ensure AUX cable is fully connected. Press /**FUNC.** to select correct mode (CD or AUX).
AUX input not working.	Boombox not in AUX mode. External device volume too low.	Press /**FUNC.** to switch to AUX mode. Increase volume on both boombox and external device.

Specifications

Feature	Detail
Model Number	GB-X9C
Product Dimensions	8.3 x 7.87 x 3.94 inches
Item Weight	1.67 pounds
CD Compatibility	CD/CD-R/CD-RW (Not compatible with MP3 format)
Speaker Type	Stereo
Connectivity Technology	Auxiliary
Power Supply	DC 5V/1A (Type-C) or 4 x C-size batteries (not included)

Warranty and Support

Greadio offers comprehensive support for your product:

- **Warranty:** 12-month warranty from the date of purchase.
- **Money Back Guarantee:** 30-day money back guarantee.
- **Customer Service:** 24/7 customer service available to assist with any inquiries or issues.
- For support, please refer to the contact information provided on the product packaging or the official Greadio website.

Product Overview Video

Watch this official product video for a visual guide on the Greadio CD Boombox Player's features and ease of use.

Your browser does not support the video tag.

Video: An overview of the Greadio CD Boombox Player (X9C), demonstrating its easy-to-use features, CD compatibility,

Related Documents - GB-X9C

	Greadio GR-090P Owner's Manual: Features, Operation, and Specifications Comprehensive guide to the Greadio GR-090P emergency weather radio, covering radio operation, SOS alarm, flashlight, reading lamp, motion sensor, charging methods (solar, hand crank, USB), battery protection, specifications, and warranty.
	GREADIO GR-919 Portable Vintage Radio Speaker User Manual Comprehensive user manual for the GREADIO GR-919 Portable Vintage Radio Speaker, covering FM radio, Bluetooth, TF card, AUX playback, charging, specifications, and safety instructions.
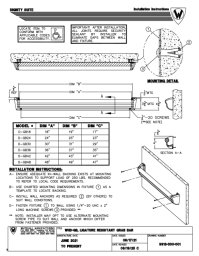	Whitehall Manufacturing WHD-GB Ligature Resistant Grab Bar Installation Guide Comprehensive installation instructions and specifications for the Whitehall Manufacturing WHD-GB ligature resistant grab bar, covering model dimensions, mounting details, and safety requirements.
	Palsonic PRC-241 Portable Radio Cassette Recorder with CD Player Instruction Manual Instruction manual for the Palsonic PRC-241 portable radio cassette recorder with CD player. Includes safety instructions, operation guides for CD, radio, and cassette, troubleshooting, and technical specifications.
	Vaillant uniSTOR HP VIH RW GB Installation and Maintenance Instructions Comprehensive installation and maintenance guide for the Vaillant uniSTOR HP VIH RW GB series hot water storage cylinders. Covers safety, setup, installation, start-up, troubleshooting, and technical specifications.
	ZIEHL-ABEGG Z-D-15/35/55E-.. Active Harmonic Filter Operating Instructions Comprehensive operating instructions for the ZIEHL-ABEGG Z-D-15/35/55E-.. series Active Harmonic Filters utilizing SiC technology, covering installation, safety, operation, and technical specifications.