Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Hama Fancy Stand 70 II (Model 00004670)

Hama Fancy Stand 70 II Tripod Selfie Stick User Manual

Model: Fancy Stand 70 II (00004670)

1. Introduction

The Hama Fancy Stand 70 II is a versatile 2-in-1 device designed to function as both a tripod and a selfie stick for smartphones. It features a telescopic pole, stable tripod legs, and a detachable Bluetooth remote control for convenient photo and video capture. This compact and lightweight accessory is ideal for various content creation needs, from personal selfies to group photos and stable video recording.



The compact design allows for easy portability in a bag.

2. Safety Instructions

- Do not expose the device to moisture, extreme temperatures, or direct sunlight.
- Avoid dropping the device or subjecting it to strong impacts.
- Do not attempt to disassemble or repair the device yourself. Refer all servicing to qualified personnel.
- Keep the device and its components out of reach of children.
- Ensure your smartphone is securely mounted in the holder before use to prevent damage.

3. Package Contents

Please check that all items are present:

- Hama Fancy Stand 70 II Tripod Selfie Stick
- Bluetooth Remote Control

4. Product Overview

Familiarize yourself with the main components of your Hama Fancy Stand 70 II.



The Hama Fancy Stand 70 II in its folded, compact state, with the wrist strap visible.



The detachable Bluetooth remote control for convenient photo capture.

5. Setup

5.1. Unfolding the Device

1. Gently pull the handle downwards to release the tripod legs.
2. Spread the three legs outwards until they are fully extended and stable.
3. Extend the telescopic pole upwards to your desired height.



The device fully extended, ready for use as a tripod.

5.2. Attaching Your Smartphone

1. Open the smartphone holder by pulling the top clamp upwards.
2. Carefully place your smartphone into the holder, ensuring it is centered and securely gripped by both clamps. The holder supports phones with a width between 6.2 cm and 9.0 cm.
3. Adjust the phone's orientation (horizontal or vertical) as needed.




A smartphone mounted horizontally in the holder.



A smartphone mounted vertically in the holder.

5.3. Pairing the Bluetooth Remote

1. Ensure the Bluetooth remote control has a working battery.
2. Turn on the remote control (usually by pressing and holding the button until an indicator light flashes).
3. On your smartphone, go to Bluetooth settings and enable Bluetooth.
4. Search for available devices. The remote should appear as "Hama Shutter" or similar.
5. Select the remote to pair. The indicator light on the remote will stop flashing or change color once paired.

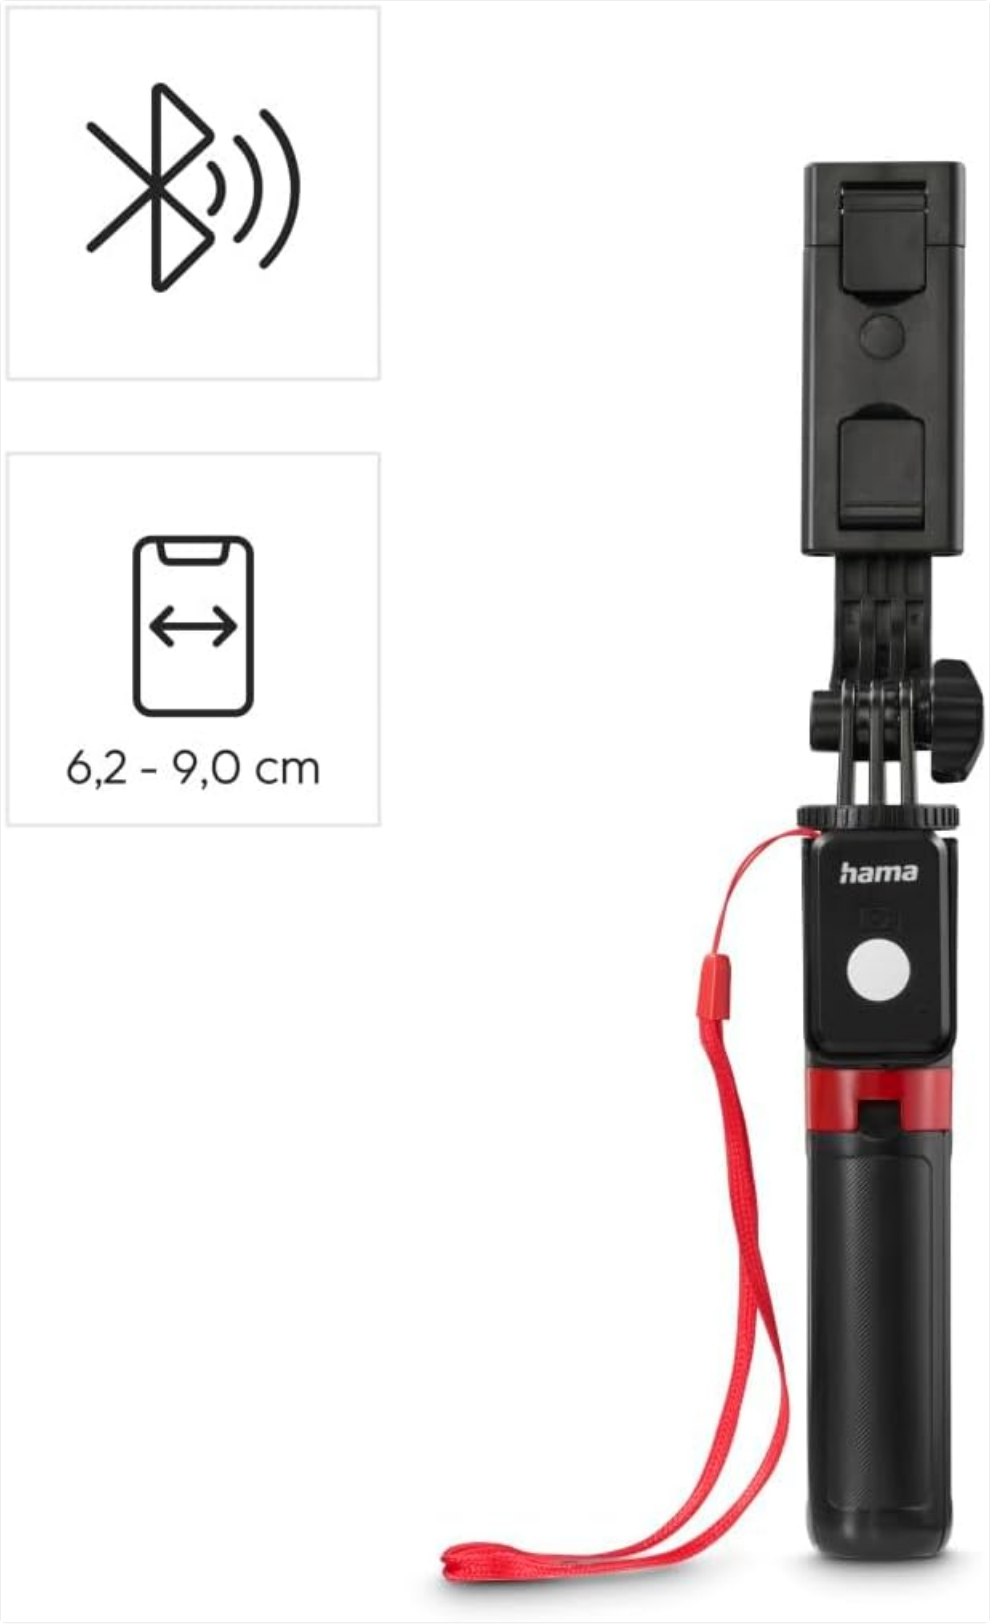

The device supports Bluetooth connectivity for remote control.

6. Operation

6.1. Using as a Selfie Stick

1. Ensure the tripod legs are folded into the handle.
2. Extend the telescopic pole to your desired length (up to 70 cm).
3. Hold the handle firmly and position your smartphone for the shot.
4. Press the button on the Bluetooth remote to capture photos or start/stop video recording.



Using the device as a selfie stick to capture moments.

6.2. Using as a Tripod

1. Extend the tripod legs fully and place the device on a flat, stable surface.
2. Adjust the telescopic pole to the desired height (from 23 cm to 70 cm).
3. Use the Bluetooth remote to take photos or record videos without touching your phone, minimizing camera shake.



The device set up as a tripod for group photos.

6.3. Adjusting Height and Angle

- **Height Adjustment:** Loosen the locking mechanism on the telescopic pole, extend or retract to the desired height (23 cm to 70 cm), and then secure the lock.
- **Angle Adjustment:** The phone holder can be tilted and rotated to achieve the optimal shooting angle. Ensure it is tightened sufficiently to hold the phone's position.



The device offers an adjustable height range from 23 cm to 70 cm.

7. Maintenance

- Clean the device with a soft, dry, lint-free cloth. Do not use abrasive cleaners or solvents.
- Store the device in a cool, dry place away from direct sunlight and moisture when not in use.
- If the Bluetooth remote is not used for an extended period, consider removing its battery to prevent leakage.

8. Troubleshooting

8.1. Bluetooth Remote Not Pairing

- Ensure the remote control has a charged battery.
- Make sure Bluetooth is enabled on your smartphone.
- Try turning the remote off and on again.
- If previously paired, try unpairing and re-pairing the remote in your phone's Bluetooth settings.

8.2. Device Unstable as a Tripod

- Ensure the tripod legs are fully spread and locked into position.
- Place the tripod on a flat, level, and stable surface.
- Ensure your smartphone is centered and securely held in the clamp.
- Avoid extending the telescopic pole to its maximum height in windy conditions or on uneven surfaces.

9. Specifications

Brand	Hama
Model Name	Fancy Stand 70 II
Model Number	00004670
Color	Black
Material	Aluminum
Maximum Height	70 Centimeters
Minimum Height	23 Centimeters
Compatible Devices	Smartphone
Special Features	Remote Control, Lightweight, Telescopic

10. Warranty and Support

For warranty information or technical support, please contact Hama customer service directly. Details can typically be found on the official Hama website or on the product packaging.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DQ1MYLZW

More documents and user manuals: **https://manuals.plus/**